

AC VSA S-BR

- PAIR OF SWIVEL BRACKETS
FOR VSA 2050, VSA 1250,
VSA 850
- COPPIA DI STAFFE
ORIENTABILI PER VSA 2050,
VSA 1250, VSA 850



IMPORTANT: THIS TEXT IS AN ADDENDUM TO THE RCF VSA 2050 \ VSA 1250 \ VSA 850 USER MANUAL, WHICH IS TO BE READ AS IT IS THE REFERENCE ABOUT SAFETY NOTES AND CONNECTIONS.




DESCRIPTION



Each kit includes a pair of swivel brackets for wall mounting of a single RCF VSA 2050 \ VSA 1250 \ VSA 850 'Digitally steerable array loudspeaker system' with a horizontal angle pointing (up to 60°).

SWIVEL BRACKET

- 1 Two mounting points for the VSA loudspeaker rear side.
- 2 Three holes for wall mounting through M5 wall plugs.
- 3 Two bolts and nuts (used as pins) can be tightened to fix the VSA loudspeaker when the horizontal angle pointing is correct.
- 4 Two holes to secure the VSA loudspeaker to the swivel bracket through two screws (M5x10).

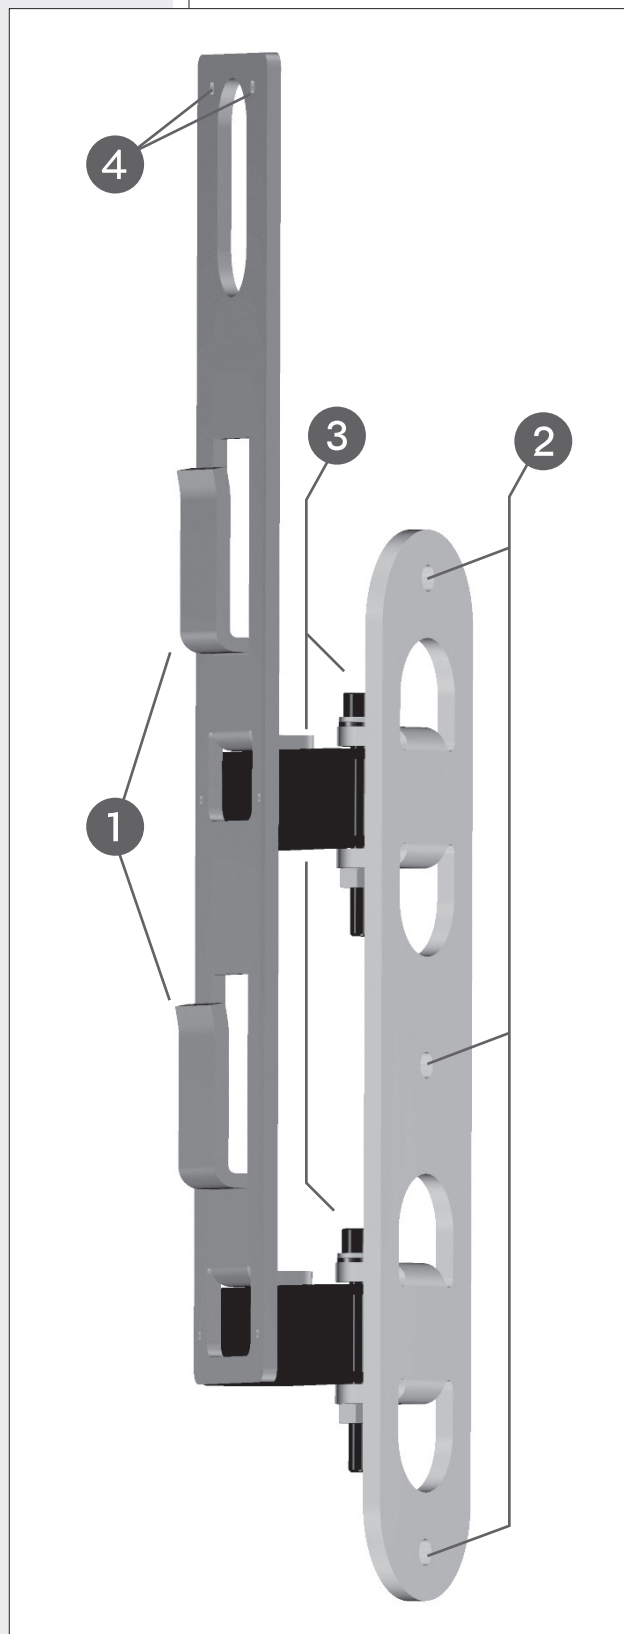




Loudspeakers are to be installed by qualified personnel, respecting all safety standards. Loudspeakers are to be installed securely. Make sure the support structure (walls / ceilings) has the necessary mechanical characteristics for the loudspeaker weight, without the risk of a fall that could damage things or cause an injury. Use attachment elements suitable for walls / ceilings (e.g. wall plugs for bricks, for concrete, etc.).

Minimum installation height: the loudspeaker bottom shall be at least 1 m from the floor (suggested height: from 1.5 to 3 m).

THE VSA LOUDSPEAKER WOOD PACKAGE LID CAN ALSO BE USED AS DRILLING TEMPLATE (SEE PICTURE 1: THE SIX ARROWS INDICATE THE SIX HOLES TO BE DRILLED FOR THE BRACKETS OF THE AC VSA S-BR KIT) !

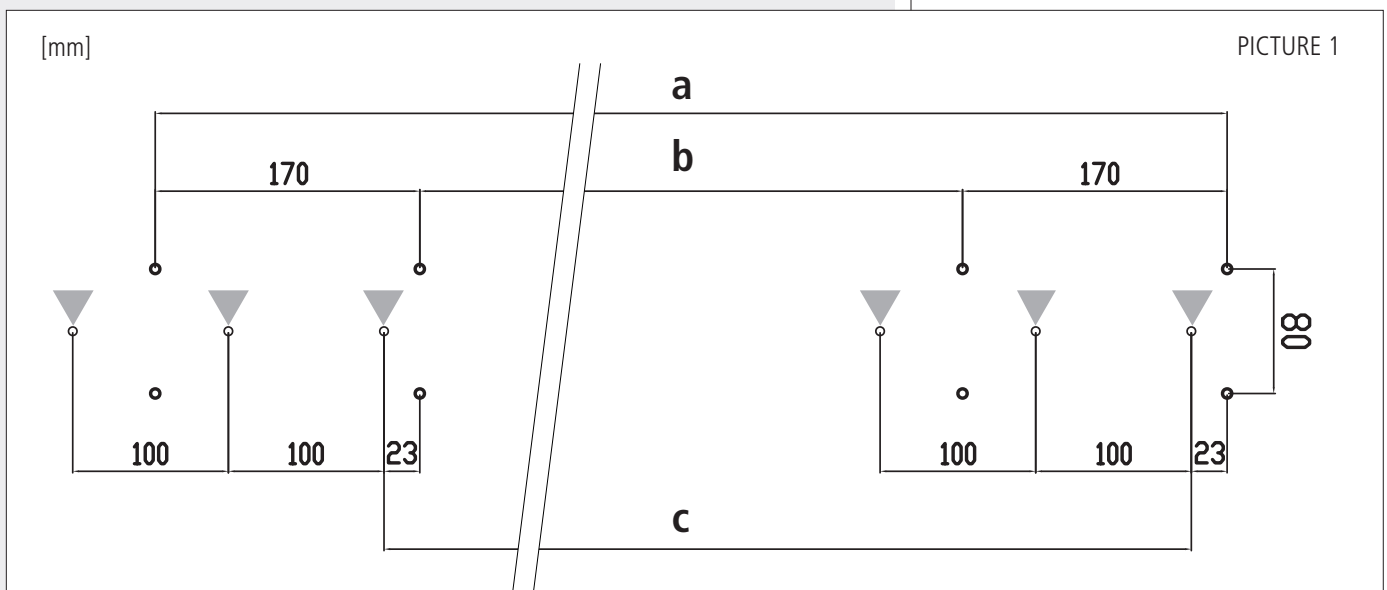


a: 1910 (VSA 2050), 1202 (VSA 1250), 848 (VSA 850)


b: 1570 (VSA 2050), 862 (VSA 1250), 508 (VSA 850)

c: 1740 (VSA 2050), 1032 (VSA 1250), 678 (VSA 850)



Fix the rear part of each bracket to the wall through three suitable wall plugs having 5 mm screws (passing through the three holes, as shown in picture 2).

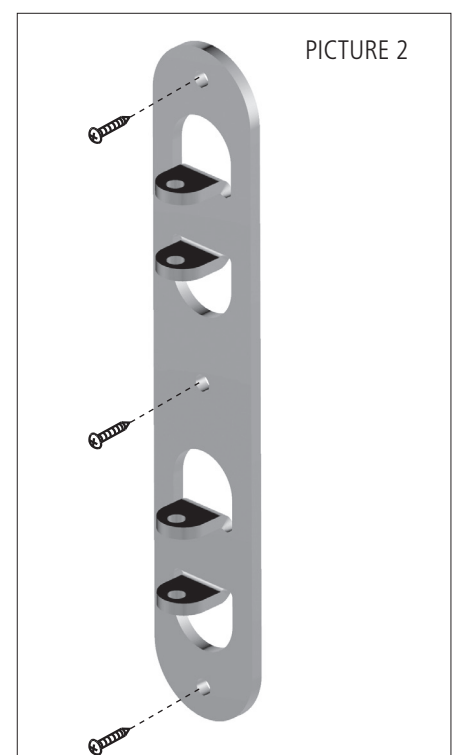


Choose the direction to which the VSA loudspeaker may be pointed, then (for each bracket) insert (without tightening completely) the two bolts with nuts (acting as pivots that join the two parts) into one of the two holes of the bracket front part (as shown in picture 3).

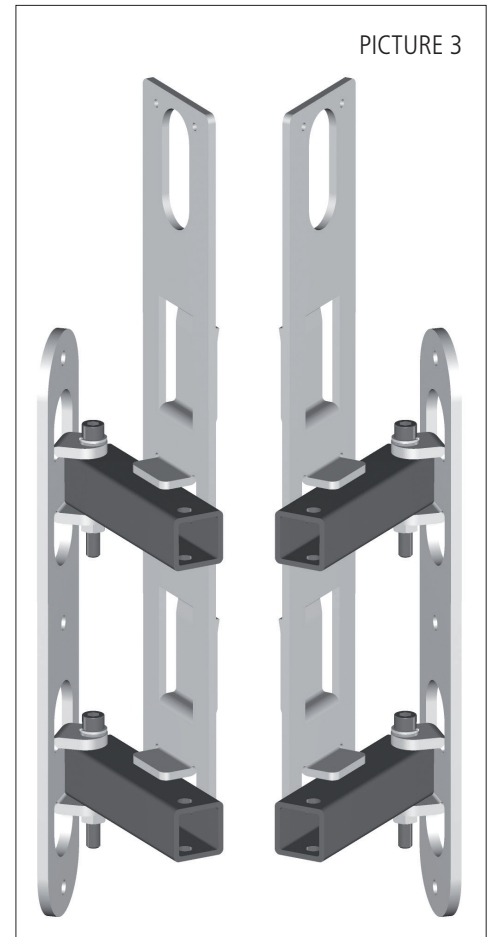

As soon as the two brackets (upper and lower, necessary for a single VSA loudspeaker) are fixed to the wall, put the VSA loudspeaker on their mounting points as shown in pictures 4a and 4b. Then, tighten the two securing screws (M5x10) through the VSA loudspeaker and the upper bracket (picture 4a).

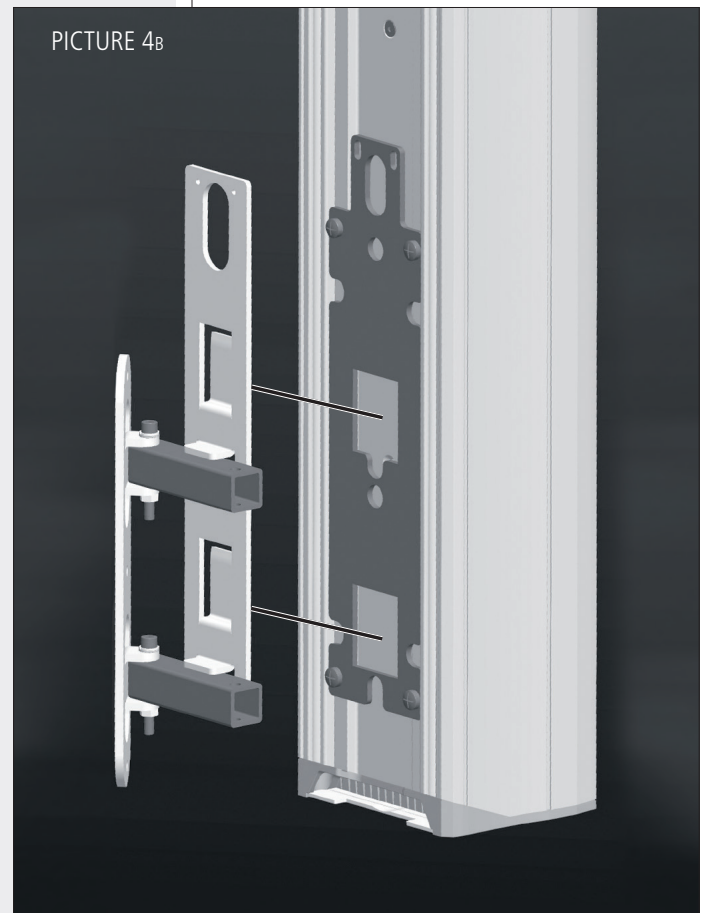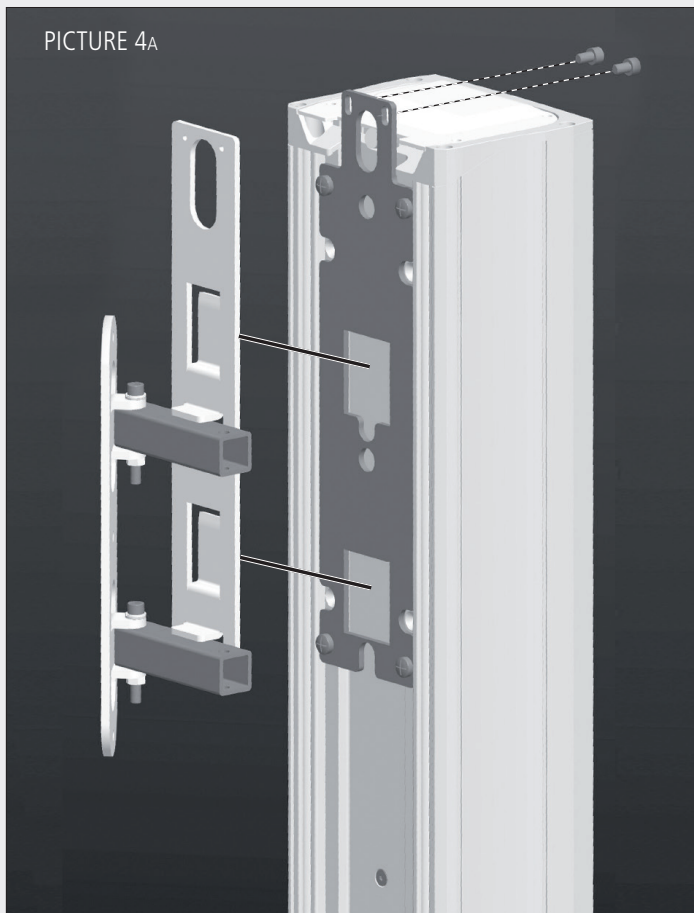

It is possible to turn the VSA loudspeaker horizontally (max. angle: 60°) to the direction previously chosen when inserting the two bolts with nuts (picture 3). After pointing the VSA loudspeaker with a proper angle, tighten the two bolts to secure it.

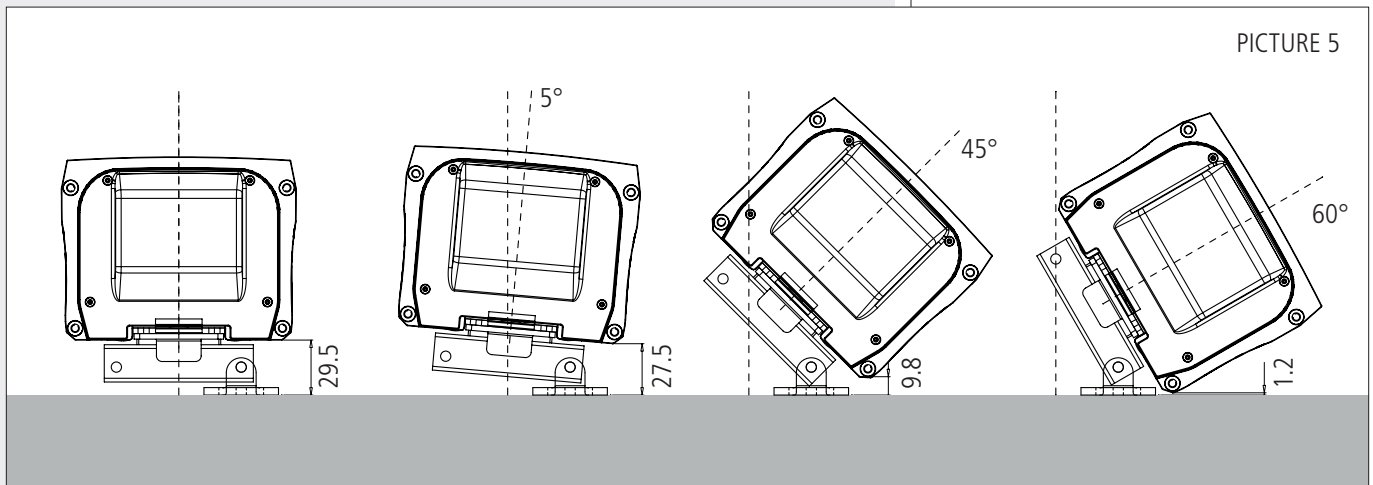

A DEDICATED ACOUSTIC PROJECT / STUDY IS TO BE CARRIED OUT TO FIND THE PROPER ANGLE.

Connect every VSA loudspeaker as described in its respective user manual.



IMPORTANTE: IL PRESENTE MANUALE SI AGGIUNGE A QUELLO DEI DIFFUSORI RCF VSA 2050 \ VSA 1250 \ VSA 850 , IL QUALE È DA LEGGERE IN QUANTO FUNGE DA RIFERIMENTO PER LE NOTE DI SICUREZZA ED IL COLLEGAMENTO.




DESCRIZIONE



Ciascun kit include una coppia di staffe orientabili per l'installazione a parete di un solo diffusore "array" digitale VSA con un angolo orizzontale fino a 60°.

STAFFA ORIENTABILE

- 1 Due punti di aggancio per il retro del diffusore VSA.
- 2 Tre fori per l'installazione a parete tramite tasselli M5.
- 3 Due bulloni e dadi (perni dello snodo) da stringere per il fissaggio del diffusore VSA quando l'angolo orizzontale di puntamento è corretto.
- 4 Due fori per il fissaggio di sicurezza del diffusore VSA alla staffa tramite due viti (M5x10).

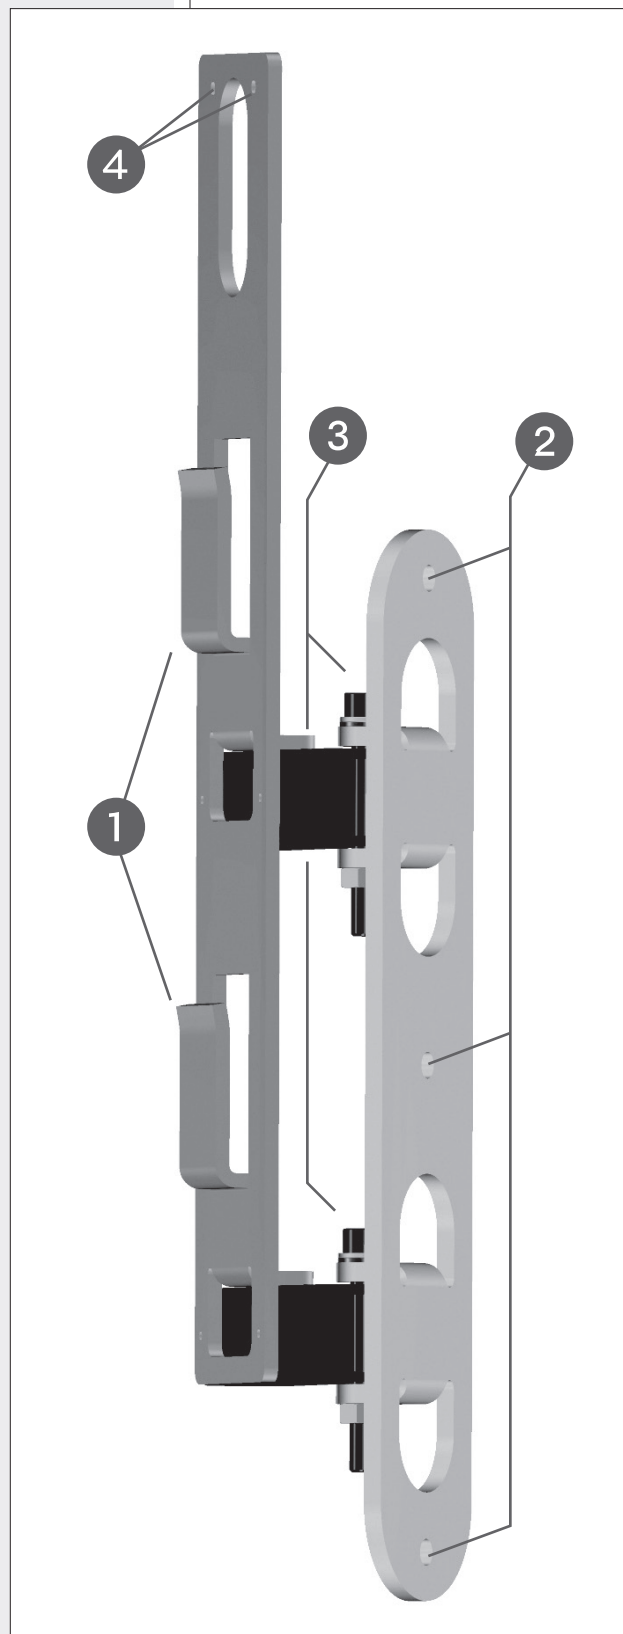




L'installazione dei diffusori deve essere effettuata da personale qualificato rispettando gli standard di sicurezza. Eseguire un'installazione sicura di ogni diffusore, controllando che la struttura di supporto (es. parete, soffitto, ecc.) abbia le necessarie caratteristiche meccaniche, tali da consentirle di sopportarne il peso senza il pericolo di cadute che potrebbero compromettere l'incolumità di persone e/o danneggiare cose. Utilizzare elementi di fissaggio adatti al tipo di struttura che deve sostenere i diffusori (es. tasselli per mattoni forati, tasselli per calcestruzzo, ecc.).

Altezza minima dell'installazione: la base del diffusore deve essere posta ad almeno 1 m dal pavimento (altezza consigliata: da 1,5 a 3 m).

IL COPERCHIO DELLA SCATOLA D'IMBALLO (IN LEGNO) DEL DIFFUSORE VSA SERVE ANCHE COME DIMA DI FORATURA DEL MURO (VEDERE LA FIGURA 1: LE SEI FRECCE INDICANO I FORI DA PRATICARE PER LE STAFFE DEL KIT AC VSA S-BR) !

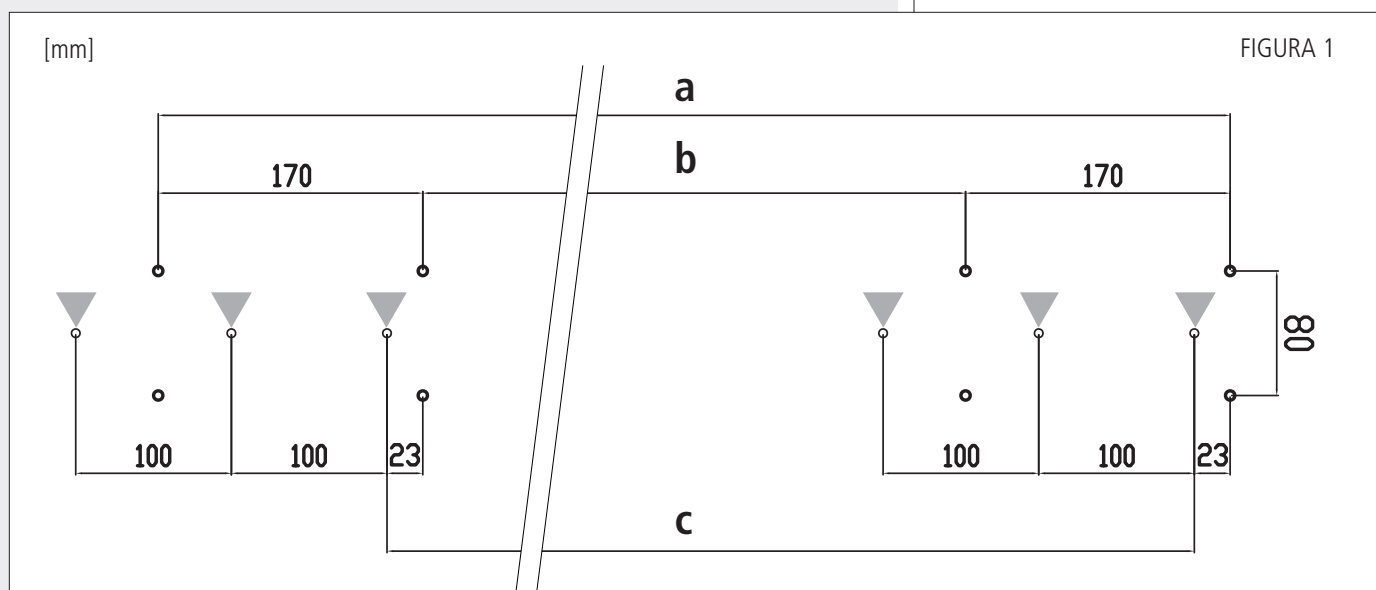


a: 1910 (VSA 2050), 1202 (VSA 1250), 848 (VSA 850)


b: 1570 (VSA 2050), 862 (VSA 1250), 508 (VSA 850)

c: 1740 (VSA 2050), 1032 (VSA 1250), 678 (VSA 850)



Fissare la parte posteriore di ciascuna staffa alla parete tramite tre tasselli appropriati per viti con diametro 5 mm (passanti per i tre fori, come mostrato in figura 2).

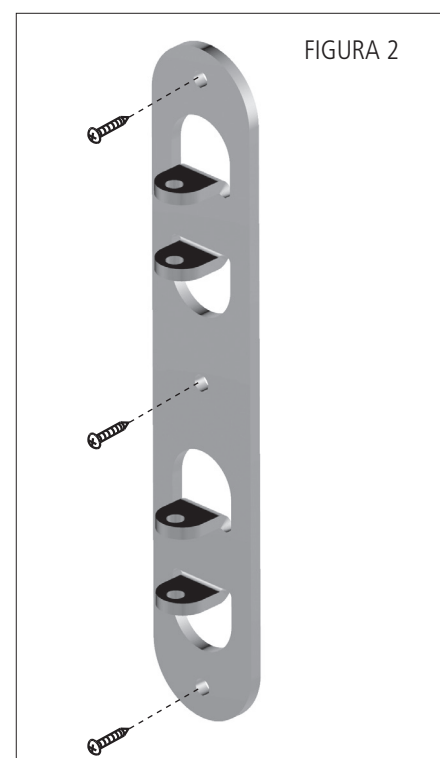


Scegliere la direzione verso la quale il diffusore VSA potrebbe essere orientato, quindi (per ciascuna staffa) inserire (senza stringere completamente) i due bulloni coi dadi, che fungono da perni di rotazione per unire le due parti, in uno dei due fori della parte anteriore della staffa (come mostrato in figura 3).

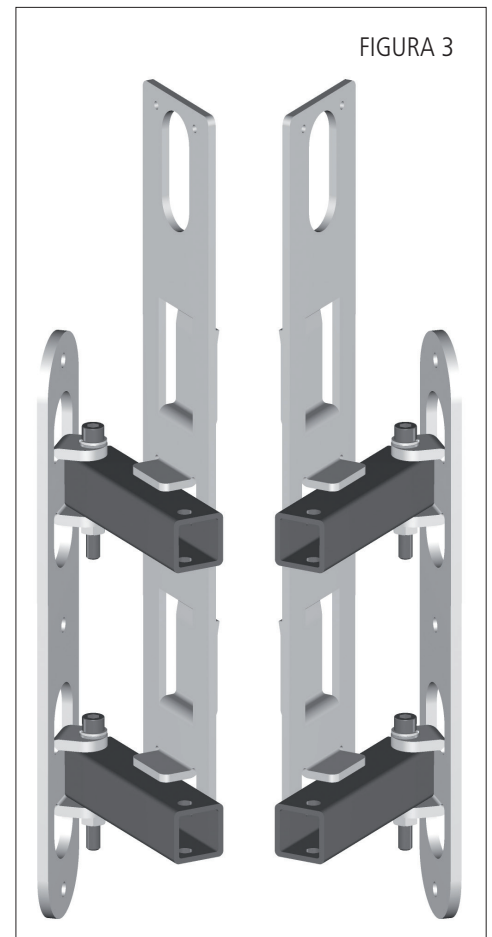

Non appena le due staffe (una superiore ed una inferiore, necessarie per un solo diffusore VSA) sono state fissate alla parete, montare il diffusore VSA sui loro ganci come mostrato nelle figure 4a e 4b; in seguito, avvitare le due viti di sicurezza (M5x10) tra il diffusore VSA e la staffa superiore (figura 4a).

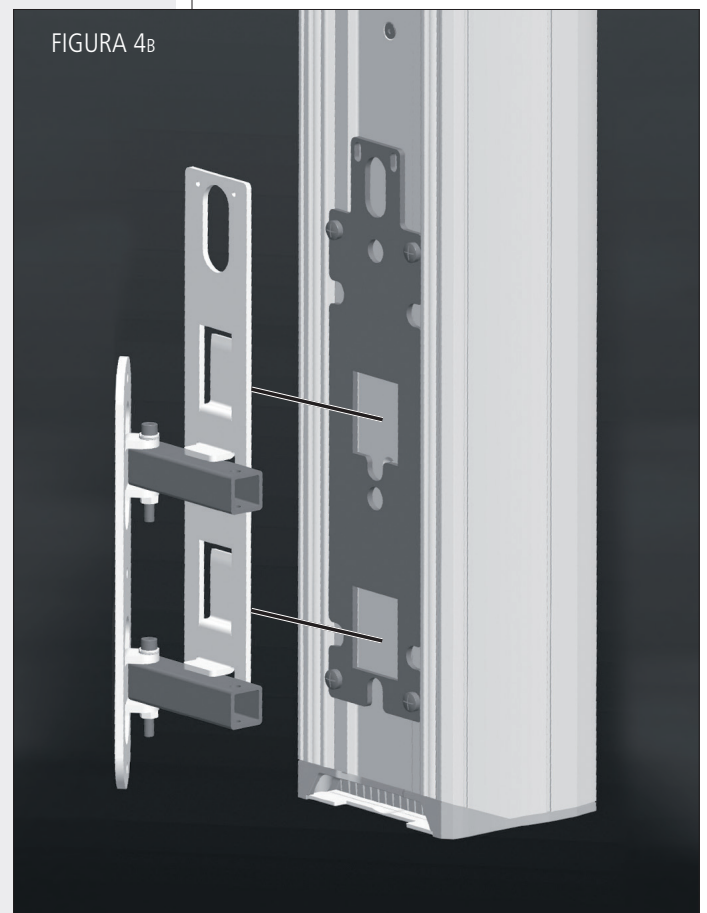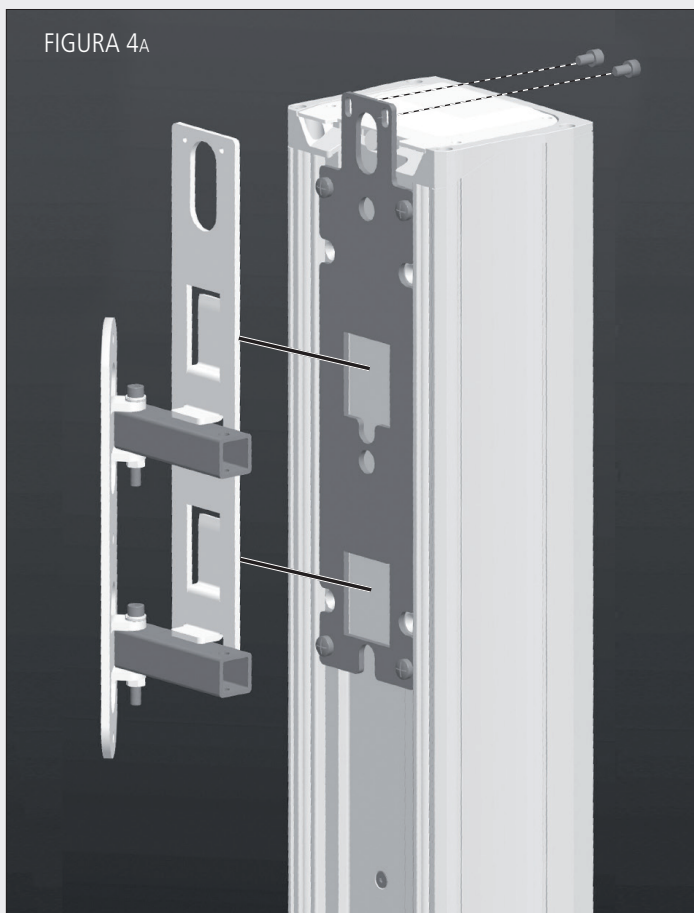

È possibile orientare orizzontalmente il diffusore VSA (con un angolo fino a 60°) nella direzione scelta tramite il precedente inserimento dei bulloni coi dadi (figura 3). Dopo aver puntato correttamente il diffusore VSA, stringere i bulloni per fissarlo definitivamente.

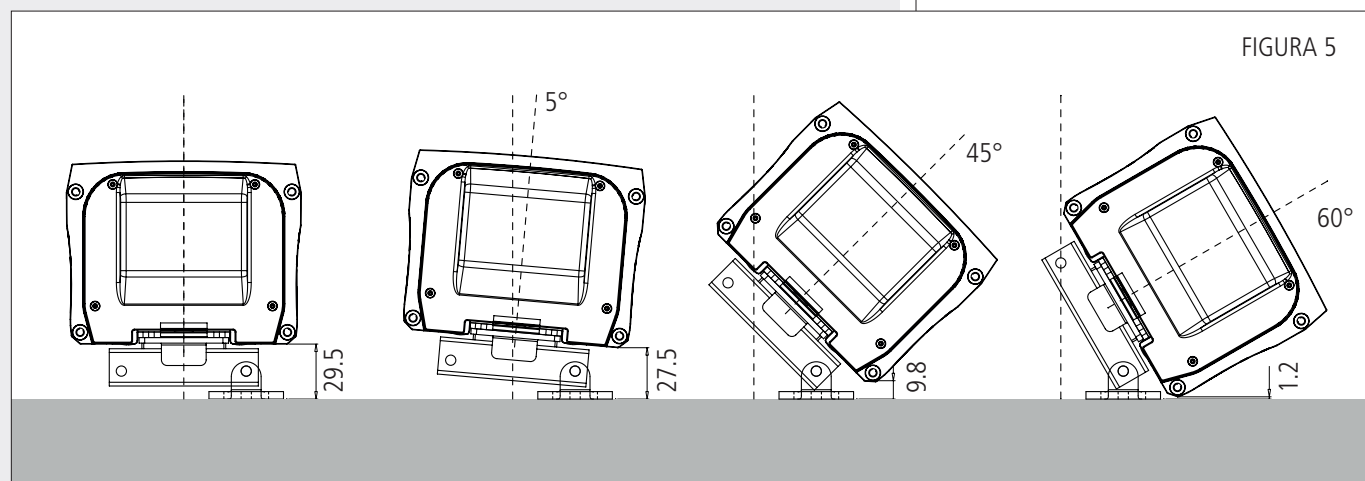

LA SCELTA DELL'ANGOLO PIÙ OPPORTUNO NECESSITA DI UNO STUDIO ACUSTICO DEDICATO.

Effettuare il collegamento del diffusore VSA come descritto sul rispettivo manuale d'uso.



Except possible errors and omissions.
RCF S.p.A. reserves the right to make modifications without prior notice.

Salvo eventuali errori ed omissioni.
RCF S.p.A. si riserva il diritto di apportare modifiche senza preavviso.

HEADQUARTERS:

RCF S.p.A. Italy
tel. +39 0522 274 411
e-mail: info@rcf.it

RCF UK
tel. 0844 745 1234
Int. +44 870 626 3142
e-mail: info@rcfaudio.co.uk

RCF France
tel. +33 1 49 01 02 31
e-mail: france@rcf.it

RCF Germany
tel. +49 2203 925370
e-mail: germany@rcf.it

RCF Spain
tel. +34 91 817 42 66
e-mail: info@rcfaudio.es

RCF Belgium
tel. +32 (0) 3 - 3268104
e-mail: belgium@rcf.it

RCF USA Inc.
tel. +1 (603) 926-4604
e-mail: info@rcf-usa.com



www.rcfaudio.com