



Multi-Studio IP Phone Interface System



## USER'S MANUAL

Version 2.0, August, 2012

## **Telos VX Manual**

© 2011-2012 TLS Corporation. Published by Telos Systems/TLS Corporation. All rights reserved.

### **Trademarks**

*Telos Systems*, the Telos logo and VX are trademarks of TLS Corporation. All other trademarks are the property of their respective holders.

### **Notice**

All versions, claims of compatibility, trademarks, etc. of hardware and software products not made by Telos mentioned in this manual or accompanying material are informational only. Telos Systems makes no endorsement of any particular product for any purpose, nor claims any responsibility for operation or accuracy. We reserve the right to make improvements or changes in the products described in this manual which may affect the product specifications, or to revise the manual without notice.

### **Warranty**

This product is covered by a two year limited warranty, the full text of which is included in this manual.

### **Updates**

The operation of the VX is determined largely by software. We routinely release new versions to add features and fix bugs. Check the Telos web site for the latest. We encourage you to sign-up for the email notification service offered on the site.

### **Feedback**

We welcome feedback on any aspect of the Telos VX, or this manual. In the past, many good ideas from users have made their way into software revisions or new products. Please contact us with your comments.

### **Service**

You must contact Telos before returning any equipment for factory service. We will need the serial number, located on the back of the unit. Telos Systems will issue a Return Authorization number which must be written on the exterior of your shipping container. Please do not include cables or accessories unless specifically requested by the technical support engineer at Telos. Be sure to adequately insure your shipment for its replacement value. Packages without proper authorization may be refused. US customers please contact Telos technical support at +1-216-622-0247. All other customers should contact your local representative to make arrangements for service.

## **We support you...**

### **By Phone / Fax:**

You may reach our 24/7 Support Team anytime around the clock by calling +1-216-622-0247.

For billing questions or other non-emergency technical questions, call +1-216-241-7225 between 9:30 AM to 6:00 PM USA Eastern Time, Monday through Friday.

Our fax is +1-216-241-4103.

### **By E-Mail:**

Technical support is available at [Support@Telos-Systems.com](mailto:Support@Telos-Systems.com).

All other inquiries at [Inquiry@Telos-Systems.com](mailto:Inquiry@Telos-Systems.com).

### **Via World Wide Web:**

The Telos Web site has a variety of information which may be useful for product selection and support.

**The URL is [www.Telos-Systems.com](http://www.Telos-Systems.com)**

10 9 8 7 6 5 4 3 2

## **Telos Systems USA**

Telos Systems

1241 Superior Avenue E

Cleveland, OH 44114 USA

+1-216-241-7225 (phone)

+1-216-241-4103 (fax)

+1-216-622-0247 (24/7 Technical Support)

Support@Telos-Systems.com

Inquiry@Telos-Systems.com

### **Notices and Cautions**



This symbol, wherever it appears, alerts you to the presence of uninsulated, dangerous voltage inside the enclosure – voltage which may be sufficient to constitute a risk of shock.



This symbol, wherever it appears, alerts you to important operating and maintenance instructions. Read the manual.

#### **CAUTION:**

THE INSTALLATION AND SERVICE INSTRUCTIONS IN THIS MANUAL ARE FOR USE BY QUALIFIED PERSONNEL ONLY. TO AVOID ELECTRIC SHOCK, DO NOT PERFORM ANY SERVICING OTHER THAN THAT CONTAINED IN THE OPERATING INSTRUCTIONS UNLESS YOU ARE QUALIFIED TO DO SO. REFER ALL SERVICING TO QUALIFIED PERSONNEL.

#### **WARNING:**

TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

#### **USA CLASS A COMPUTING DEVICE INFORMATION TO USER. WARNING:**

This equipment generates, uses, and can radiate radio-frequency energy. If it is not installed and used as directed by this manual, it may cause interference to radio communication. This equipment complies with the limits for a Class A computing device, as specified by FCC Rules, Part 15, Subpart J, which are designed to provide reasonable protection against such interference when this type of equipment is operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference. If it does, the user will be required to eliminate the interference at the user's expense. NOTE: Objectionable interference to TV or radio reception can occur if other devices are connected to this device without the use of shielded interconnect cables. FCC rules require the use of shielded cables.

#### **CANADA WARNING:**

"This digital apparatus does not exceed the Class A limits for radio noise emissions set out in the Radio Interference Regulations of the Canadian Department of Communications." "Le present appareil numerique n'emet pas de bruits radioelectriques depassant les limites applicables aux appareils numeriques (de Class A) prescrites dans le reglement sur le brouillage radioelectrique edicte par le ministere des Communications du Canada."

# Table of Contents

	We support you...	i
<hr/>		
<b>1</b>	<i>Welcome</i>	<i>1</i>
	Note from Steve . . . . .	1
	What’s the Big idea? . . . . .	2
	The VX Engine. . . . .	3
	The VSet Phone Controller . . . . .	4
	VX Producer Windows Software Application . . . . .	4
	Console Controllers . . . . .	5
	3rd-Party Producer Applications . . . . .	5
	The Acoustic Echo Canceller. . . . .	5
<hr/>		
<b>2</b>	<i>Installation and Configuration</i>	<i>7</i>
	Connecting to PSTN Lines: Gateways & PBXs . . . . .	7
	Using VoIP to Connect to the Telco Network . . . . .	8
	What’s a ‘Line’? . . . . .	8
	Livewire for audio I/O . . . . .	9
	Step-by-step . . . . .	9
	The Engine Network . . . . .	9
	The front panel OLED/knob interface . . . . .	9
	Network Connections . . . . .	10
	More on the Network . . . . .	10
	VSet Installation. . . . .	11
	System Configuration . . . . .	12
	Selectable and Fixed Lines . . . . .	12
	Studios and Shows . . . . .	12
	Configuration Web Pages. . . . .	13
	Home Page . . . . .	13
	Main page - General Configuration . . . . .	14

Default Username, Password, and IP settings . . . . . 15

SIP Configuration . . . . . 16

Regarding The VX and SIP . . . . . 16

Server Configuration. . . . . 18

SIP and Network Address Translation (NAT). . . . . 19

Overall Studio Configuration Page. . . . . 19

Individual Studio Configuration Pages(Part1). . . . . 20

Individual Studio Configuration Pages (Part 2) . . . . . 21

GPIO . . . . . 22

Overall Show Configuration. . . . . 23

Individual Show Configuration Pages . . . . . 23

VX in the News and Production rooms . . . . . 24

Using the VX to replace ‘Couplers’ . . . . . 24

Call Audio Processing page - Audio Processing and metering. . . . . 25

Assigning sounds & Tones – The Tones page . . . . . 26

SIP and DTMF . . . . . 28

Logging . . . . . 29

Firmware updates . . . . . 31

Backing up and restoring Engine configuration . . . . . 31

Backing/restore configuration settings. . . . . 32

VSet Phone Configuration . . . . . 32

---

**3**    *Operation* . . . . . 33

    VSet Operation . . . . . 33

    Select Studio and Show . . . . . 33

    Set Talent or Producer Mode . . . . . 34

    The Line Info Display. . . . . 34

    Next indicator. . . . . 34

    Fader number. . . . . 34

    Line name . . . . . 34

    Caller ID . . . . . 34

    Time . . . . . 35

    Action ‘hint’. . . . . 35

Line Status Icons . . . . . 35

Line Button Columns. . . . . 36

Hold Button. . . . . 36

Drop button. . . . . 37

Lock . . . . . 37

Next Button and Function . . . . . 37

Block All . . . . . 37

Numeric Keypad. . . . . 38

Re-dial Function . . . . . 38

Fader Assign . . . . . 38

Firmware Upgrades . . . . . 38

Take it Easy . . . . . 39

Operation with the Element Console. . . . . 39

---

**4** *The VX Producer Application* . . . . . 41

    Introduction . . . . . 41

    Installation . . . . . 41

    Set-up: Studio and Show . . . . . 43

    Managing Calls . . . . . 43

    Handset . . . . . 43

    On-air . . . . . 44

    The Line Info Field . . . . . 44

    Drop, Hold, and Hold Ready Buttons. . . . . 44

    Selectable Lines. . . . . 45

    Lock/Unlock Button and Function . . . . . 45

    Fader Assign Buttons . . . . . 45

    Next Button and Function . . . . . 46

    Block All . . . . . 46

    Fixed Lines . . . . . 46

    Recording, Editing, and Playing Calls . . . . . 46

    Playing . . . . . 47

Editing . . . . .	47
Files . . . . .	47
Host/Producer Text Chatting . . . . .	48

---

<b>5</b>	<i>Notes, Resources, Additional Information</i>	49
	The Acoustic Echo Canceller . . . . .	49
	Telco Services and Interfaces . . . . .	51
	VoIP: SIP Trunking . . . . .	51
	IP Centrex and Hosted PBX Services . . . . .	52
	Number portability in the US and Canada . . . . .	52
	Circuit-Switched Interfaces . . . . .	52
	FXS/FXO . . . . .	52
	E&M Trunks . . . . .	53
	T1/E1 . . . . .	53
	ISDN PRI . . . . .	53
	ISDN BRI . . . . .	54
	SIP Compatibility . . . . .	54
	Axia Element Console as VX Controller . . . . .	54
	Installation . . . . .	55
	Configuring the Element to Control the VX . . . . .	56
	What's next? . . . . .	60
	Beyond Edison's Legacy . . . . .	61
	Specifications . . . . .	62
	System . . . . .	62
	Audio Performance . . . . .	62
	Controllers . . . . .	63
	VX Engine . . . . .	63
	IP/Ethernet Connections . . . . .	63
	Processing Functions. . . . .	63
	Studio Audio Connections . . . . .	64
	Telco Connections . . . . .	64
	Resources. . . . .	64

Internet Speed tests . . . . .	64
Internet VOIP Jitter Test . . . . .	64
Packet “sniffer” . . . . .	65
VoIP Soft phone” SIP PC clients . . . . .	65
Open Source PBX Distributions . . . . .	65
Commercial PBX Products . . . . .	65
Gateway products and suppliers . . . . .	65
VoIP/SIP equipment suppliers . . . . .	65
Telephony Discussion and VoIP news sites . . . . .	66
SIP Information and suggested reading . . . . .	66
Books . . . . .	66
SIP Providers . . . . .	67
Local Number Portability in the USA and Canada . . . . .	68
Introduction to SIP’s insides for the Curious. . . . .	68
The Parts of a SIP System. . . . .	69
Addressing . . . . .	71
How SIP Works . . . . .	72
The State of SIP, and its Future . . . . .	74
IAX as a SIP Alternative. . . . .	74
Using VX with the Asterisk PBX . . . . .	74
Asterisk software: Distributions . . . . .	75
Hardware. . . . .	76
Expansion Cards. . . . .	77
1 Get your ‘distro’ . . . . .	78
2 Get loaded: Install Asterisk . . . . .	78
Log in to the Console for the first time . . . . .	80
3 Configure Asterisk. . . . .	82
Trunks . . . . .	86
Outbound Calls . . . . .	89
Connect your VX to Asterisk. . . . .	89



Make a test call on your VSet . . . . . 90

VX Tech Cheat sheet – Default IP numbers, passwords, etc. . . . . 90

Default Passwords . . . . . 90

Default IP Addresses . . . . . 91

SIP Parameters . . . . . 91

TCP/IP Ports and protocols used by the VX System. . . . . 91

VSet telephone . . . . . 91

Default username and password . . . . . 91

TCP/IP Ports and protocols used by the VSet Telephone . . . . . 91

Power Over Ethernet (PoE) . . . . . 91

VX FAQ . . . . . 92

Application Example - WKSU . . . . . 97



# 1 Welcome

## Note from Steve

133 years ago this past summer, a tinkerer from Ohio scratched a kid's rhyme into tin foil wrapped around a cylinder. Despite the less than hit-grade content, the warbly tone, and the lack of bass response, Tom Edison's demonstrations astounded guests and founded the audio entertainment industry. Only a year before, a gentleman aptly named Bell had been the first boss to interrupt an employee with a telephone call, birthing speech communication by wire. Until the 1980s, sound reproducers continued to work pretty much the way Edison's did, and telephones the way Al Bell's did; wiggly Grooves for the former and wiggly electrical currents for the latter. Why did these technologies remain in stasis for over a century, before eventually entering a wildly innovative phase only a couple of decades ago? The answer is to be found in Moore's law, which predicted a half-century ago that silicon processing power would double every year. Modified to 18 months, it has been on course since, and is expected to continue to for at least a few decades into the future. Think of all the ways this has touched both your professional and work lives. Digital audio workstations, automation systems, and mobile phones are all beneficiaries of this remarkable progress. The Internet, too, since processing chips are at the heart of network routers, switches, servers, PCs and smartphones. (Notwithstanding The Great Moore's Law Compensator in desktop PCs, which suggests that bloat in PC applications has taken much of what Moore's Law has given. Fortunately, we can avoid this in our "embedded" designs.) So why are we still mostly using telephone technology scarcely different from Bell's ancient prototypes. A nodding acquaintance with history shows this often to be the case. A technology is good enough – and good enough suffices. Traditions grow roots, and the incremental improvement offered by an innovation is not sufficiently enticing to displace people from their comfort zones.

But eventually, the capability of a new technology – or constellation of technologies – reaches beyond incremental, enabling a fundamental re-thinking of possibilities. Then POW!, that's when the world changes. That is just what is happening now.

Robert Lucky of Bell Labs observed a couple of decades ago that this ever-increasing power of digital processing was going to affect communication more than computation – and that there was a much stronger driver for change in the former. The Internet and smartphones have proven him resoundingly correct.

Such is the situation exactly now with regard to on-air phones. We now have the tools to achieve what was only imagination until recently. As you might know, I've been doing this stuff for a long time, so it is particularly satisfying to see it all coming together.

With the VX, we've wedded the capability of modern networking to the remarkable power of today's digital processing to bring the benefits of the resulting synergy to broadcast facilities.

As you discover what the VX can do, I trust you will appreciate how it can enhance the appeal of your listener interaction segments. It does everything older systems did smoother, easier, better, and at lower cost. But it also paves the way for a richer, more natural connection with your listeners as the IP platform becomes the basis for tomorrow's creative applications. It will be interesting to see what comes next.

Warm regards,

Steve Church, Founder, April, 2011



## What's the Big idea?

Is it not a bit strange that many computer-laden, all-digital broadcast studios connect to the PSTN (Public Switched Telephone Network) using technology invented in the day of phones with hand-cranked and bulbous “ringers”? Where else in pro audio do we mix two audio directions on a connection, forcing us to imperfectly pry the two apart in our interface gear? Where else do we use blasts of 100 AC Volts for signaling? This becomes even stranger when you consider that the core of the telephone network is also digital, with sophisticated internal signaling systems and independent audio paths. Surely we can do better than this ancient bell-banging and analog audio mash-up stuff in our contemporary telephone interfaces.

That was the idea of ISDN, and it was a good one, as far as it went. The telephone network had begun to transition to digital in the 1960s and by the 80s, the conversion of the switching and internal transmission was nearly 100% complete in many countries. The idea of domestic data communication was just getting underway. Remember bulletin-boards and 1200 Baud modems? The inventors of ISDN reasoned that if they could pass the full 64kbps rate of the network to users, they'd be thrilled with the amazing speed! And, with two channels, you could simultaneously talk and look up recipes. *YouTube* had apparently not entered their imagination.

In the modern networked world, The Telos VX gets with the program. It is the next generation multi-studio phone system from Telos, providing a powerful, simple, and cost-effective way to share phone lines across a number of studios using standard IP technology. It offers a number of advanced features to enhance production of talk shows and active DJ use of phones.

For years, you have been asking for an uncomplicated way to share phone lines around a facility to multiple studios. And we are always hearing that you need a way to better integrate the studio system with your office phone PBX. Finally, the VoIP-based Telos VX lets us do this.

We're the studio phones company. We're also the IP-Audio company. With the introduction of the Telos VX, we are marrying the two, creating an exciting new approach to broadcast studio phones.

The Telos VX is a scalable system that provides a solution for stations with modest needs, while being able to grow to support facilities that have large numbers of Telco lines and studios.


The standards-based SIP/IP interface makes all the things we've wanted to do possible. Passing calls between your office PBX and on-air system is easily accomplished. Sharing Telco service to both the business offices and studios? Sharing lines among studios?

Check, and check. A pure digital connection to the Telco keeps audio clean and maintains isolated send and receive signal paths. In studios with an AoIP audio infrastructure, an IP-based telephone system is icing on the cake. Dozens of inputs and outputs are connected with a single RJ-45. And you profit in other ways:

- ◆ A single on-air phone system server can supply all the studios in your facility with rich telephone capability.
- ◆ A common wiring and Ethernet switch infrastructure serves both your studio audio and telecom needs.

- ◆ On-air VSet controllers have rich capability owing to their connection over IP.
- ◆ Screening software running on PCs connect over the same network, and can include integrated softphones, thus smoothing operations and saving the money that would otherwise have to be spent on hardware phones.
- ◆ Mixing console control surfaces can incorporate phone system controllers that need no additional connection; their signaling just rides on the network connection already there. Rich status information can be displayed either on the phone control module or the console's main screen.
- ◆ Recording and playback of DJ + telephone conversations are simplified. PC-based editors send and receive audio directly over the network using their native Ethernet connections.
- ◆ Receiving Telco service via IP may be much less expensive than the traditional ways.

The diagram shows a typical installation, hinting at the possibilities inherent in the system.

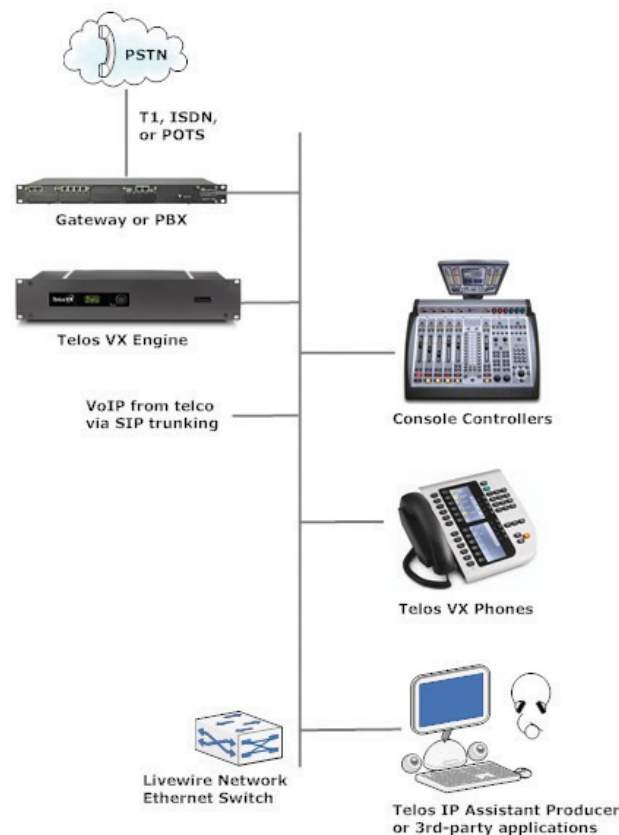

## The VX Engine

A 2U rack-mount device with enormous processing power, the VX Engine provides all the call control and audio processing needed for the system. It supports dozens of telephone lines and many studios. Its two gigabit Ethernet ports provides a cost-effective interface to both telephone lines and studio audio via Livewire AoIP.

Call processing is sophisticated and flexible. Lines may be readily shared among studios. A web interface allows easy assignment of lines to “shows”, which can then be selected by users on the studio controllers. Each studio can provide its own Program-on-Hold.

Audio processing features also have taken a leap forward. There is a hybrid per line, allowing multiple calls to be conferenced and aired simultaneously with excellent quality. Each line is also equipped with AGC, automatic EQ processing, and override ducking.

All connections to the Engine are via two Ethernet jacks that are extended with an Ethernet switch to support a wide variety of peripherals: telephone lines, Livewire studio audio, VSet phones, VX Producer PC applications, console-integrated controllers, etc.

## The VSet Phone Controller

While you can control the VX with PC applications and mixing consoles. Most systems will include one or more Telos VSets. These are the phone-like controllers that have handsets for off-air conversations.

IP-based Telos VSet phones have large, high-contrast color LCD panels that provide line status, and caller information. Caller description text that is entered into compatible call screening applications will show up on the LCD near the line select buttons.

For the comfort of familiarity, the VX can work like a traditional Telos controller, with calls being selected, held, and dropped in the way to which operators have grown accustomed.

But because the VX system has a hybrid per line, it is often desirable to spread multiple calls over a number of faders, using one for each call so that operators can control each line’s level individually. The VSet offers this possibility. It is also possible to hard-assign individual lines to fixed faders, such as for VIP calls.

## VX Producer Windows Software Application

The VX Producer application takes studio phone operations to a higher plane. It provides the usual call screening functions for phone-active broadcasts – but with a number of enhancements enabled by the IP nature of the system. The integrated softphone uncomplicates the producer’s life, since the PC interface is used for all operations, including answering and making calls, assigning priority, writing notes, etc. It also reduces cost, as no hardware phone need be installed.

It has a built-in audio recorder/editor. A producer can record and edit a phone call without leaving the application. The resulting audio files can be easily sent to the talent PC for quick and convenient airing. We imagine that this simple, but powerful feature could add an interesting new element to many call-in situations. Callers who don’t have time to “wait their turn” could be quickly recorded and carefully edited. Perhaps montages could be created to open segments. Removing the need to wait might encourage comments from higher-quality callers.

Because Livewire audio is available at the PC via standard LW Driver software, a producer can readily record calls for later play. These could be edited with a PC application running on the same machine. When a file has been produced, it can be sent to the on-air studio over the network.

Thus, the one Ethernet cable is used for:

- ◆ Telephone audio for the softphone, via Livewire.
- ◆ Livewire audio for the recording of calls.
- ◆ Transfer of recorded call files from the producer to the studio.
- ◆ Data messages between the PC and the VX main box for line selection, etc.
- ◆ Data messages such as call notes and IM between the producer and on-air studio.
- ◆ Possibly, database lookup of caller information, such as how many times they have called, the quality of their contribution, whether they have won any contests, etc.
- ◆ Web browsing, email, etc.

*This is the power of IP realized. To accomplish this level of functionality with older technologies would have been impractical.*

## Console Controllers

Integrating phone line selectors into the studio mixing console is an operator-pleasing feature that is easy to accomplish in a networked studio. As this is written in March 2011, the following consoles have VX-compatible call control modules available.

- ◆ Axia Element Console
- ◆ Axia IQ Console

## 3rd-Party Producer Applications

The VX uses an open protocol for control, which permits non-Telos software applications to be used in place of, or to augment, the Telos VX Producer application. Broadcast Bionics and NeoSoft offer such applications.

The VX system components are linked via a standard Ethernet switch. In Livewire-enabled studios, this will already be present and no additional switch would be needed. Facilities that already have a VoIP PBX would also probably have a suitable switch in place.


## The Acoustic Echo Canceller

A new acoustic echo canceller algorithm solves the longstanding problem of feedback and echo when a loudspeaker-to-microphone acoustic path is required in the studio, such as when DJs prefer to record calls without using headphones or when guests need to hear calls without headphones. The AEC in the Telos VX is a remarkable new development. Its performance is shockingly impressive, permitting very high loudspeaker volume with no noticeable feedback or return echo. (If you've already experienced the Axia intercom system, you know what we're talking about...)





# 2 Installation and Configuration

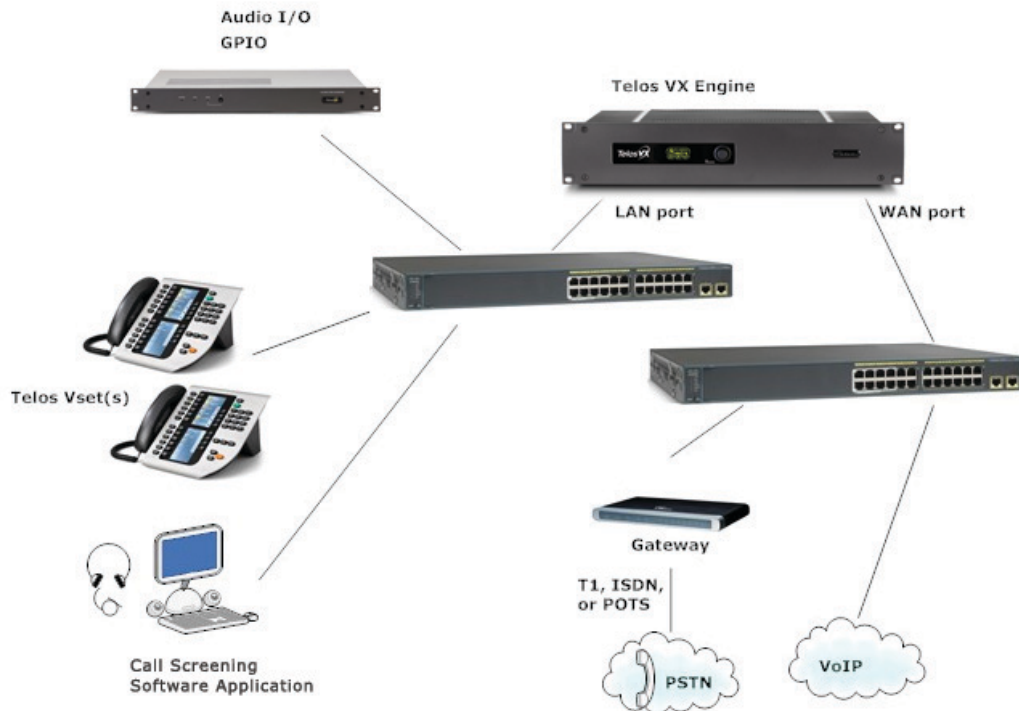

The diagram shows a generic installation that could be used in a typical studio. Two Ethernet switches are employed to keep the isolation between the WAN and LAN ports on the VX Engine. The LAN port carries the Livewire audio and everything else but the VoIP, which is on the WAN port. Telco lines enter two ways: From the PSTN via a gateway and from a SIP VoIP provider over an IP network. VX Interfaces provide analog, AES, and/or GPIO connections to traditional studio equipment. They could be thought of as another kind of 'gateway'. And just as with the Telco gateway, they are not needed when the studio equipment can accept AoIP natively. For an example of this sort of installation, see *Axia Element Console as VX Controller* in Section 5.

## Connecting to PSTN Lines: Gateways & PBXs.

'PSTN' is an acronym for '*Public Switched Telephone Network*', the traditional telephone network that includes POTS, ISDN, and T1 as 'last-mile' connection technologies.

The VX system connects to Telco lines using industry standard SIP (Session Initiation Protocol). This means it is compatible with a wide variety of VoIP services, gateways, and PBXs. Gateways are used to interface PSTN lines to SIP. This is how analog POTS and ISDN lines connect to the VX. Gateways are off-the-shelf for POTS, T1/E1, and both BRI and PRI ISDN. These can be rack-mount units that support large numbers of connections or low-cost desktop boxes that interface a few POTS lines.



Grandstream GXW4004 4-port FXO gateway

The “gateway” could also be a full-up IP PBX, such as from Cisco, Digium (Asterisk), and many others. In this case, compatible VoIP phones can be used for general office locations. SIP lets you move calls between the office and studio systems with no audio degradation. A PBX such as Asterisk could add additional capability, such as automated attendant functionality. With appropriate cards, Asterisk makes an excellent gateway to T1 and ISDN PRI Telco lines.

## Using VoIP to Connect to the Telco Network

Recognizing the growth in market share of VoIP PBXs, Telcos are beginning to offer “SIP Trunking” service, which delivers phone network connectivity directly over a controlled IP link. With this service, you wouldn’t need a gateway.

While it remains a niche in early 2011, SIP trunking is growing in support from both PBX vendors and carriers. Over time, this will almost certainly reduce the use of the older POTS and T1 trunking. Eventually, it may replace it completely. See the *Resources* section for a list of SIP VoIP providers that we’ve tested with.

## What’s a ‘Line’?

While we are talking about Telco lines and VoIP services, we should take a moment to consider – just what is a ‘line’ these days? Use of the word ‘line’ is becoming bothersome at this point in telecom history. Back when an analog line was associated with a single telephone number, the word had a clear meaning. When you ordered ten lines, you received ten physical wire pairs and had ten telephone numbers. (Yes, “roll-over” rotary service exposed only one number to the public, but the others were still there.) ISDN was the first step on the path to trouble. We engineers began to speak of a BRI “line” with two “voice channels”. But producers and hosts still communicated with each other as if channels were lines, saying things like, “The tree-hugger is on line 3. Do you want to take him now?” We knew that meant BRI line 2, channel 1, or T1 channel 8, but users had no clue.

ISDN PRI made matters yet more knotty, since the telephone number and physical channel were divorced. Now we are faced with SIP trunking and other IP-based services, where a single link (which might be connected via one, two, or more physical copper pairs, or an optical cable, or via a wireless system) might carry any number of voice channels. (And what is going to happen when phone numbers become obsolete, as they already are for VoIP applications such as Skype?)

Users, blissfully unaware of all this, will undoubtedly continue with their conditioned habit, referring to a certain caller as being on a particular line. Thus is the word ‘line’ destined to join ‘dial’ in a peculiar departure from original meaning.

In this manual, we refer to “lines’ as your users would. Usually that means a particular telephone number that is probably associated with a button on the VSet phone and/or console controller. To keep the ambiguity down, we’ll try to remember to call the physical links “connections” or “interfaces”. And we’ll sometimes refer to ‘calls’ when the sense points more to the conversation than the connection.

## Livewire for audio I/O

The VX uses Livewire for all audio I/O. For studios that are already Livewire-based, this approach saves money and simplifies installation. With its simple support of bi-directional audio flow, Livewire is ready for hassle-free mix-minus.

When needed, traditional audio connections are provided via VX Interfaces, with Axia Livewire connectivity. These come in both analog and AES3 versions. Because they are networked, they can be located where convenient, either in individual studios or in a central rack room. Each standard Interface connects eight stereo audio inputs and eight outputs. The many audio converters and connectors that would be needed to interface the multiple hybrids and program-on-hold inputs are reduced to a single Ethernet RJ-45.


Livewire is both an elegant technical solution and an unprecedented value. Only one Ethernet RJ-45 connects dozens of bi-directional audio channels and rich control.

## Step-by-step

There is a lot of information in the pages that follow. Here's the (very) abridged version of what you need to do to get your VX system up and running.

1. If you will not be using an existing network to support the VX, install the Ethernet switch, or switches, depending upon your needs.
2. Mount the Engine and set the IP address or accept the default. Make the network connections.
3. Install and configure your gateways if you will be using them to interface to POTS, ISDN, or T1 PSTN lines. If you will be using VoIP trunking for your Telco connection, get it connected and gather the IP and registration password info.
4. Get a web browser going and do the system configuration.
5. Move on to install and configure the VXset phones and VX Producer software application. Then to any other controllers you have in your system, such as integrated console controller modules.

## The Engine and Network

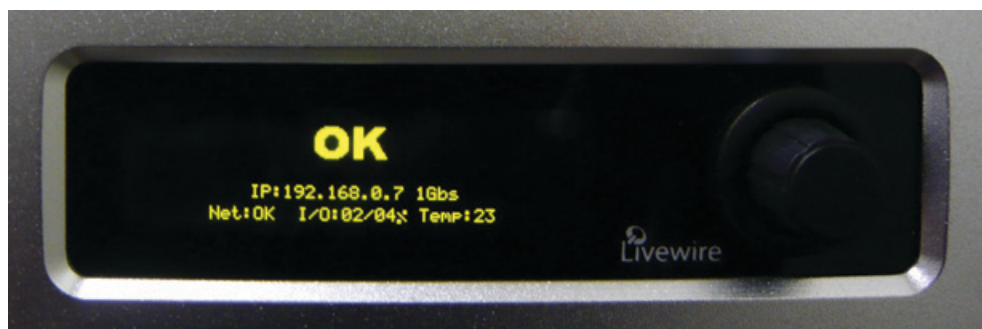

The front panel OLED/knob interface.

The Engine front panel display gives at-a-glance status information. The main screen is pictured above. It shows the IP number for the LAN (Livewire) port, its connection speed and status. The overall status and CPU temperature are also indicated. The knob lets you scroll through the menu pages.

Among the menus is one that lets you change the IP address and another that shows the status of the Livewire audio channels.

The main screen, shown at power-up, is pictured above. To see any of the other pages /menus, push, and then rotate the knob to show each in turn. Pushing the knob enters you into the menu that is displayed. Editing items inside menus, such as the IP address, is similar - navigate to the specific item you want to change by rotating the knob, then push it to choose the item, such as the IP address. In the case of the IP address, select from among the digits by rotating the knob, then pushing. Finally, rotate and push to enter the value you want. (yeah, this isn't the most convenient of user interfaces, but you shouldn't have to use it; the web interface, once available, is much more friendly. The reason for the IP address entry here on the front panel is to avoid the circularity that you need the IP address to connect a web browser, in order to enter the IP address. (should the default not work, for some reason.) We think you'll also find it convenient at times to have the IP address displayed on the front panel.

## Network Connections

The VX Engine has two RJ-45 Ethernet jacks on the rear panel. Both are 100/1000 auto-speed setting. The upper (LAN) port is for Livewire audio and, by default, everything else, such as PCs used for web-based configuration, VSet phone controllers, producer PCs, and console controllers. This can be connected to an existing Livewire network or to a new, dedicated, network that you create to serve only the VX system, which could be as simple as a single Ethernet switch.

For audio to work, there must be at least one Livewire device capable of supplying clocking on the Livewire network. Normally, this would be a Livewire audio Node. The Axia Element console Powerstation can supply this clock.

## More on the Network

An appeal of the Ethernet/IP approach to building studios is that you can make them as simple or elaborate as your needs require. The components of a VX system: the Engine, VSet phones, console controllers, and PCs are networked together using standard, off-the-shelf Ethernet switches. A small VX system might have only a single Ethernet switch as the "network infrastructure", while a large full-facility setup could have dozens of switches and an IP router or two.

The Ethernet switch on the Engine's LAN port must be Livewire capable. That is, it needs to support multicast. Switches that are not multicast-capable usually flood multicast traffic such as Livewire audio streams to all ports, potentially overwhelming devices like PCs and printers - So you don't want to plug the VX LAN port into an office network after Livewire outputs are enabled! ! Multicast-capable switches will not propagate the Livewire traffic to ports that are not subscribed to a particular audio channel. Thus blocking the high-volume traffic from places it is not wanted. A suitable switch would be the Cisco 2960G or another from that family. The switch that is part of the Axia Element PowerStation is also suitable. Of course; the VX and Axia consoles were designed to work smoothly together.

For the initial, out-of-the-box, configuration, the foregoing is not a concern. You can safely use a simple Ethernet switch or an existing LAN to get your configuration PC to the VX LAN port

because, by default, there is no Livewire traffic flowing. Only after you assign Livewire outputs in configuration, as described below, will this be a concern.

The lower, WAN (Wide Area Network) port is isolated from the Livewire port and thus provides a firewall, ensuring that no traffic can pass from the Wide Area network, often connected to the Internet to access VoIP, to the studio Livewire network.

Out of the box, the defaults for the network connections are:

- ◆ The WAN port is disabled. To use it, you must enable it on the *Main* configuration page, as described below, and move the services you want to use to it, also on the *Main* configuration page.
- ◆ All services – HTTP web access, SIP/VoIP, VSet audio and control, and Livewire audio I/O – are provided via the LAN port.
- ◆ No Livewire inputs or outputs are assigned or enabled. You do this on the *Studios* configuration page.

## VSet Installation

VSets are normally connected to the Livewire/LAN Engine port via the Ethernet switch linked to this port.

The VSet is powered over the Ethernet connection. This is 48 volts DC according the PoE (Power over Ethernet) standard. The Vset's power consumption is 15.4W. Power may be supplied by the standard PoE injector we include with the Vset, or it can come from an PoE equipped Ethernet switch. If a PoE switch is used, ensure that the Ethernet cabling is not so long that it causes too much voltage drop. Some Axia products, such as the PowerStation and IQ console, have ports that provide PoE.

- ◆ Connect the Ethernet cable and confirm that that the LEDs near the jack are indicating correctly. The green LED (link) should be on solidly, showing a good connection. The yellow LED (data) should be flashing, showing data flow.
- ◆ After a few seconds, the LCD screens should come to life as the Vset “boots up”. If they do not, the likely problem is the PoE supply or an ethernet cable issue.
- ◆ Press the Menu button and navigate to Setup. On the Vset 1/6, press the “more” button to display additional options including setup. Press and hold the setup key for 5 seconds to access the setup menu for changes. This “press and hold” feature will make it less likely for unauthorized users to make changes that could disrupt normal operation.
  - ◇ Enter the IP address that you are assigning to the phone and press the green “Go” button.
  - ◇ Do the same for the netmask value. (Most often, this may be kept at the default 255.255.255.0)
  - ◇ Do not enter anything in the “Vset Gateway” field unless directed to do so by Telos Support. The Vset will operate on the Livewire network and will not need to be routed anywhere unless you have an unusual or custom installation.

After selecting the engine, you might see ‘Connected to...’ for a moment at the bottom of the set screen.

## System Configuration

### Selectable and Fixed Lines

The VX supports the concept of both 'Selectable' and 'Fixed' lines. It is possible to have a mix of both.

**Selectable lines** are used for an operation style like traditional Telos systems, where there was a line selector before the hybrid or hybrids. Hybrids were expensive, which meant that we were not able to have one dedicated to each line. This limitation is now over, and we can provide a hybrid and other processing functions for each line. (Yeeaaaa! – Progress with a capital 'P'). Nevertheless, operators are used to the operating paradigm that the old "1A2" key phones made so widely-known, where you have a column of buttons and pressing one takes a line and drops the one that was active before. For that reason, we have kept this operation style as the default for the VX. We have also kept the "lock" function that lets an operator conference multiple lines and keep VIP callers on-air while coming and going with others. This also allows selective holding and dropping of conferenced lines.

Multiple calls that are assigned to a single fader have individual hybrids/processing and are actively conferenced within the VX Engine using an internal mix-minus matrix. Calls assigned to different faders would normally be conferenced via a mix-minus matrix of some kind within the studio mixing console.

With **fixed** lines, there is a one-to-one correspondence between Telco lines and console faders. A particular telephone number is always associated with a particular button on the VSet phone and a particular fader on the console. It is as if each line had its own hybrid. This allows VIP and hotlines to have fixed and dedicated console faders. Perhaps this will be an easier operating paradigm for stations that often have multiple lines conferenced together on-air.

You could configure a system to have only fixed lines and no selectable lines. Each line would have its own dedicated fader. This is, in fact, the way most large European stations have operated their phone interfaces for years.

This approach has become more practical as we move away from analog lines since the "lines" are virtual and the cost for a telephone number added to the ISDN, T1, or SIP trunk pool is much less than the cost of an analog line – usually less than \$1 per month.

Fixed line calls would normally be conferenced via a mix-minus matrix of some kind within the studio mixing console.

### Studios and Shows

The VX system can support multiple studios and can share lines among them.

A **studio** is a collection of controllers and other devices that are used together, usually to serve one studio: VXsets, VX Producer applications on PCs, Audio input and output Nodes (if any), GPIO interfaces (if any), and console controllers (if any).

A **show** is a pre-configured profile that can be selected by users. It assigns the lines to buttons and such. This is the mechanism that lets you move lines from studio to studio.

Studios and shows are configured via the web interface to the VX Engine. Interfaces such as the VSet and the VX Producer let operators select the studio and show they want to use.

## Configuration Web Pages

To access the configuration Web pages, find or connect a PC to the network that the VX Engine is connected to. Start a web browser and open a connection to the VX Engine by entering `http://192.168.2.200` into the browser's address field (assuming the default IP number has not been changed and that your PC is on the same subnet).

### Home Page

This is the page you will see upon initial connection. Select the pages you want by clicking on the menu at the left side of the page. If this is a new installation, start with the *Main* page, then move to the *SIP* page, the *Studios* page, and then on to the Shows page. The purpose of each of the pages and how to use them is detailed below.

The screenshot displays the TelosVX Control Center web interface. The browser's address bar shows the URL `http://192.168.0.7/`. The page title is "TelosVX Control Center". On the left side, there is a navigation menu with the following categories and items:

- Configuration**
  - Main
  - SIP
  - Studios
  - Shows
  - Call Audio Processing
  - Tones
  - Logging
- Information**
  - Studios
  - Calls
  - Devices
  - Stream Statistics
- Script Manager**
  - Script Information
- Misc.**
  - IOManager Info
- System**
  - Status
  - Logs
  - Backup/Restore
  - Firmware

The main content area is titled "Configuration" and contains five configuration boxes, each with a title and a brief description:

- Main**: Network configuration. NTP configuration. Web and LWCP passwords.
- SIP**: Global SIP gateway configuration.
- Studios**: Studio configuration. Livewire channels. Show selection.
- Shows**: Show configuration. Line configuration. Fader assignment. SIP gateway-per-line assignment.
- Call Audio Processing**: (No description provided in the image)



## Main page - General Configuration

The screenshot shows the TelosVX Control Center web interface. The browser address bar displays '192.168.0.7/JSFun/MainCfg'. The page title is 'TelosVX Control Center'. The main content area is titled 'Main Configuration Data' and contains the following sections:

- General configuration:**
  - Turn the WAN interface ON:
  - Engine Name: Telos-VX
  - IP: 192.168.0.7
  - Netmask: 255.255.255.0
  - IP WAN: 195.13.179.146
  - Netmask WAN: 255.255.255.0
  - Gateway: 195.13.179.1
  - DNS 1: 80.232.230.242
  - DNS 2:
- WAN Services:**
  - HTTP: 8080
  - LWCP: 20518
  - SSH: 1022
- Time Zone Config:**
  - Sign: -
  - Hours: 0
  - Minutes: 0
  - DST:
- NTP Config:**
  - NTP Time Server: 192.168.0.250
- LWCP Password:**
  - New password:
  - Repeat new password:
- Web Password:**
  - New password:
  - Repeat new password:

**Engine Name.** Assigns the text name for this VX Engine. It becomes the Linux network name for the Engine.

If you will not use the defaults for **IP**, **Netmask**, and **Gateway**, enter them here. IP addresses can be entered for both the LAN and WAN ports.

**Web Username** and **Password.** Used for web access for configuration and monitoring. Username is always 'user' and the default password is <blank>.

**LWCP Password.** LWCP stands for *Livewire Control Protocol*, the way controllers communicate with the VX Engine. A password can be used to secure the Engine from being controlled by unauthorized devices. The VXset, for example, uses this password. By default, this is set to <blank>.



**WAN Services** chooses which services are available on the WAN port. HTTP is for web access, LWCP is for controllers, and SSH is shell access to the Linux OS in the Engine. SIP/VoIP are always enabled on the WAN port when the port is enabled.

NTP (Network Time Protocol) is the Internet standard for keeping devices synchronized to the correct time. The VX uses this to have accurate timestamps for logged events. Enter the IP number for the NTP server here. An NTP server must be accessible on either the LAN or WAN port. The VX automatically finds the correct port. If the NTP server is outside of both the LAN and WAN local network segments, **gateway** must be set. You can use a domain name if a DNS server is configured and accessible. Under *NTP Config* are the settings for your location.

## Default Username, Password, and IP settings

We put this info here under its own header, just to make it easy for you to find when surfing the table of contents...

User: **"user"**

Password: <blank>, that is, no password

- 'Network' interface IP: 192.168.2.200

- netmask: 255.255.255.0

- state for the WAN connection is **OFF by default, with no IP set.**

- Active ports on WAN interface by default are:

- 5004 - DSP Engine

- 62000 through 62513 - RTP

- 5060 – SIP

- 10000-20000 - SIP RTP

- 8080 – HTTP Server

A computer on the same subnet as the 'Network' interface, (example 192.168.0.100) could log into the VX with this URL: <http://192.168.0.200>, while a computer on the same subnet as the WAN interface (example 192.168.5.2) could log on using <http://192.168.5.200:8080> .

Default user name is: **user**

Default password is: **<blank>**

Passwords are case sensitive

If you change any of these, you might want to write the new values into this manual, here and elsewhere.

## SIP Configuration

**TelosVX Control Center**

**SIP Configuration**

**Configuration**

- Main
- SIP**
  - Patton PRI
  - Cisco
  - Asterisk
  - Studios
  - Shows
  - Call Audio Processing
  - Tones
  - Logging
- Information**
  - Studios
  - Calls
  - Devices
  - Stream Statistics
- Script Manager**
  - Script Information
- Misc.**
  - IOManager Info
- System**
  - Status
  - Logs
  - Backup/Restore
  - Firmware

**General settings:**

Default Server:  ▼

Use SRV Lookups:

**Servers:**

Name	Server	Lines / Refs	
<a href="#">Patton PRI</a>	192.168.0.37	0 / 0	<input type="button" value="Delete"/>
<a href="#">Cisco</a>	192.168.0.23	0 / 2	<input type="button" value="Delete"/>
<a href="#">Asterisk</a>	192.168.0.155	1 / 1	<input type="button" value="Delete"/>

**Add New**

Server:

The SIP configuration page shows the global SIP settings, along with a list of all SIP servers VX is configured to communicate with. The form at the bottom of the page lets you to add another server; VX will automatically create server configuration for any line in the Show configuration. As a consequence it is not possible to delete server entry if it is referenced from at least one show. The *Lines / Refs* column shows the number of lines which are explicitly configured, and the total number of line positions in shows using this server. Clicking on the link with the server name will bring you to the server configuration page.

As of VX firmware version 1.1.0, there are only two global options.

- ◆ The *Default Server* changes the server address which will be used for new lines in Show configuration. Note that this will affect only new lines, existing ones will keep their old settings (use the *SIP Server* option to change the server address for existing lines).
- ◆ Enabling *SRV Lookups* makes the VX to strictly follow the SIP standard when resolving domain names. This feature is not widely used and can be left unchecked unless required by the SIP provider.

## Regarding The VX and SIP


Some details regarding the VX's SIP implementation:

- ◆ As of the time of writing, the VX supports the g.711 and g.722 codecs. g.711 is the usual PSTN codec, so ISDN or T1 connections will not suffer any transcoding loss. SIP auto-

matically negotiates and selects a codec that is supported by both ends. Implements RFC 3261 standard (but see below)

The g.722 codec is the same codec known to broadcasters from the pre-MPEG days of ISDN remotes. It has 7kHz audio bandwidth, opening the door to much better than usual speech quality, especially from mobile handsels. When there is reliable and sufficient IP bandwidth, audio quality from mobile phones can be much improved compared to the usual fuzztone. We've tested the iPhone application Media5 FON with satisfactory results (but only the upgrade version includes g.722). The Acrobits app should also work.

On Windows and Linux, the free Ekiga VoIP softphone works fine.

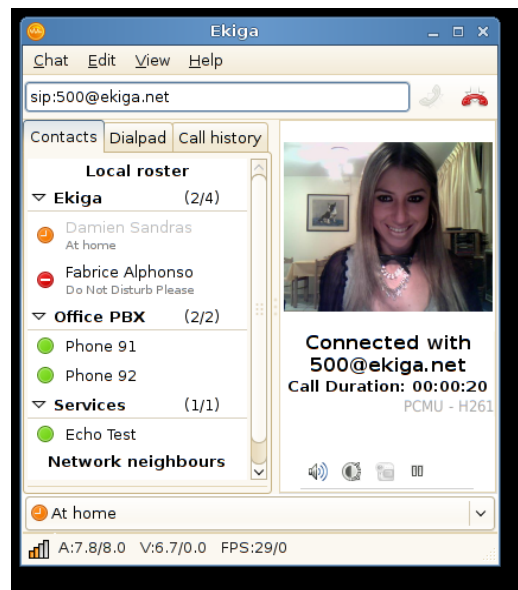

For both of the above, you need to force the use of the g.722 codec by enabling it and disabling the others. on the VX side, everything is handled automatically during normal SIP codec negotiation. Following the usual procedure, the codec choice is made by the caller and conveyed in the SIP Invite message and procedure.

SIP-connected g.722 audio is via IP, so the VX Engine needs a public IP address that is accessible to the calling side. G.722 does not pass via the PSTN and gateways (which means that ISDN g.722 codecs will not work with the VX).

RFC 1890, the original standard governing audio codecs in SIP, erroneously listed the clock rate of G.722 as 8kHz (the actual sampling is 16kHz). When the error was discovered, it was too late to fix it, and it was decided to keep it that way. Nevertheless, makers of some SIP devices decided "fix" this mistake on their own, breaking compatibility with most other devices that stick to the standard, including VX. As the result, VX will use G.711 to communicate with such devices.

Because it is essentially a pro-grade SIP phone that includes g.722, the Telos Z/IP One also works as the other end of a VX g.722 call.

Note that VX's call audio processing is bypassed when using g.722.

- ◆ RFC 2671 MD5 digest authentication is supported.
- ◆ RFC 2833 DTMFs is supported.
- ◆ Supports SRV address lookups.
- ◆ Has basic NAT support
- ◆ Unlike some other SIP devices, the VX supports non-numeric “extensions”

## Server Configuration

**TelosVX Control Center**

**Asterisk**

**General Settings:**

SIP Server:

Name:

External IP:

**Lines:**

Extension	Register	Expires	Auth User	Auth Password	Shows (Studios)	
3101	<input checked="" type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text" value="*****"/>	Fixed	<input type="button" value="Delete"/>

**Add New**

Extension	Register	Expires	Auth User	Auth Password
<input type="text"/>	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

When the line details are entered in Show configuration, VX creates the server configuration as needed, treating each line as a “trunk”. If this is what’s needed, you don’t have to do anything else. Otherwise, you can change the server settings and line specific configuration from the *Server Configuration* pages. It shows the server address and name, and the list of configured lines (lines using defaults are not shown).

The *SIP Server* field allows you to change the server address, while keeping the other settings intact. You can also assign a more descriptive *Name* to the server, which will be then shown in place of the server address. As it is used for display purposes only, it can be anything you want, like ‘POTS Gateway’. The *External IP* setting is discussed in the next section. Please note that to change the server settings you have to unload any shows referencing the server; it is not possible to change them while the server is in active use.

The *Extension* and server together make up the SIP address of a line. It must be unique, as in the context of SIP the “line” is the address (and associated configuration).

To change the line from trunk to station, mark the *Register* checkbox. This will make the VX register it with the server (meaning, log in) whenever a show referencing this line is active, informing that the address is reachable. The *Expires* field lets you to change the interval (in

seconds) in which the VX will refresh its registration. When left empty, the server and VX will negotiate for a reasonable default, usually one hour.

The other two fields allow to set the password and change the user name used for authentication. You will almost always want to set the password for lines that get registered with the server, but it is also possible to use it with trunks - there are some providers that require it for outbound calls even on SIP trunks. *Auth User*, if unspecified, defaults to the extension. It is only needed to be filled in if required by the SIP provider.

For quick access to the configuration, you can use the *Config* link in the Show configuration page. Each position with correct configuration has a link marked '»' next to it. Clicking on it will bring you to the corresponding server configuration page, with the matching line configuration highlighted. In case the line is not configured, the extension field for adding it will be filled in from the show.

## SIP and Network Address Translation (NAT)

As SIP messages list IP addresses and ports used to transmit audio (RTP), it doesn't work well if the client is in a private LAN but needs to communicate with a SIP provider outside of the LAN. As messages pass through the router, it translates addresses in IP headers, but not the SIP message itself, giving the provider wrong connection info.

Many SIP providers use clever hacks to work around this limitation without any additional support from the client. If you are connecting VX to a SIP provider that doesn't have such service, don't worry - all is not lost, as VX has basic NAT support built-in.

First, forward the ports used by SIP (5060 and 62000-62512) from the router to the VX. This is necessary to allow outside traffic to reach VX. Then, enter the external (WAN) IP of the router in the *External IP* configuration field for the server. Setting it will cause VX to use the external IP for all SIP messages it sends to the server, while still leaving room for the server side hacks. The setting will take effect only for the particular server.


## Overall Studio Configuration Page

Studio Name	Fixed Channels	Selectable Channels	Active Show	
Studio 1	2	4	Show 1	Delete
Studio 2	0	2	Show 1	Delete

[Add New](#)

The *Studios* page lists all of the studios that you have configured for your system. It lets you add new ones. And it lists the Shows that studios are using.

## Individual Studio Configuration Pages (part 1)

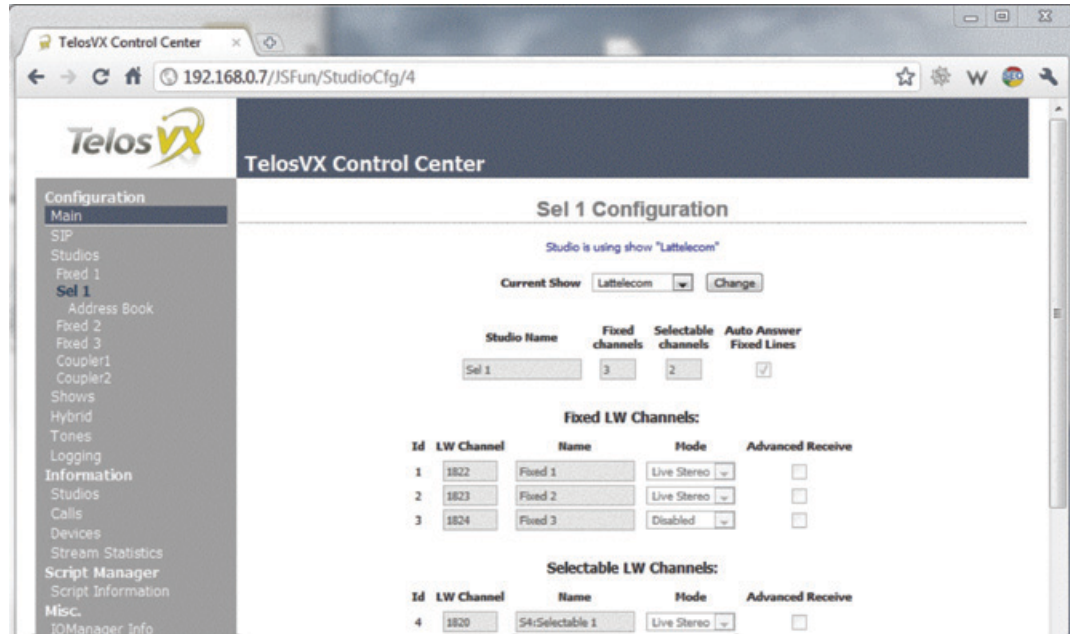


The individual *Studio* pages are to configure each studio. For each, you can choose how many faders you want to devote to selectable and fixed lines and you assign the Livewire channel numbers to each. Note that when you assign Livewire channels to outputs, Livewire streams will start to flow on the LAN network port. With a proper Ethernet switch, this is no concern, but should this port be connected to an office LAN or non-Livewire switch, there could be flooding from the audio traffic.

Recall that Livewire channels carry audio in two directions, so both send and receive are covered at once. 'Live Stereo' should usually be chosen as the Mode to keep the delay as low as possible.


One LW channel is used to feed **Program on Hold** to each studio. Since only one of the two Livewire audio directions is needed, you can choose which is appropriate for your studio set-up. *From Source* is the usual

## Individual Studio Configuration Pages (Part 2)

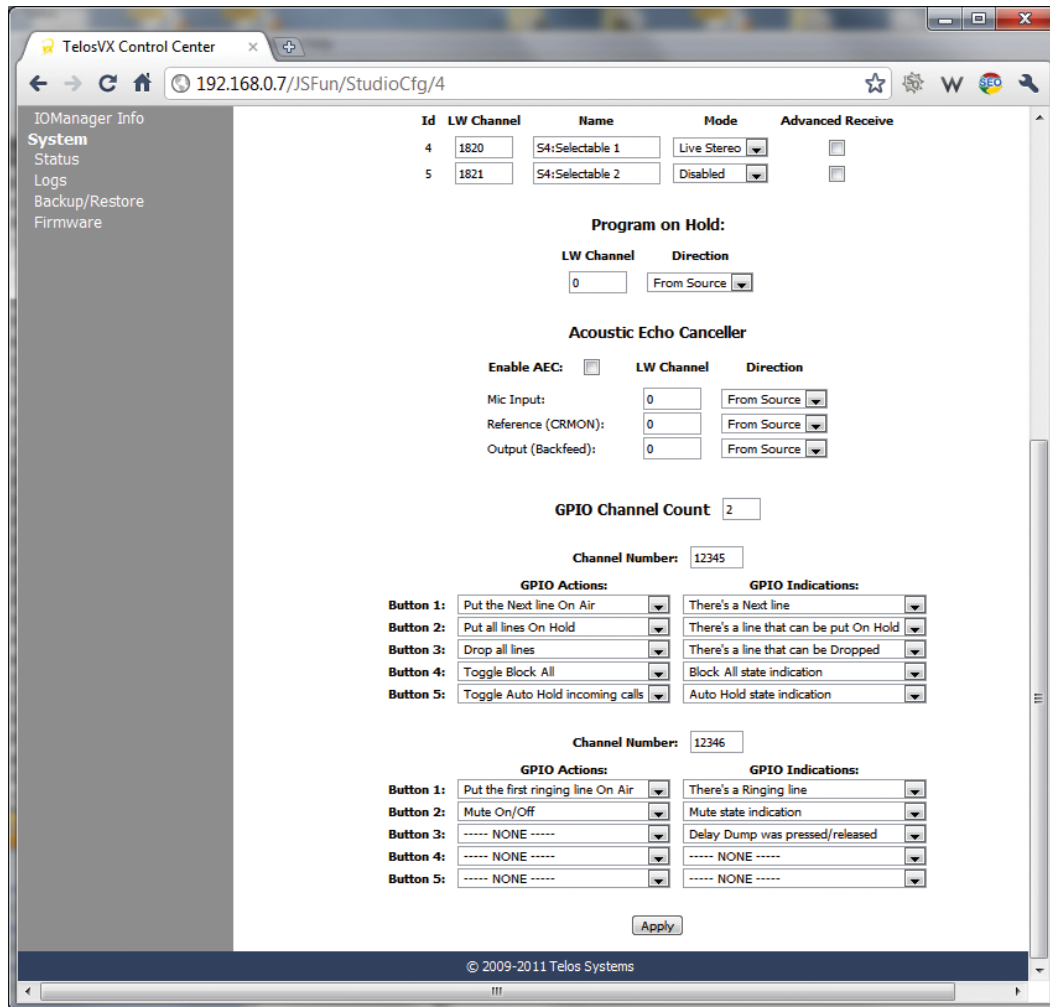

**Advanced receive** opens a new field where you can enter a LW channel number to which this Fader/LW channel will listen. Normally it will listen to the same LW number as it is sending to. With native Livewire consoles such as the Axia Element, this is what you need. But if you want to connect the VX to another console via an interface Node, the Node can generate only a "From source", not a backfeed. For this case, choose Advanced receive and enter the LW channel number of one of Node's sources.



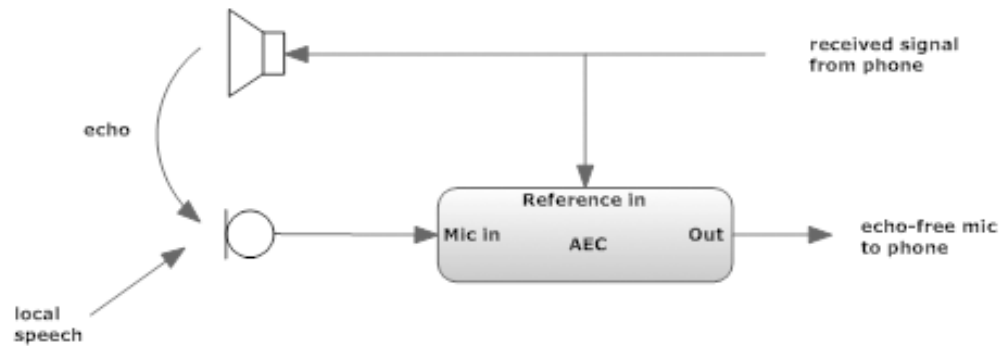

Each studio has an acoustic echo canceller available. The two inputs and the output are assigned to Livewire channels on this page. The output of the AEC is labeled Backfeed because the output of the AEC is what you usually would feed back to phones. For configuration purposes, you should think of the AEC as a separate block outside of other VX functions. There is no internal connection from/to the AEC and other VX signal paths.

The Acoustic Echo Canceller helps with the problems that occur when you need to have loud-speaker monitoring of calls in the same room as the microphone feeding the phone. Without a canceller, the received caller audio would be returned to the caller as an annoying echo. (In the old days, this acoustic coupling would more probably cause feedback howl than echo, but today's mobile phone and VoIP delays have made echo the trouble *du jour*. The canceller needs two inputs and produces one output. The Mic input is fed from the studio microphone. The reference input is the audio that needs to be cancelled - the received phone audio that is going to the monitor or preview loudspeaker. The output of the canceller goes to the VX phone feed input(s). (Why didn't we just internally connect the canceller? Because the canceller works best when the reference input is after anything that is in the phone-to-speaker path, such as the volume control and mute. In a Livewire-equipped studio, it should not be too difficult to tap the needed signals. The canceller is low-distortion and full-fidelity, so it may be used with wideband codecs. More information on the Acoustic Echo Canceller is in Manual Section 5.

## GPIO

GPIO (General Purpose Parallel Input/Output) control is possible. The Livewire channel assignment for this is done on this page. The electrical connection is made via Livewire GPIO Nodes, using the standard 5 inputs and 5 outputs per channel. You tell the system how many Livewire channels you will use with **GPIO Channel Count**. After you press apply, you will see entry fields for each of the channels. Specify the Livewire channel number you want to use for each and choose the functions you want to assign. **GPIO Actions** are inputs to the VX from some external source, which could be nothing more than a pushbutton. **GPIO Indications** are outputs from the VX. For example, *there's a Ringing Line* could be used for a wall-mounted lamp and *Delay dump was pressed* to trigger a profanity delay unit. You can find the details regarding the corresponding pins of the GPIO connectors in the various GPIO Node manuals.



# Overall Show Configuration

**TelosVX Control Center**

**Show Configuration**

Show Name	Lines	Active Studios	
Joe	6	New Studio 1	Delete
coupler1	1	coupler1	Delete
Production1	12	None	Delete
coupler2	1	coupler2	Delete

Add New

# Individual Show Configuration Pages

**TelosVX Control Center**

**Fixed Configuration**

Show Name: Fixed Lines: 3

Lines:

Position	Name	Extension	Server	Config	Fader	Busy All?	Ringer
1	67115501	67115501	<input checked="" type="checkbox"/> 195.13.208.116	>	Fixed #1	<input checked="" type="checkbox"/>	Default
2	Cisco 41	41	<input checked="" type="checkbox"/> 192.168.0.23	>	Fixed #2	<input checked="" type="checkbox"/>	Default
3	Ast 3101	3101	<input checked="" type="checkbox"/> 192.168.0.155	>	Selectable	<input type="checkbox"/>	Default

Apply

With the individual *Show x* configuration pages, you tell the system how to assign Telco lines to VSets and other controllers. You give each line a text name that appears on controllers. You decide if the line is to be Selectable (a number of lines switched into a few faders) or Fixed (one-to-one correspondence from lines to faders). You specify if a line is to be affected by the **Block All** function. Finally, you can override the default SIP gateway on a per-line basis.

The **SIP Extension** is like an extension number in a PBX system, with the difference that it is generally not required to be a number. It maps incoming calls to the line positions on the controllers. Together with **Server** it makes the SIP address identifying the line. The server is also used to form SIP addresses from numbers for outgoing calls. The checkbox in *Server* column allows you to override the default server set in SIP configuration.

You can assign the same extension to multiple buttons. Calls will ring in on the first available button, providing a kind of “hunt group”. The server address is ignored in this case.

Near the top of the page, you see what studios are using this show.

## VX in the News and Production rooms

The flexibility of the VX extends to the newsroom and production studios. It's easy to create a 'studio' in the VX that can be dedicated to a workstation or special need. Most newsrooms these days are simply PC workstations with a simple mixer off to the side. You can set up a hybrid for each of your workstations or production rooms. You can use the VX Producer software or VXset for the user interface. Or you could program the VX to automatically answer a call transferred to it.

## Using the VX to replace 'Couplers'

If your station uses “Pre-delay IFB (Interruptible FoldBack) Couplers or “listen lines”, the VX can replace an entire wall of hardware, and by using DID (Direct Inward Dial) numbers instead of POTS lines, you can also save a lot of money each month by replacing those expensive analog lines.

Create dummy studios for each coupler bank and shows with the phone number or extension you want to use and tick the auto-answer box next to it. Choose the audio feed from among the Livewire sources.

The VX lends itself to creative solutions. As you become more comfortable with the system, we're sure that you'll find more of them. Please share them with colleagues at our website [www.telos-systems.com/forums](http://www.telos-systems.com/forums) and check in to see what's new.

## Call Audio Processing page - Audio Processing and metering

The screenshot displays the TelosVX Control Center interface. On the left is a navigation sidebar with categories: Configuration (Main, SIP, Studios, Shows), Call Audio Processing (Tones, Logging), Information (Studios, Calls, Devices, Stream Statistics), Script Manager (Script Information), Misc. (IOManager Info), and System (Status, Logs, Backup/Restore, Firmware). The main panel is titled 'Hybrid Settings' and features the following controls:

- Enable Call Audio Processing:** On
- Receive AGC:** 16
- Noise Gate:** Off
- Receive EQ Mode:** Adaptive
- Additional Low EQ:** +6.0dB
- Additional High EQ:** +8.0dB
- Caller Ducking Level:** 6dB

Below the settings is an 'Apply' button and a 'Line Meters' section. The meters show four vertical scales with a blue bar indicating signal levels. The scales are labeled with values: 0, -20, -40, +10, 0, -20, -30, -40. A 'SEND' button is located at the bottom right of the meters.

The VX has dynamics processing on both the send (from studio, to caller) and receive (caller) audio directions. Adjustments and meters are on the *hybrid* page.

We recommend as a starting point +8 on the high EQ, +6 on the low EQ, 16 on the AGC (full), the caller ducking to 6dB, and the noise gate off.

The send processing consists of a limiter and EQ. The purpose of the limiter is to protect the Telco line from the distortion that would result from clipping due to an audio overload. Livewire studio audio has a much larger dynamic range than telephone lines. We use a limiter rather than an AGC because we don't want the system to increase low-level signals, which could cause feedback and sound unnatural to the caller.

The receive processing includes ducking, an AGC, and dynamic EQ.

**Hybrid** refers to the traditional hybrid cancellation function; the removal of the send audio from the received caller audio, required due to the nature of analog Telco lines, where the two signal directions are combined on one circuit. In the VoIP world this should be done in the gateway, and is not required in the phone system itself, but we use the term "hybrid" here because it's instantly understood. Some PBXs refer to the hybrid as an 'LEC' or Line Echo Canceller.

The **Call Audio Processing** button allows you to enable or disable all of the audio processing features of VX, such as AGC, EQ, ducking, etc., all at once. Enabling this option will let you adjust the individual options below.

**Ducking.** The purpose of this is both to improve the performance of the system with regard to feedback and echo as well as to provide an effect that many DJs and talk show hosts prefer – that the caller level is reduced when they speak. The ducker reduces the gain in either the send or receive path depending on who is talking at a given moment. There is a smoothing filter with time-constants tuned to make the effect as natural as possible. The amount of ducking is a user-adjusted variable value and may be defeated entirely if you choose.

**Caller AGC/EQ.** Normalizes the level coming from telephone calls. A wideband AGC is used for consistency, followed a multi-band frequency-selective processor that provides spectral control for the best caller audio, balancing intelligibility and warmth. The Duck Control module communicates with the AGC module so that gain is not increased when the studio-side is sending audio. Leakage from the hybrid in this case could look like low-level telephone audio that needs to be boosted. If this happens, the effect of the hybrid and ducker would be undone.

**Send EQ.** This is a simple EQ that rolls-off the low-end and has a peak at high-frequencies to improve intelligibility. This is designed to make the audio similar to what a caller would receive from a normal telephone. When wideband audio is fed directly into a telephone connection, there are often complaints that “it is hard to understand” because the low-frequency energy is masking the higher frequencies that are needed for intelligibility.

A Sample Rate Converter is an essential part of the signal processing. The SRC is automatic and there are no controls or configuration. The SRC between the telephone processing and the studio-side audio adapts the telephone sampling rate to the 48kHz Livewire rate and allows the switching and mixing to be performed synchronously within the VX Engine. The SRC adapts a number of rates on the telephone side. The usual telephone rate is 8kHz, but newer wideband codecs making their way into telephony will have higher rates. The output (to Telco) rate of the send-side SRC is locked to the receive rate on the same line.

## Assigning sounds & Tones – The Tones page

**TelosVX Control Center**

**Tone Configuration**

Note: Uploaded tones must be in AU file format, 48kHz linear PCM.

**Call Progress**

Default Tones: USA [Change]

Dial Tone: Default [Browse...] [Upload] [Disable]

Ringback Tone: Default [Browse...] [Upload] [Disable]

Busy Tone: Default [Browse...] [Upload] [Disable]

Reorder Tone: Default [Browse...] [Upload] [Disable]

Error Tone: Default [Browse...] [Upload] [Disable]

**Call Disposition**

Call Disposition	Custom: <a href="#">fx_answer.au</a>	Tue Jun 28 2011 14:10:23	98.8 KB
Call Answered	[Browse...]	[Upload]	[Reset to Default] [Delete]
Caller Hang Up	Default [Browse...]	[Upload]	[Disable]
Line Switch	Custom: <a href="#">fx_switch.au</a>	Fri Jun 10 2011 21:23:19	293.5 KB
Caller Alert *	Custom: <a href="#">fx_alert.au</a>	Mon Jun 27 2011 16:30:40	374.87 KB

\* Played only to the caller

SIP signaling is via a text message, not audio. This means the VX has to make its own sounds in response to various line status conditions. We provide default sounds, which are similar to the traditional tones generated by the PSTN, but you can upload your own to create a unique on-air 'signature'.

You can also use any sound you like to signal that a new call has been taken. This is actually a cool new feature made possible by modern technology. Rather than a new call appearing silently, the event can be accompanied by a signature sound. A story... Years ago, we installed a fancy new Telos system at Z-100, New York, replacing an old key phone setup. The new system had a mute function to remove the loud and annoying 'clunk' that banged out when each call was taken to air. On the first day, star morning DJ Scott Shannon called Frank Foti, the Chief Engineer, to complain he was missing his "*kerchunk kerchunk*". He liked the clunk, saying it created a kind of dramatic "yer-outta-here" punctuation when he dismissed a call and took another. He would have loved this feature of the VX. We've included a key phone button punch sound in his memory.

For line status (sometimes 'called 'call progress' tones, The *Tones* configuration page lets you choose either USA or Euro standard for the default tones. You can upload your own sounds. Files to be uploaded must be mono, in the signed .au file format, linear PCM (8, 16, 24 or 32bits) or 32-bit normalized floating point. Ringtones MUST be 8kHz, 16-bit, mono, other tones 48kHz. You can use the free Audacity audio editor to convert whatever you have to this format. Use the Export command and choose the required values.

The files you wish to upload must be available on the PC that hosts the Web browser you are using to access the VX. Your tones can be any length, but should normally be kept short to conserve memory (and to avoid annoying listeners...).

**Dial tone.** This is only heard when a line button is pressed before a call is dialed.

**Ringback tone.** Heard when dialing is completed and the called phone is ringing.

**Busy.** Heard when the called phone is busy.

**Reorder.** Signals that there are no call paths available in the PSTN, usually caused by congestion in links between central offices. In the USA, this is the 'fast busy' - a dual-frequency tone of 480Hz and 620 Hz at a cadence of 0.25s on/0.25s off.

**Error.** Usually caused by an incorrectly entered number, but can be from other problems in call setup.

**Call answered.** Played whenever a call is put on air (whether directly, from handset or from hold).

**Off Hold.** The sound that is played on-air when a call is taken to air from Hold by pressing a line-select button.

**Line switch.** The sound that is heard when there is a call on-air, and a new call is taken to air by pressing a line-select button. This is the one Scott Shannon wanted.

**Caller hang up.** A brief sound that is heard when an on-air caller disconnects.

**Caller Alert tone.** Sent to caller when call is answered, or when caller is taken to air from hold, to inform the caller that they are now on-air. The Caller Alert sound is sent to the caller, not played on the air. Its purpose is to let a waiting caller know that it is his turn to talk. Since he has usually been listening on hold, he will have heard the host say "hello, you're on the air" a

few times before it really is his turn. Since this sound is played only to callers being switched to air, it clears the confusion. The Producer/call screener needs to explain this to callers.

**DTMF (on air).** Choose the DTMF menu to set these tones. Dialling keypresses send call setup messages digitally to VoIP lines or gateways. Though they are not sent to the Telco line, standard DTMF (Dual Tone Multifrequency) tones are played on-air - but they are scrambled so that listeners are not able to easily detect the number being dialled. The correct DTMF tones are played to the VSet handset and loudspeaker.


**Ringtones.** Choosing the Ringtones menu lets you choose different ringtones for each incoming line position on the VSet. Ringtones with higher numbers take precedence. For example, If one line has ringtone #1 assigned to it, and another line has ringtone #5, and both lines are ringing, the Vset will play ringtone #5.

## SIP and DTMF

The VX uses standard SIP procedure for dialing. A SIP call setup message containing the number is sent to the IP network. The gateway to analog POTS lines generates the DTMF (Dual Tone MultiFrequency) audio signal that the PSTN uses to direct the call. A gateway to ISDN lines translates the SIP message to the equivalent ISDN call setup message. The VX does not generate DTMF audio. Likewise, the gateway translates call progress signals from analog tones or ISDN messages to SIP. The default is a simple 'click'.

There is sometimes the need to send DTMF to the PSTN after a call is connected, such as for automated attendant systems. In this case the VX sends a special SIP message that tells the gateway to generate the corresponding audio DTMF tones, according to the standard specified in the IETF (Internet Engineering task force) RFC2833.

## Logging

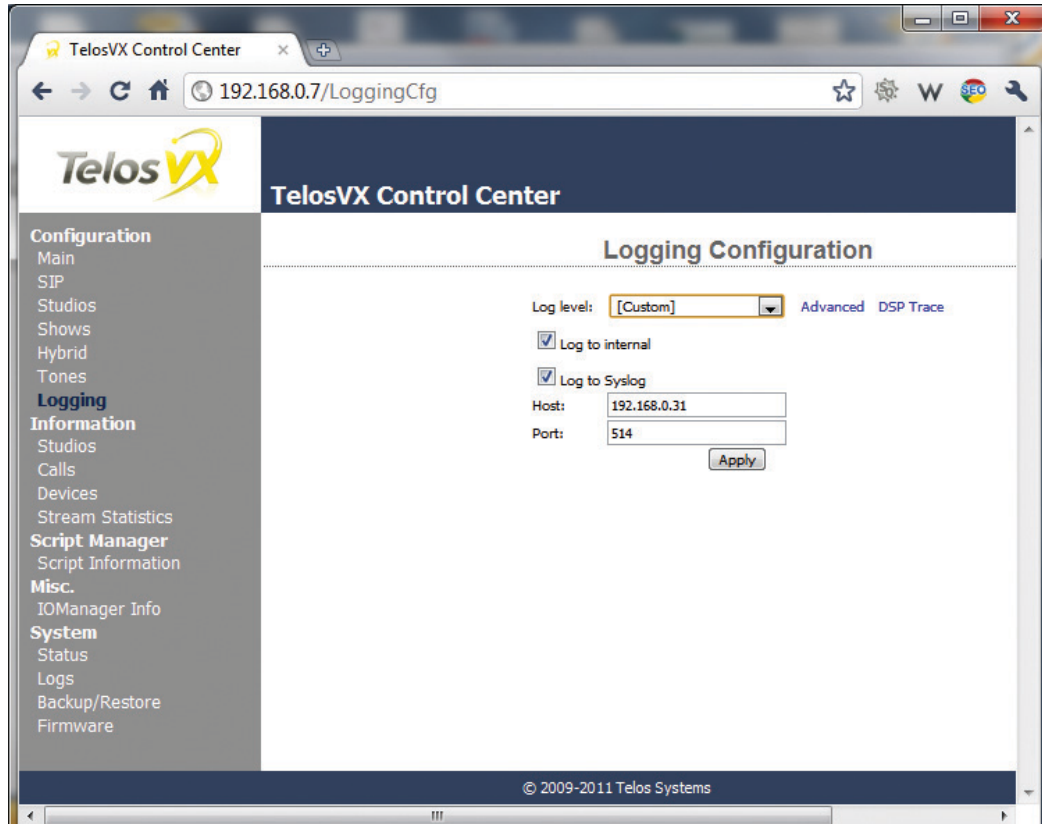

The VX's logging capability is a powerful tool to track down problems –even those due to operator error – not that that ever happens.

In the *Logging* config page you determine where logs are stored and how much detail is recorded.

You can choose to store logs inside the VX or to an external PC on the network that is set up to handle Linux standard syslogs

- If you choose the internal option, log messages will be kept in the VX's RAM, so are limited in size. The advantage is convenience: You can view internally-stored logs with the *System* page log section, by default at <http://192.168.0.7/log>, A typical log is shown in the screen capture below.

For basic troubleshooting, choose **Log to Internal**, then go to the *Log* page, clear all existing messages, then place a call or make the operation that's causing trouble. Then return to the Log page to see the entries

While you might be able to understand the log messages after some effort, we don't expect you to do so. These are mostly intended for our support people, who would advise you as what settings to use for the capture and then interpret the result.

With **Log to Syslog**, log messages are sent over your network to the Syslog server. Enter the IP address for your syslog server. Syslog servers need not be Linux machines. You can install a syslog server on a windows PC. One simple Windows app is at <http://www.kiwisyslog.com/>.


A typical setting for diagnosing SIP problems would be to set the log level to **Debug (extended)**. Fewer log messages will be generated if you set level to **Debug (basic)** Easier to read, but maybe missing detail that you need.

If you want to adjust logging in detail, go into the *Advanced* page and select which modules to log, then select the DEBUG level for the module you want to trace. For example, if you want to trace what VX Producer or VSet is sending to the Engine, you might chose to select LWCPBE module log level to DEBUG.

The three most interesting modules to log are:

- ◆ AIF - VX front end communications with VX DSP part
- ◆ CPSIP + SIP - SIP messages
- ◆ LWCPBE - LWCP protocol for VX control

Internet standard Network Time Protocol (NTP) is used to provide an accurate timestamp to the events captured in logs. For accurate timestamps, you need to have an NTP server accessible on your network and its IP address properly configured on the *System* page.

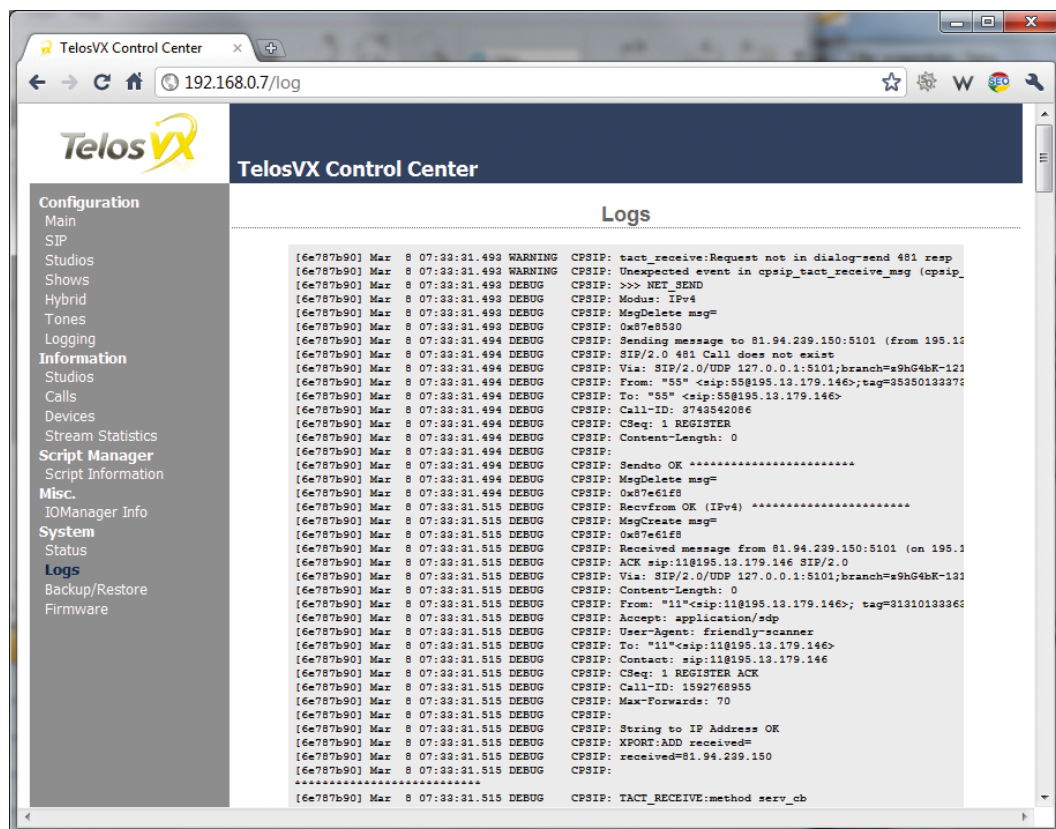



## Firmware updates

The screenshot shows the 'TelosVX Control Center' interface. On the left is a navigation menu with categories: Configuration, Information, Script Manager, Misc., System, and Firmware. The main content area is titled 'Hardware and Firmware' and contains a 'Firmware Upgrade' section with a 'New firmware image:' field and 'Browse...' and 'Upload' buttons. Below this is a 'Firmware Version' table with 5 slots, each showing version, hardware ID, and date. Slot 5 is marked as '(Active)'. A note at the bottom states: 'Note: You have to reboot the system for changes to take effect.'

Slot №	Firmware Information	Control
Slot 1:	ver. 0.4.0.0 (r7716 (k2.6.17.14, pce7166)) - Wed Nov 17 2010 16:00:34	Activate Delete
Slot 2:	ver. 0.4.1.0 (r7771 (k2.6.17.14, pce7166)) - Wed Dec 01 2010 11:26:04	Activate Delete
Slot 3:	ver. 0.4.1.0 (r7789 (k2.6.17.14, pce7166)) - Fri Dec 03 2010 12:39:08	Activate Delete
Slot 4:	ver. 0.4.3.0 (r8165 (k2.6.17.14, pce7197)) - Thu Mar 03 2011 11:48:57	Activate Delete
Slot 5:	<b>ver. 0.4.3.0 (r8165 (k2.6.17.14, pce7197)) - Thu Mar 03 2011 11:48:57</b>	<b>(Active)</b>

New firmware for the VX Engine is first obtained from Telos via email, Internet download, etc. It is then uploaded to the VX Engine using this page. You can have as many as five stored in the Engine at one time. On this page, you choose which of them will be active. Reboot the Engine after activating new firmware.

## Backing up and restoring Engine configuration

The screenshot shows the 'TelosVX Control Center' interface. On the left is a navigation menu with categories: Configuration, Information, Script Manager, Misc., System, and Backup/Restore. The main content area is titled 'Configuration Management' and contains three sections: 'Backup' with a 'Backup Settings' button; 'Restore' with a 'Restore Settings' button, a 'Browse...' button, and a checked checkbox for 'Keep current network settings'; and 'Reset' with a 'Reset to Defaults' button and an unchecked checkbox for 'Reset network settings'. A note at the bottom states: 'Note: The system will automatically restart after the configuration is loaded/reset.'

## Backup/restore configuration settings

The backup file for configuration settings is stored on your local machine or on a removable drive attached to it.

VX also works with Axia iProbe, the automated IP-Audio network management software. VX Engines appear in iProbe, just like any Axia device, and can be backed up and restored in the same manner.

When restoring, either from backup or to factory defaults, it is possible to keep the current network settings intact. Note that VX will automatically restart to apply the new configuration.

## VSet Phone Configuration

The screenshot displays the VX Phone configuration web interface. The browser title is "VX Phone" and the address bar shows "VX Phone 0.9.7.181 (build Nov 27 2009 17:59:10)". The interface is divided into several sections:

- Screenshot:** A section with a "Take screenshot (png):" label and a "Screenshot" button. A warning below reads: "Warning: System will pause while sending screenshot."
- Config:** A section with a "Backup config (xml):" label and a "Backup" button. Below it is a "Restore config (\*.xml):" label with a text input field, a "Browse..." button, and a "Restore" button. A notice below reads: "Notice: If the new config has different IP address you'll have to reopen the web page from the new IP."
- Firmware Upgrade:** A section with a "Firmware image:" label, a text input field, a "Browse..." button, and an "Upgrade" button. A notice below reads: "Notice: Firmware will be uploaded to inactive bank."
- Firmware Version:** A section showing two banks:
 

Bank 1 <input type="radio"/>	ver. 0.9.7.164 (build Fri Oct 16 11:14:20 2009)
Bank 2 <input checked="" type="radio"/>	<b>ver. 0.9.7.181 (build Fri Nov 27 15:31:06 2009) (active)</b>

 Below the table is a "Change bank" button and a warning: "Warning: System will reboot after changing active bank."
- User password:** A section with three labels and corresponding text input fields: "Old password:", "New password:", and "Repeat new password:".

# 3 Operation

## VSet Operation




### Select Studio and Show

If these have not been already selected, this should be done as the first step before using the VSet. Press the Menu button to access the menu functions. The LCD will show the various items that can be changed. Select the studio and show you want and then exit the menu by pressing the Menu button.



## Set Talent or Producer Mode

The VSet should be set to Talent mode when it is located in the studio and is used to put calls on the air. Producer mode is for a VSet that is being used by a producer to screen calls. In Producer mode, calls cannot be put on-air and are protected from being dropped. The function of the right line button column is different in the two modes to serve the needs of each type of operator, as described below.

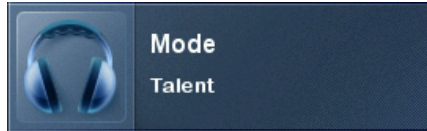

Press the menu button to access the menu functions. The LCD will show the various items that can be changed. Select Talent or Producer and then exit the menu functions by pressing the menu button.

## The Line Info Display

Each line has a corresponding portion of the LCD display to the right of the line button that shows status and info about that line.



### Next indicator

The '>>' symbol. Marks the line that will be taken when the **next** button is pressed.

### Fader number

The yellow/orange rectangle near the status icon.

### Line name

The first text line. This is defined in configuration using the VX Engine's control center web GUI.

### Caller ID

Caller ID will be displayed on incoming calls if it is available. Outgoing calls will show the number dialed. The green arrow to the left of the text points left for incoming or right for outgoing. Calls that are blocked or that come from lines without caller ID may display 'anonymous'.

## Time

The length of time the call has been ringing-in or on hold.

## Action 'hint'

(None active in the graphic.) Shows what line will be affected by drop and hold. Choose the line you want to drop or hold after pressing either of those buttons. This is shown only when more than one is possible; this step is not needed when only one line is possible, when the line would be dropped or held immediately.

## Line Status Icons

### Dialing



Shows when you are using the keypad to dial an outgoing call.

### Outgoing call in-progress



The icon will be animated with the white highlight moving around when a call is in the process of being connected.

### Ringing-in



### On-air



### On-air and locked



### On handset



**Hold****Ready Hold (Screened Hold)****Used Elsewhere (in another studio)****Line is blocked**

## Line Button Columns

Each line has 2 associated buttons to the left of the LCD.

Pressing a left column line button puts a held or ringing caller on the handset.

Press the right column button to put a held or ringing line on air, dropping any other unlocked calls. If a call is already on the air, pressing the right button locks the line, or if already locked, unlocks it. That is, it toggles between the two states. Not to worry, we've made it difficult to accidentally drop a call. Call screeners or producers should use the Ready Hold button (the one with the checkmark) to put lines in ready hold mode and assign priority for the Next function. See "Next" Button and function.

Ready hold works like normal hold, except the line status icon has the checkmark to indicate to operators that a call has been determined to be ready for air, normally by a producer/screener. The Vset must be in Producer mode in order to use this key.

**Tip: You can re-order the next priority queue at any time. Put lines in Ready Hold - even those already on Ready Hold - in reverse order from the order you wish to air them. First, Screen hold the call to be aired last, then the call to be aired second to last and so on. You would screen hold the call that you want to be aired next, last. At first blush, this may seem confusing, but it makes sense when you remember that the call held the longest goes first to air.**

## Hold Button



Holds a call that is ringing, on the handset, or on-air. If more than one line is in this category, there will be a small hold icon near the status icon on the lines that could be held. Press the line that you want to hold.

## Drop button



Drops a call that is active on the handset, or on-air. If more than one line is in this category, there will be a small drop icon near the status icon on the lines that could be held.

Press the line that you want to drop.

## Lock

Normally, taking a call to air causes any others on-air to be dropped. If you need to conference two or more calls, you can use the lock function.

Press an already on-air line button to lock it. The line status icon will change to display the locked symbol. Pressing the button again unlocks the line and the lock icon goes away.

Locked calls remain on-air until unlocked and then another call is taken to air or the call is dropped or held.

The Drop and Hold buttons have no effect on a locked line.

**Tip: If configured in your system, using fixed lines is another option for handling “guest” or “VIP” calls that need to say on-air while you switch between other callers. With fixed lines you’d have a dedicated console fader for each of these calls, so you can control volume, and switch them independently in and out of the conversation, etc.**

## Next Button and Function

The Talent next priority is:

1. longest waiting ready hold
2. longest waiting hold
3. longest ringing-in

The producer can manually override these and assign priority as desired.

The producer mode next priority is:

1. longest ringing-in

In producer mode, **Next** does not take any held lines.

## Block All



Pressing this button will cause all inactive and ringing lines to be dropped and blocked from accepting any calls. Calls on-air, on the handset, on hold and the fixed lines will not be af-



ected. The usual application for this function is to let you prevent early callers from getting in on contests until after you've made the announcement and released the lines to accept calls.

When block all mode is selected, as lines become available (they stop ringing or drop off) they will automatically "go busy".

**Pressing Block All again will release the lines and allow incoming calls.**

## Numeric Keypad and GO Button

For dialing out, either on the handset or on-air. The keypad works during an active call to generate tones for voice mail and other services.

While a number is being composed, the digits will appear in the line info field. After a number is entered, the **GO** button initiates the connection, in similar fashion to a mobile phone.

## Re-dial Function

After selecting a line, press the **GO** button before any digits are dialed. The last dialed number appears in the line info field. Pressing **GO** again causes dialing to start.

## Fader Assign

Normally, when a call is taken, it goes to fader 1, but you can assign it to any of six console faders. (The number of possible faders depends upon your specific installation and configuration.) When a call is on-air, or before it is taken, the round fader assign buttons to the right of the LCD can be used to move the call to the desired fader. The number in the yellow rectangle in the line info field shows you which fader is or will be used.

Fader assign is configurable to be enabled or disabled to keep the LCD uncluttered for people who will not use the feature.

In our older on-air phone systems, we were limited by the cost of the day's technology to one or two hybrids, so we only used one or two console faders. With the VX system, this limitation is removed. That means that you can assign a fader to each call if you want to do so, allowing independent control of each call's volume.

## Firmware Upgrades

You can upgrade firmware for your VSet by using a web browser and downloading the firmware from Telos. Support may give you a link in email, or you can find the latest versions at the Telos website. After downloading the firmware image, point your web browser to the IP address of the VSet that you wish to upgrade (the default password is <blank>, and the username is "user"). Then, browse to the firmware image location on your PC (desktop or downloads folder is common) and select Upload. To activate the new firmware, select it in the browser and the VSet will reboot. When it restarts, it will be running the firmware version that you selected.



## Take it Easy

We've built a lot of flexibility into the VX system to support all the sophisticated things you might want to do. But you don't have to use all the fancy-pants stuff when you don't need it and a simpler subset will do.

In the simplest case, when you are a talent supported by a producer, you could just use the **Next** and **Drop** buttons. You press the Next button to take calls in the sequence determined by your producer and you press the **Drop** button when you are finished with your last call and you want to stop taking more.

One step up would have you pressing the right column line buttons to select the calls you want, one at a time. Again, when you are finished taking calls, you would press **Drop**. You could use the left column line buttons to talk with callers on the handset.

At the next level, you would use either the lock function or the fixed line capability to conference calls.

## Some Common Questions

**Question:** "I can't place a call. After I dial, nothing happens! What's up?"

**Answer:** Don't forget to press the green "Go" button after dialing.

**Question:** "Why don't I hear any audio after pressing a line button in the handset column (left column)?"

**Answer:** Double-check that the handset cord is plugged into the handset jack (not the headset jack) on the VSet.

**Question:** "Why can't I put a call on the air? When I press the right column line key, nothing happens!"

**Answer:** Put the VSet into "Talent" mode. When the VSet is in "Producer" mode, calls cannot be placed on the air from that VSet (so as to prevent accidental call drops, or placing the wrong caller on the air).

Your opinions and ideas are always very welcome at Telos. Please share them with us at [support@telosalliance.com](mailto:support@telosalliance.com).

## Operation with the Element Console

The Axia Element console can be used to control both fixed and selectable lines from the VX. Entering the VX Engine IP address connects all the needed logic functions - line selection is the main one, but muting for the VX sets is also handled. Any VX set assigned to a studio and show shared with an Element will mute its ringer when the Element tells it to. Nice, eh? Selectable lines use the Element's Call Control Module as the line selector. It can be used in either 12 or 24 line mode, depending upon configuration. In the former, two columns/faders are used; in the latter, one column/fader. The same module is used for either 12 or 24 line

operation. When 12 line mode, the left column of Status Symbols displays the line number and the right displays status. When configured in 24 line mode, each active line is numbered with the number being shown when the line is idle (replacing the idle "dot"). In the 12 line mode, the left row of buttons assigns lines to the left fader and the right row to the right fader. In the 24 line mode, both rows assign lines to the left fader. To assign to the right fader, push **on, off** or preview on the right fader which activates flashing and displays **PRESS LINE** on the alpha display. Selecting a line assigns it to the right fader. To cancel the mode before selecting a line, press the right **drop** button or the right channel **off** button.

When you need to be able to assign selectable lines to more than one or two faders, the Call Control Module can be expanded using one or more Phone Fader modules. The additional Phone fader channels will work like the right fader on the Call Control Module. You can quickly build multiple-line conferences on the fly, while keeping the usual one-call-after-another auto-drop style operation on the left fader.

In all cases, the keypad for dialing is on the Master Module. Pressing an **options** key on a fader channel with a phone line assigned activates the keypad in the master section and opens up some other phone-related options, such as the auto dial list. The keypad is also automatically activated to the fader channel that last seized a phone or codec line. However, when options is active on a phone or codec module, the keypad remains locked to that channel until options is deselected.

Usually, a VSet phone will be used in the studio along with the console to allow handset conversations. Taking a line on the VSet will disconnect it from the Element, and vice-versa. The call will not be dropped.

Fixed lines can be configured directly to Element faders. Phone Fader modules are preferred because the **set, hold** and **drop** buttons are useful. Note that using only fixed lines and Phone Fader modules would give you "Euro-style" operation, where each line has its own hybrid/fader and there is no line selector. There is no limit to fixed lines vs. selectable in the VX, so you can have as many as you have available console faders.

Mix-minus is generated automatically in all Axia consoles. In Element mix-minus AUTO mode, the feed-to-source will be generated by the PGM-1 bus "minus" the caller audio when the channel is ON. When the channel is OFF, Talkback will be the source. Alternatively, Feed-to-Source can be fixed to P1, P2, P3, P4, SA, SB, SC or SD.

You can assign a line to a specific fader by pushing the Set, OFF, ON, Hold, or PVW button on the fader channel before selecting the line. The fader channel alpha display will toggle between source type and LINE N after a line is assigned.

# 4 The VX Producer Application

## Introduction

The VX Producer application integrates:

- ◆ Call screening and production communication
- ◆ Recording, playing, and editing calls
- ◆ A 'softphone' for talking with callers off-air


Normally, it would be used by Producer/call screeners to communicate with callers and the on-air talent. Each would have a copy running on a PC near to them.



## Installation

The standard Windows installer is used to install the VX Producer application and the .Net framework, if needed. It also can install the Audacity audio editor.


Remember that since the VX uses Livewire audio to carry the "handset audio" to your VX producer PC, that the PC needs to be on a LAN subnet that carries Livewire traffic (the same subnet as the VX engine Network LAN port).

You'll need at least Windows XP Service Pack 2.

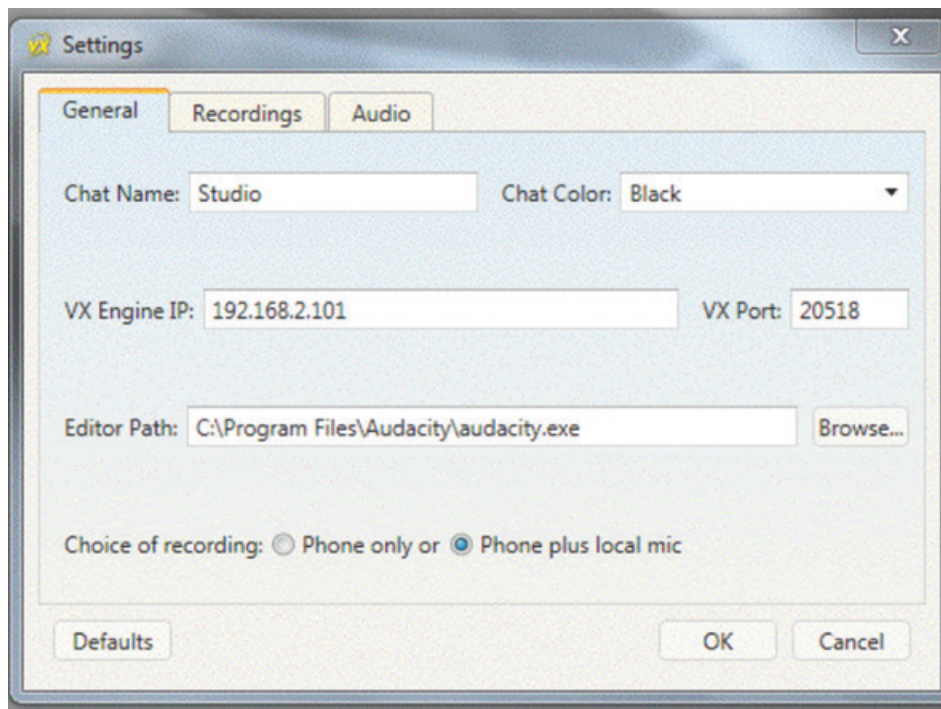

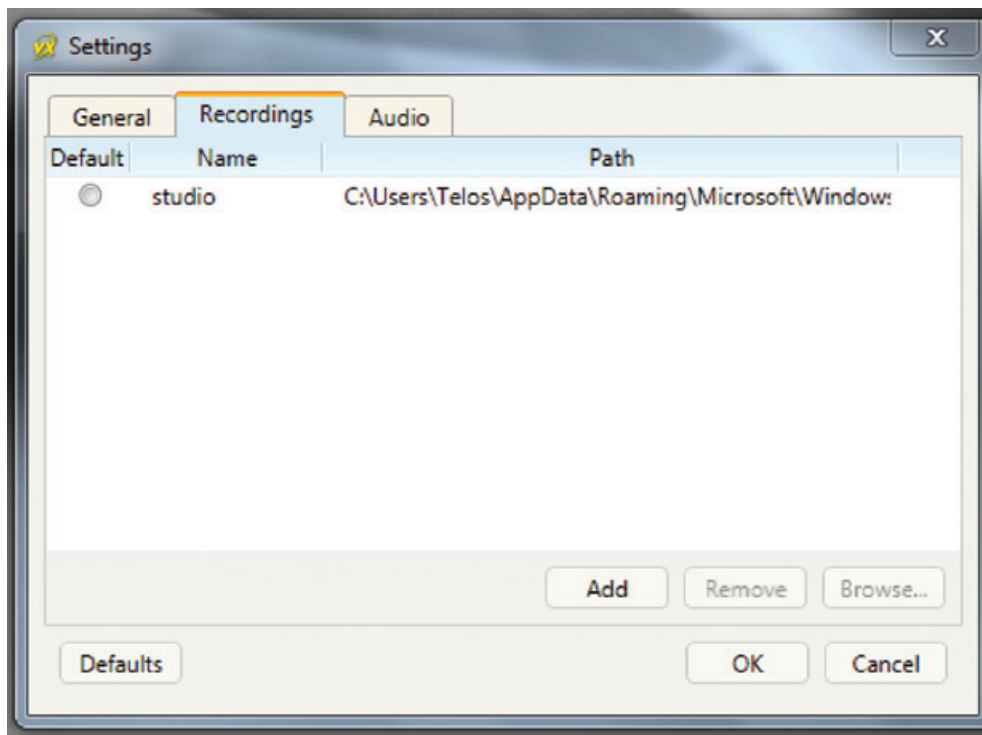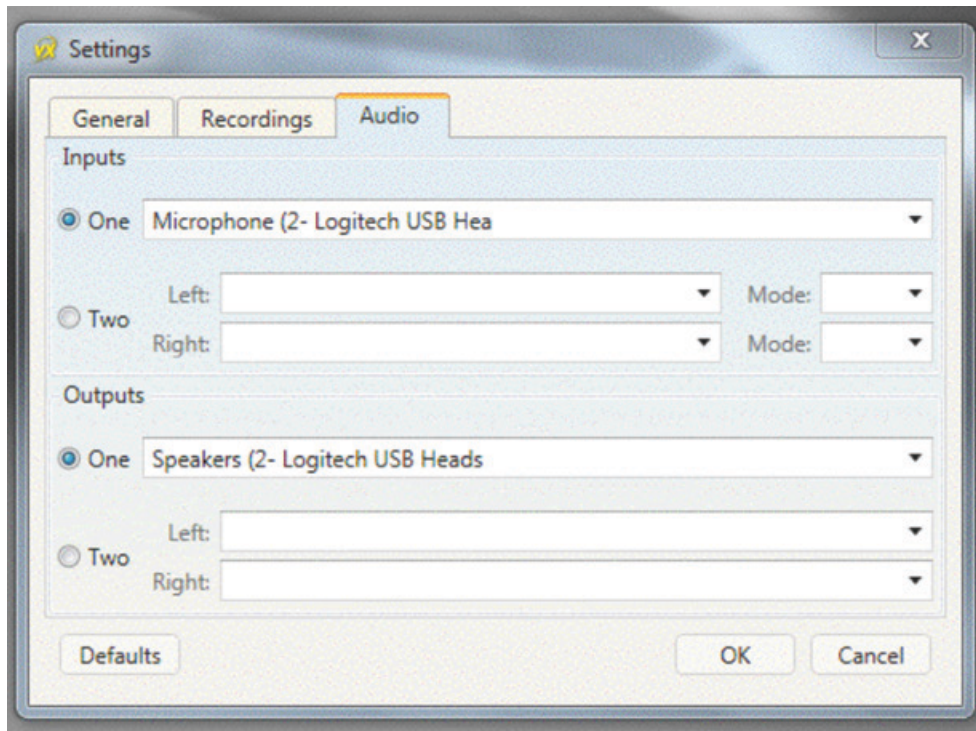

## Set-up: Studio and Show

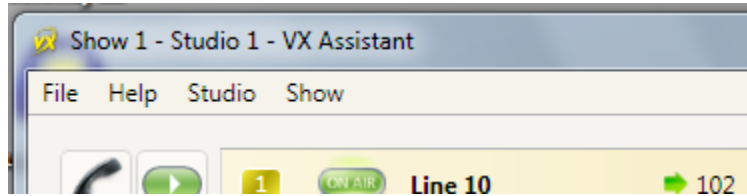

## Managing Calls

The main window shows a list of the lines that are available for the selected show. It is divided into *selectable* and *fixed* line groups. (if both are configured for the selected show).

Near the bottom of the screen is a tabbed list box, controls, and an audio level meter that are used for the recording and play functions.


At the lower right is a window used for text chatting between the producer and talent.

## Handset



Press the handset button to the left of any line to take the call to the 'handset' that is connected to the PC running the *VX Producer* application. (Often this will actually be a headset/mic.)

If no call is ringing-in, the system assumes you want to dial out and opens a window to let you do that.

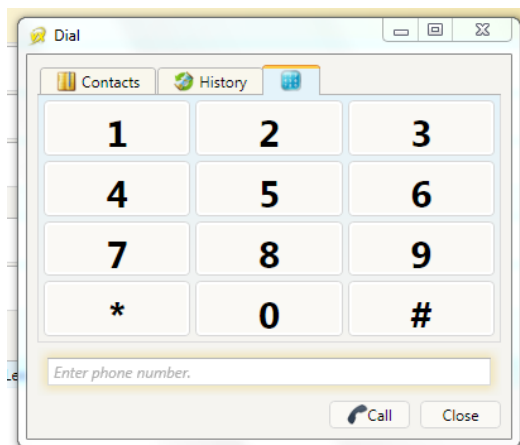

**Contacts**

**History**

**Dialing**

## On-air



Pressing this button takes a call to the studio mixing console. Your operation of the console determines whether the call is actually on-air or sent to preview or to somewhere else. Usually the studio mic (or microphones) are used to talk with a caller, whether on-air or not.

If no call is ringing-in, the system assumes you want to dial out and opens a window to let you do that.

## The Line Info Field

Fader number. Before a call is taken to air, this shows which fader it will be assigned to when it put on-air. After a call is on-air, this shows which fader is assigned to the call. The number changes when you move a call using the fader assign buttons.

Next indicator. Shows which call will be taken when you press the **Next** button.

Line status icon.


Line name. This is the name that was given to the line during show configuration.

Caller info. Text you enter into this area will appear on any other *VX Producer* applications and VSets that are assigned to the same studio. It automatically replaces the line name text.

Telephone number. Shows incoming (caller ID) or outgoing (dialed) number. The small arrow near the number points left for incoming and right for outgoing numbers. It automatically replaces the line name text.

Time. Shows time that a call has been waiting on hold, or if on-air, how long it has been on-air.

## Drop, Hold, and Hold Ready Buttons

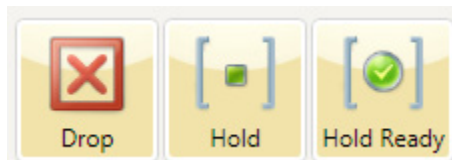


**Drop** disconnects a call that is ringing, active on the handset, or on-air. If more than one line is in this category, they will all be highlighted. Press the line that you want to drop. Or select the line you want to drop to highlight it and then press **Drop**.

**Hold** puts a call that is ringing, active on the handset, or on-air into hold. If more than one line is in this category, they will all be highlighted. Press the line that you want to hold. Or select the line you want to hold to highlight it and then press **Hold**.

**Hold Ready** puts a call that is ringing, on-air, on the handset, or on hold to the hold ready (screened) state.

## Selectable Lines

### Lock/Unlock Button and Function

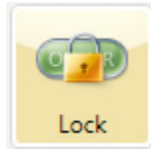

Normally, taking a call to air causes any others on-air to be dropped. If you need to conference two or more calls, you can use the lock function.

Press an already on-air line button to lock it. The line status icon will change to display the locked symbol. Pressing the button again unlocks the line and the lock icon goes away.

Locked calls remain on-air until unlocked and then another call is taken to air or the call is explicitly dropped or held.

The **Drop** and **Hold** buttons have no effect on a locked line.

**Tip:** If configured in your system, fixed lines will probably be the better option for VIP calls that need to say on-air while you come and go with others. You will have a dedicated console fader for each of these calls, so you can control volume; switch them independently in and out of the conversation, etc.

### Fader Assign Buttons




In older on-air phone systems, we were limited to one or two hybrids (audio paths), so we only used one or two console faders. With the VX system, this limitation is removed. That means that you can assign a fader to each call if you want to do so, allowing independent control of each call's volume.

Normally, when a call is taken, it goes to "fader 1", but you can assign it to any of six console faders. (The number of possible faders depends upon your specific installation and configuration.) When a call is on-air, or before it is taken, the round fader assign buttons to the right of the LCD can be used to move the call to the desired fader. The number in the yellow rectangle in the line info field shows you which fader is or will be used.

Fader assign is configurable to be enabled or disabled to keep the LCD uncluttered for people who will not use the feature.



## Next Button and Function

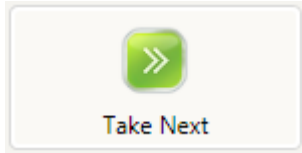

The Talent next priority is:

1. longest waiting ready hold
2. longest waiting hold
3. longest ringing-in

The producer priority is:

1. longest ringing-in

The producer can manually override these and assign priority as desired.

## Block All

Pressing this button will cause all inactive and ringing lines to be dropped and blocked from accepting any calls. Calls on-air, on the handset, on hold and the fixed lines will not be affected. The usual application for this function is to let you prevent early callers from getting in on contests until after you've made the announcement.

Pressing Block All again will release the lines and allow incoming calls. The specific lines blocked are determined by install-time configuration. Normally, VIP and hotlines are excluded.

## Fixed Lines

These are usually used for VIP and hotlines. They have a different operating style from selectable lines and are independent from them. Here, each line has its own - fixed - fader. These will have been assigned when the system was installed. Taking a line will not drop others that are active. Drop and Hold need to be explicitly applied.

Lock has no effect on fixed lines, since they are effectively always locked. Block All is usually configured to have no effect on fixed lines. Fader assign has no effect, since faders are permanently assigned.

Note that a system could be configured to have only fixed lines. This would result in the operating style that many large European broadcasters favor. Each line would have its own 'hybrid' and associated fader.

Fixed lines also offer a selectable "auto answer" feature. This can be used for automatic feeds, news recording or "filing lines", or "listen line coupler replacement.

## Recording, Editing, and Playing Calls

Pressing the **Record** button starts a recording of the currently active phone call.



In talent mode, this will be the “on-air” call. Usually, the audio will have been routed via the studio mixing console.

In producer mode, this will be the call on the handset.

You can choose if both the local mic audio and the phone are recorded or only the phone. In the former case, a stereo file will be produced.

Enabling **Auto Record** causes the recorder to automatically make a new recording each time a call is taken.

File names are automatically created by the system, but can be changed by writing over the default text after a right mouse click. The file will appear in the tabbed list box determined by Settings. Normally, a VX Producer in producer mode will put recorded files under the Producer tab and in studio mode, under the Studio tab (naturally). You can move files among the tabbed lists by either dragging them to the destination tab or using the **Send** button and drop-down list.

The meter to left of the tabbed file list window shows the audio level as a recording is being made.

## Playing

Select a file by clicking on it. Press the **Play** button. The audio will be sent to the PC’s output configured in Settings. Depending on the Settings configuration, the playback will be available on PC-connected loudspeakers or headphones, or it may be routed to a studio mixing console fader.


## Editing

Select a file by clicking on it. Press the **Edit** button. The audio editor configured in Settings will open and the selected file will appear in the editing window (Audacity is the default). Audio input and output will be according to the editor’s configuration. Depending on the configuration, the playback will be available on PC-connected loudspeakers or headphones, or it may be routed to a studio mixing console fader.

A stereo file will be passed to the editor when both a mic and phone audio are recorded. A mono file will be passed when phone-only record mode has been selected.

## Files

The recorded audio files are physically stored on the local PC or on another PC or server accessible over the network. The location depends upon the file path configuration in the *VX Producer* settings menu.

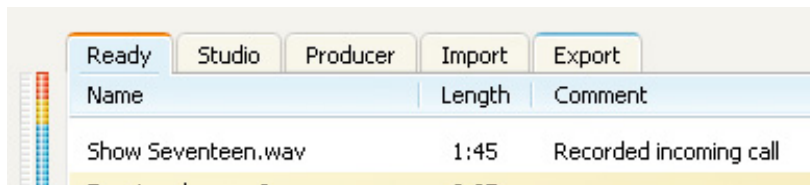


By default, files created in the studio will go the list under the Studio tab and files created by the producer will be saved under the Producer tab. The Ready tab holds files that are ready for air. The Import and Export tabbed lists are used to accept and send files to other people on the network. Again, the tab names and file locations depend upon your settings.

The files are in standard .wav format that may be accessed by a variety of audio applications. Standard Windows file sharing allows access to the files across the network at the various machines.

## Host/Producer Text Chatting

The window at the lower right lets people within a Studio communicate with each other. Type text into the lower field and it will appear on any other *VX Producer* applications selected to your studio.

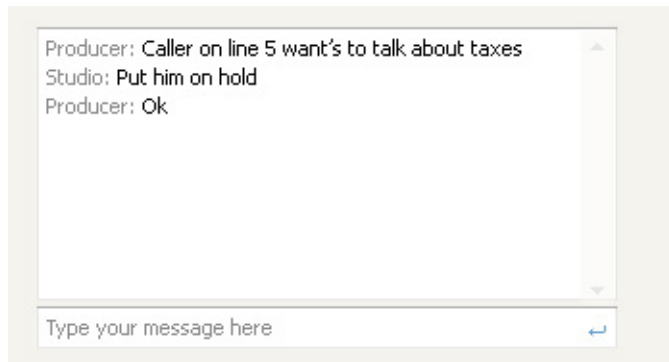

The 'Studio' and 'Producer' identifiers are added automatically. The colors for them can be configured in settings.

Tech note: The VX Engine works as the "chat server".


# 5 Notes, Resources, Additional Information

## The Acoustic Echo Celler

You can learn how to connect the Acoustic Echo Celler to your studio equipment in the *Studio Configuration* section. Here, we provide more detail on how it works and how to use it.

A common annoyance in radio studio and TV studio operations is the feedback that often results from using a loudspeaker to listen to telephone calls. This comes from the acoustic coupling of the audio from the loudspeaker to the studio microphone that feeds to the caller. As well, echo might be heard by the caller. When a caller talks, the phone audio bounces around the studio and gets sent back. Due to the time-dispersion caused by the room and the round-trip transmission delay, this acoustic echo is distracting to the caller.

In the past, when analog Telco lines were the norm and mobile phones were not yet attached to everyone's ears, feedback was the usual problem, not echo per se. In earlier Telos hybrids, we addressed that with a combination of ducking, frequency shifting, and a basic canceller. That worked pretty well in its day, but Mobile phones and VoIP connections impose much more delay – and the problem has become more challenging. With the multiple-hundreds of milliseconds latency that can occur these days, an effective canceller must be part of the system when loudspeaker monitoring is expected.

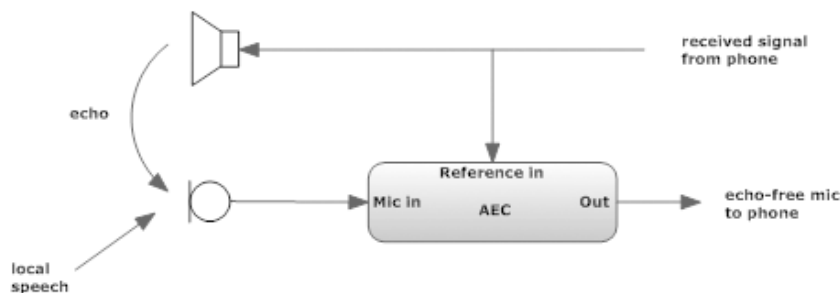

Fortunately, technology has come to the rescue. Modern Acoustic Echo Canceling is the answer. The audio at the studio microphone consists of the host's voice combined with the unwanted telephone audio that is delivered to the room via the loudspeaker. An AEC removes the loudspeaker audio, leaving only the host. It does so by synthesizing the transfer function of the acoustic path. The reference (loudspeaker) signal is passed through this function and subtracted from the microphone signal, thus canceling the echoed telephone part of what the microphone picks up. AECs have been used in high-end audio and video conferencing systems for many years. High-end broadcast hybrids and on-air systems such as the Telos Delta, 2x12, and Nx12 have included a limited form of AEC. But only recently has AEC technology advanced to the stage where it is truly effective. Thankfully, it comes just when the added delay of mobile and VoIP connections make it near essential. The good news has been a result of both breakthroughs in the design of AEC algorithms and the ever-increasing power and lower-cost of the processor chips that are needed to implement them.

These latest-generation cancellers are a miracle. You can have ear-splitting volume with very little of the caller audio making it back to the other end. They work with up to 20kHz audio bandwidth, so are ready for the wideband VoIP codecs now coming online. And they solve a longstanding problem: Older 'time-domain' AECs depended upon the acoustic path remaining invariant and could quickly degenerate into feedback when a microphone was slightly moved or the acoustic path changed from some other cause. The 'frequency-domain' technology used by the new AECs works just fine with moving microphones and other echo path changes.

This new AEC technology is particularly useful for TV studio applications where it can be impractical to have talk show guests using earplugs. Today's high-performance AECs let talent and guests listen to phone calls on foldback loudspeakers.

AECs are provided within the VX Engine, but they are not connected into its internal signal paths. This is because they need to be placed in the signal paths between the studio loudspeakers and microphones. With Axia mixing consoles, the insert and return points are provided with Livewire channels and are installed by configuring the appropriate channel numbers. The AEC can be used with Non-LW consoles via LW Nodes connected to the appropriate audio signal paths.


(??) AECs are possible from a single VX Engine. Additional Engines could be used to provide more. Please contact us to discuss your options, should you want to do this.

There are three connections for each AEC:

- ◆ Microphone input (from the studio mic)
- ◆ Microphone output (feeds the console mic input that goes to the phone system)
- ◆ Reference input (parallels the signal that feeds phone audio to the studio loudspeaker)

If multiple mics are used, there must be an AEC dedicated to each of them.

The AEC cancels audio that is put on the reference input so that it does not appear on the output. Without canceling, the output would be a mix of the studio mic and the delayed/echoed phone audio. After cancellation, only the mic audio will be present. That is; it creates a replica of the acoustic path, then passes the reference audio through it and subtracts the resulting filtered signal from the microphone feed.

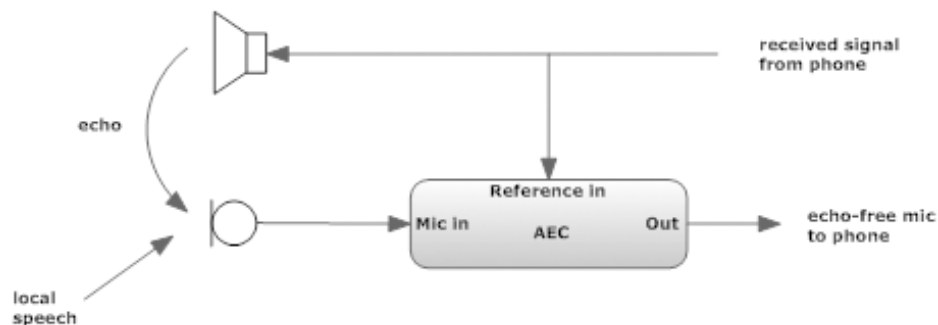

The AECs are full-range and low-distortion, so they can be put in an air signal path if need be. Nevertheless, we recommend that they be inserted only into the mic-to-phone path if possible, avoiding causing any trouble to mic-to-air fidelity. (There could be subtle frequency response alteration depending upon the echo path and other factors. Noise might also be added.)

In a studio equipped with an Axia console, the needed signal connections are available via Livewire. Configure both the console and the VX Engine with LW channel assignments so that the correct connections are made. In a non-Axia studio, route the AEC connections to a LW Node by assigning the appropriate LW channels at both ends, and then connect the audio to/from the mixing console via analog or AES3 to the Node.

To check if an AEC is working, call into the system and switch on the mic and loudspeaker. Adjust the mic level to normal and the loudspeaker to reasonable volume. Talk into the phone; listen for echo and assure that none is audible.

## Telco Services and Interfaces

### VoIP: SIP Trunking

While it remains a niche in early 2011, SIP trunking is growing rapidly in support from both PBX vendors and carriers. Over time, this will almost certainly appreciably reduce the use of the older POTS and T1 trunking. Eventually, it may replace it completely.

Whether the gateway to the PSTN is at your physical location or at another site should make no difference – as long as the IP path between you and the gateway has guaranteed QoS with sufficient bandwidth to support the maximum number of active connections you expect to have. In the case that the IP link is to be used for both telephony and data, the system must be designed so that phone calls have priority. In order to ensure this, there must be only one IP vendor between you and the PSTN, and this vendor must guarantee QoS in a properly written Service Level Agreement. Any time that IP service crosses from one vendor to another, all bets are off as to both the probability of achieving consistent good quality and having any chance of getting problems resolved.

The other thing to look out for is what codec will be used. For calls that ultimately are carried by the PSTN, only the native g.711 codec is acceptable for broadcast applications. Anything else would involve transcoding and an unacceptable reduction in fidelity, especially audible when mobile phone calls are involved. These already have poor quality due to their low-rate 14.4kbps codec. Passing this through g.711 within the PSTN and then yet another codec on the way to your studio over an IP link is asking for aural trouble.

The VX natively supports the g.711 A-Law, g.711  $\mu$ -Law, and g.722 codecs. Almost all PBXs and gateways support these formats.

Finally, you need to be sure that your equipment and the carrier's gear can properly communicate. While SIP is a standard, vendors often enhance it with extensions that are not universally supported.

One development that could help is a project called SIPconnect, undertaken by SIP Forum, a consortium of SIP vendors. The SIPconnect Interface Specification was launched by Cbeyond Communications in 2004 with support from Avaya, BroadSoft, Centrepoint Technologies, Cisco, and Mitel. It attempts to detail the interconnection specifications between IP PBXs and VoIP service provider networks. It specifies a reference architecture, required protocols and features, and implementation rules. It calls for the g.711 codec to be provided on all equipment and services.

## IP Centrex and Hosted PBX Services

Just as it shouldn't matter whether the PSTN gateway is on your premises or not, it also shouldn't matter where your IP PBX is located. This is the principle that allows IP Centrex services or hosted PBX services to happen. These locate the hardware at the service provider's site and remove the need for phone system equipment at your location. In the pure case, you would have only IP phones at your site, which would be plugged into an Ethernet switch, which would connect to the Internet via a router. The main advantage is that someone else is responsible for installation and maintenance of the back-end equipment. It might also be that a vendor of these services has invented a suite of applications that would be difficult to replicate at individual business sites.

## Number portability in the US and Canada.

Number portability regulations allow you to move your existing numbers to the service provider of your choice. Unfortunately, our experience is that "choke" exchange numbers cannot be ported. We've tried with various carriers - all with the same disappointing result: a call on the day of the port explaining that it can't be done.

## Circuit-Switched Interfaces

When you order or configure a gateway, you need to know what kinds of interfaces you will be using to connect to the Telco network.

### FXS/FXO

These are designations for the two ends of a standard analog POTS line. Most often these lines are used for basic home telephones. But they can also be used to link a PBX with a Telco central office.

- ◆ An FXS (Foreign Exchange Station) interface emulates a circuit supplied by a Telco Central Office. An FXS supplies talk battery and detects an off-hook condition. It generates 100Vac for a ringing indication. It provides dialtone and other call progress signals such as ringback and busy. It responds to DTMF (Dual Tone MultiFrequency) tones for dialing and may send caller ID information in modem-encoded audio.
- ◆ A telephone, and anything that looks like a telephone, is an FXO (Foreign Exchange Office) device. An FXO device signals an off-hook condition by drawing loop current. It responds to ringing voltage. It provides dialing, either by old-fashioned pulsed loop-interruption or by DTMF. It may detect caller ID.

An interesting limitation of FXS/FXO interfaces is that signaling from the FXS that a call has ended is sometimes not signaled, and the type of signaling varies around the world. In the USA, most Telco central offices interrupt the loop current when the call has ended, but some do not. And many PBXs do not. Eventually, dialtone will return, though, and this can be used as a disconnect signal, but there will be a many-second delay. This could cause *glare*, the condition where there is confusion between the CO and the PBX as to whether the line is free. A call could ring-in just when the PBX attempts to access the line for an outgoing call. In many other countries, an audio tone is sent on the line to indicate the end of the call. This lack of *disconnect supervision* results from the idea that there was no reason for a central office to hang up a phone by remote. This was a physical, human action performed by someone who knew that the conversation had ended and put reacted by replacing the receiver back in its cradle. The design was never intended to work for machine-to-machine connections.

Actually, there are two types of off-hook signaling. On a *loop-start* line, when a phone goes off-hook, the circuit is closed, and the central office detects the change in current. This is the common residential format. *Ground-start* signaling is a small modification to the scheme to permit disconnect supervision and remove the possibility of glare, where a PBX mistakenly takes a ringing-in line for an outgoing call. . In an idle circuit, the central office provides -48v on the Ring wire and an open on the Tip wire. From the PBX side, Ring is grounded first, then the central office circuit must respond by grounding Tip. The PBX senses this, releases its ground, and maintains the connection by drawing loop current.

## E&M Trunks

E&M trunks use two extra wires for signaling (the so-called *Ear* and *Mouth* connections). These solve the problems with glare and disconnect supervision. This scheme is nearly obsolete, but occasionally E&M interface cards are used to connect music-on-hold to VoIP PBXs. They are convenient for this purpose because the audio path is transformer isolated and there is no need to supply talk battery from the MOH source.

## T1/E1

These are basic digital interfaces to the switched voice network, and are widely used. This is especially so in the USA, where T1 is nearly standard for large PBXs. In Europe, ISDN PRI is more widely employed. T1 transports up to 24 voice channels, while E1 supports as many as 32. T1s are common in the USA and Japan, while E1s are provided by Telcos in most of the rest of the world. In addition to the audio, these digital circuits also carry basic signaling in CAS (Channel Associated Signaling) bits. This signaling emulates loop-start, ground-start, or E&M, depending upon configuration. Over a T1, 23 speech channels are offered, while an E1 provides 30. They actually have 24 and 32 channels, respectively, but one or two of the channels are reserved for signaling communications.

T1s can also be used for IP connections. In this case, all or part of a T1's 1.544kbps capacity is used as a transparent pipe from the local IP router to the ISPs equipment. The phrase *channelized T1* is sometimes used to distinguish a T1 that is intended for circuit-switched voice application. A *fractional T1* is a service that uses a portion of the line's full capacity. It is sometimes possible to order a T1 that is divided into a channelized portion and a data-transparent part for IP connectivity.

## ISDN PRI

ISDN PRI (Integrated Services Digital Network Primary Rate Interface) uses the same underlying circuits as T1s and E1s. However, it employs sophisticated out-of-band signaling, which allows transfer of information such as calling number, codec type, clearing causes, and such. (It's rather strange that non-ISDN T1 sends caller ID modem-encoded in the audio channel, no?) The speech paths are called B (*bearer*) channels, while the signaling is carried in D (*data*) channels. Almost all large VoIP gateways and PBXs support ISDN PRI lines. The signaling in the USA is a slightly different protocol than that used in Europe and other parts of the world. Your gateway will need to be set to match the protocol on your line. Normally in the USA, this would be NI-1 (National ISDN - 1), while Europe would use the Euro ISDN standard.

You might hear the term *QSIG* in the context of ISDN PRI gateways. This is a signaling protocol that is yet more sophisticated than ISDN's usual Q.931 protocol, and is layered on top of it. With the ascendancy of SIP, QSIG looks to be yet another valiant attempt falling by the wayside.

## ISDN BRI

ISDN BRI (Basic Rate Interface) lines offer two B channels, supported by one D channel. These were intended as a residential replacement for POTS lines or for small businesses. One application envisaged by its inventors was to allow a simultaneous voice call and data connection. With DSL providing much higher data rates, ISDN BRIs are moving ever closer to obsolescence. Nevertheless, when they are available, they could be useful for small installations that need only a few lines. Most VoIP gateways have cards to interface with these lines. As with PRI lines, take care to set the gateway's configuration to match the type of signaling that your line uses.

## SIP Compatibility

VX implements the basic set of SIP functionality described in RFC 3261, together with the related standards:

- ◆ RFC 4566 and RFC 3264 for describing and negotiating supported audio codecs
- ◆ RFC 3550 and RFC 3551 for audio transmission
- ◆ RFC 2833 codec for sending DTMF tones separately from audio
- ◆ RFC 2617 digest authentication

We have tested VX with different SIP providers, gateways, PBX's, soft- and hardphones, and other gadgets, to make sure it works out of the box. You will find a list of some of these in this very manual, and on our web site. We strongly recommend using VX together with a tested device, but sometimes it might not be an option.

Telco-provided SIP trunks are one such case. Chances are that these will work, "just like that." However, it is not possible to test every SIP-talking-thing out there, and different vendors tend to interpret some parts of the standard differently. SIP started as a simple text protocol to set up phone calls, but over it has grown quite complex. While we strive to do the right thing, no one is perfect, and it's possible that we have missed a line or two. If you are experiencing problems, let us know and we'll figure it out.

That said, there are a couple of things that VX isn't likely to support in near future. One of them using multicast for both SIP signalling and RTP. This is an optional feature in the SIP standard, not widely used, and disabled in VX because it can cause conflicts with Livewire, which is multicast, too. The second is telephone URI handling, which might sound surprising for a phone system. Don't worry, it's fine. Simply put, it means that VX identifies each line with a single SIP address (extension@server entered in the configuration), and expects that any mangling of numbers (like adding or removing prefixes, or changing between internal and external numbers) is done by a gateway or PBX. For VX to do that would require it to know a lot more about the phone network, and believe us, you don't want to configure that.


## Axia Element Console as VX Controller

The Element console makes a perfect partner to the VX. (With apologies to our colleagues in the Axia division, who would prefer to put that the other way 'round – "the VX makes a nice partner to the Element..." They would also point out that other Axia consoles, such as the IQ, are capable and compatible VX partners. Control and audio are tightly integrated for a talent-leasing all-in-one place control of telephone operations. Both selectable and fixed lines are supported. For the former. The Element's Call Control Module includes line select buttons and



status icons. For the latter, Phone Fader modules have a couple of extra buttons to manage the Telco lines.

Livewire makes it easy to connect the multiple inputs and outputs that the VX's multi-hybrid capability affords.

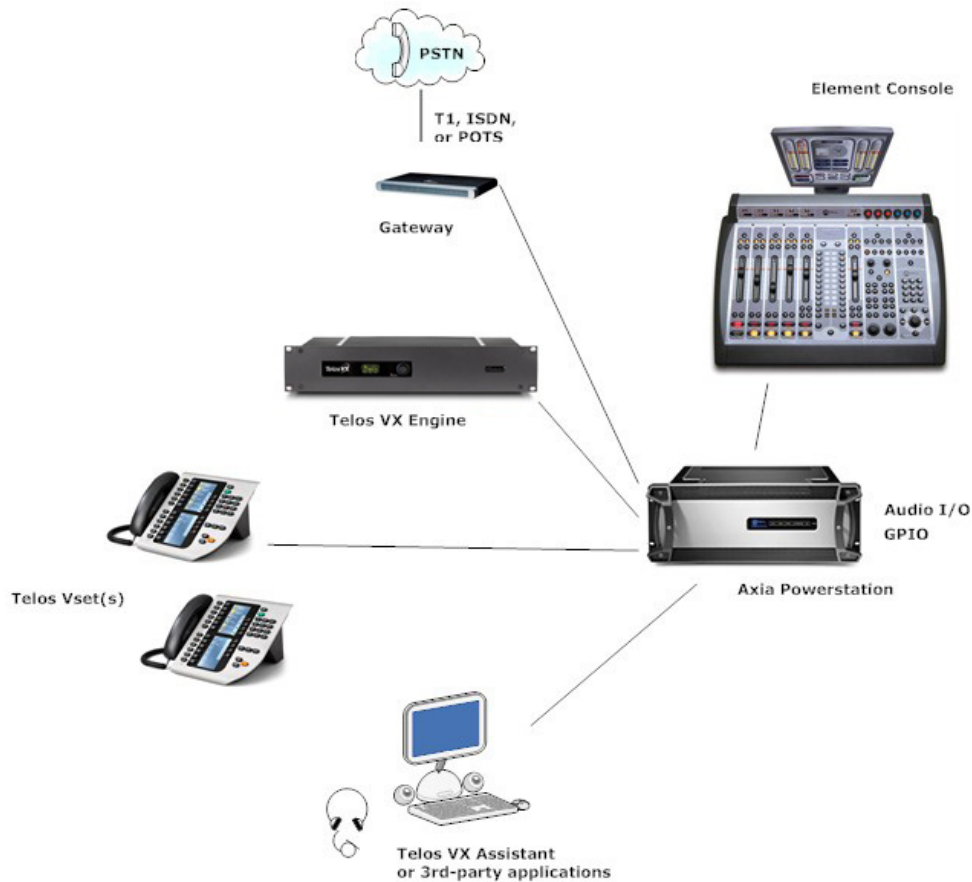

## Installation

The setup in the block diagram shows the Axia Powerstation as the core for the studio, providing the Ethernet switch function. The VX Engine LAN port attaches to one of the gigabit ports and the VSets to PoE (powered) ports. The Engine WAN port could have its own switch to connect the VoIP lines and gateways. Or the VX can be configured so that the LAN port could serve everything with no additional switch. The Powerstation could also link up with a central switch to pass audio to/from other locations in the facility.

In the Element, install or confirm the presence of the call control module and the faders you will be using for telephone operations. Some possible Element configurations are:

- ◆ 1 Call Control module for 12 or 24 lines, 2 hybrids/faders
- ◆ 1 Call Control module + 1 Phone fader module for 12 or 24 lines, 6 hybrids/faders
- ◆ 2 Call Control module for 12 or 24 lines, 4 hybrids/faders.

Note that a Call Control module is required even when no selectable lines will be configured. The fixed lines rely upon software linked to the Call Control Module.

## Configuring the Element to Control the VX

Element configuration is via web.

Do the VX configuration first, and then move on to Element configuration.

Things you will need to know about your VX in order to configure an Element as a controller are:

- ◆ The VX Engine IP address
- ◆ User name and password to access the VX Engine.
- ◆ The VX *Studio* name you will connect to.
- ◆ VX hybrids/Livewire output names and numbers you want to use in this studio
- ◆ VX *Show* name if you want to load VX Shows from Element console profiles.

In order to correctly control your VX, your Element and/or PowerStation must be running the following software versions:

- ◆ PowerStation: v1.1.3a or higher
- ◆ Element: v2.5.0.3 or higher

To obtain and install this software, visit [www.AxiaAudio.com/downloads/](http://www.AxiaAudio.com/downloads/) and follow the update instructions contained in the accompanying Release Notes.

There are three steps to configuring the Element for the VX, as follows.

1. Set up the VX-to-Element connection. Open the Element's *Module Manager/Phone Channels* web page. If you have the Caller Controller Module installed, you will see the following at the top of the screen:

**Phone channel configuration:**

ID	Module	Server Address	Login	Password
1	3:4	<input type="text"/>	<input type="text"/>	<input type="text"/>

If you don't see this, or if the ID or Module information is incorrect, you will need to "Capture" your current module configuration. This is normally done at the factory, but if you have added the phone module yourself, you will need to execute the Capture so that the Element can "see" the newly added module.

To Capture, press and hold the *Help* key on Element's Navigation Module for 5 seconds, until CAPTURE appears in the source name displays. On the phone module, you will see the assigned ID number in the upper left line icon position. You can change this by pushing the adjacent line button. End Capture Mode by pressing the *Enter* key on the Navigation Module.

Show profile 'VX9'. Phone configuration:

Phone Module 1

Phone Url {vx:[ap:]}[user[:pass]]@]host

Show Name:

Host / Studio Name:

Show Password:

Reversed Hybrid (1st on right)

Mode:  Auto  
 12 Lines  
 24 Lines


Enter your VX's IP address. Use your Web browser to navigate to Element's *Sources and Profiles* -> *Configuration* -> *Show Profiles* web page. Select the Element Show Profile you wish to configure, and click on *Phone*. In the *Phone URL* field, enter the IP address of your VX. In the screenshot above, a VX IP address is shown as vx:192.168.0.9 where 192.168.0.9 is the IP of a VX Engine. You can also specify a username and password if needed. (If you use the default settings, where the username is "user" and the password is empty, you don't need to enter anything.)

- Configure your VX Studio and Shows. In the same screen where you entered VX IP number, you can enter a VX Studio name. In the *Host /Studio Name:* field, simply enter the studio name you used in your VX's configuration. In the example above, the VX Studio name is "Studio 1." If you wish to change a VX Show using an Element Show Profile, simply specify the name of the VX Show you wish to load in the *Show Name* field. If you leave it empty, no VX Show will be changed, and whichever show is currently loaded will continue to be used. Leave the *Show Password* field empty. There are no passwords for Shows in the Telos VX, so none are needed from the Element.

Configure other options. Element's Call Controller module uses the left row of telephone line selection buttons to control Hybrid 1, the right row to control Hybrid 2. If you wish to use the right row of Call Controller buttons to control Hybrid 1 and the left row to control Hybrid 2, click the *Reversed Hybrid* box. VX can be used in either 12 or 24 line mode. You can select either *Auto*, *12 Lines* or *24 Lines* with the Mode Selection radio buttons. In 12 line mode, 12 lines are displayed on both columns of the Call Controller module; the left key bank answers lines on Hybrid 1, the right keys answer lines on Hybrid2. In 24 line mode, both left and right key banks will answer lines using Hybrid 1. To answer lines on any other hybrid, operators will use the module's *SET* key to choose which hybrid to use. Selecting "Auto" uses the configuration of the VX Show to dynamically set the number of lines used.

Click "Save" when you're done. Note that after editing and saving a Show Profile, you must reload it from your Element console in order for the saved changes to take effect.

3. Create the needed *Source Profiles*. Navigate to Element's Source Profiles page. Click *New Source Profile* and, using the *Primary Source* drop-down box, select the audio channel that you configured in VX Engine under Studio configuration. In the list, you should see a Livewire channel number and short description of the Hybrid; give it an Element source name, such as "VX-Hybrid1," and select *Phone* for Source Type.

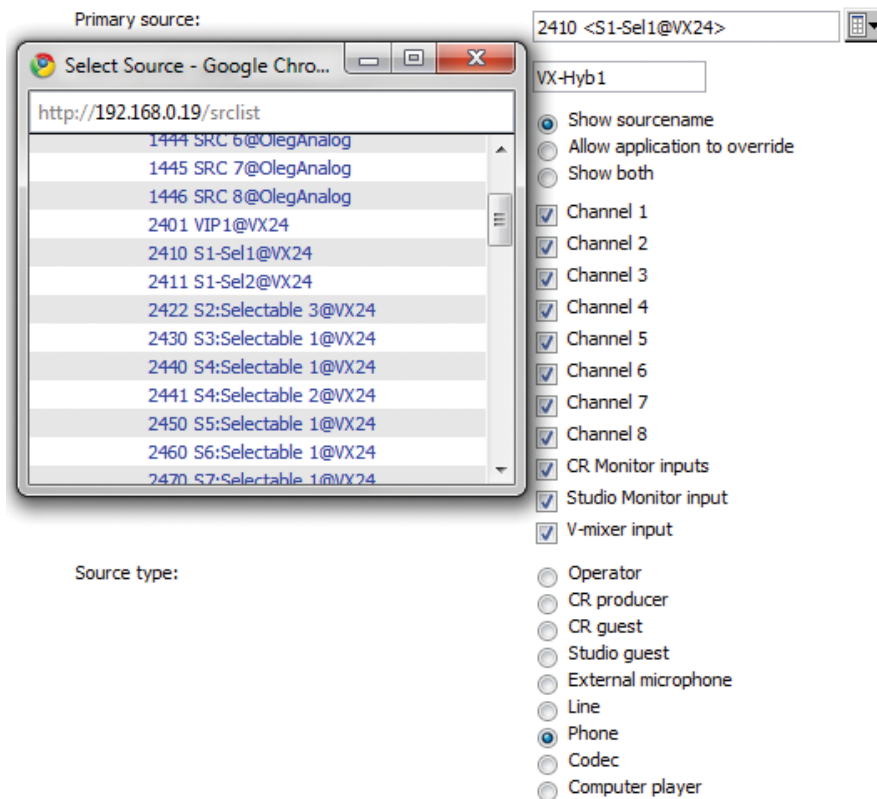

In the source profile options, leave the *Phone hybrid IP* field empty, leave the Phone line and Phone hybrid (for NX12) fields at their default value of "0." Use 2<sup>nd</sup> show (split mode for NX12) should be left unchecked.

Phone hybrid ip:

Phone line:

Phone hybrid (for Nx12):

Use 2<sup>nd</sup> show (split mode for Nx12):

Phone Module ID:

Hybrid Nr.(0 - None):

Conferencing allowed:

Fixed line (1 to 24, 0 - No):

The *Phone Module ID* field lets you select from the multiple phone modules that you may have installed in your Element. Normally, you will have just one, so select 1 from the drop-down box.

For *Hybrid Nr.*, select the hybrid that corresponds to the Primary Source audio you selected above. The VX supports an unlimited number of hybrids per studio. To find out what Hybrid number corresponds to the audio source you selected, go to *VX Engine/ Studio configuration page* and check the sequence number of the *Selectable LW* channel that you use as the audio source here. The first Selectable LW channel counts as Hybrid 1.

*Conferencing Allowed* lets you permit “button mash” conferencing. Unless you specially wish to prohibit this type of conferencing, select *Yes* from the drop-down box.

*Fixed Line* lets you assign a line permanently to a specific fader channel, emulating a dedicated hybrid. Normally this is used with a 4-Phone Fader Module. If you want to use a Hybrid in this mode, specify one of your VX system’s “fixed” hybrids in the *Primary Source* field. In the VX Engine studio configuration, you configure both fixed and selectable hybrids; enter a Fixed Hybrid number in this field if you wish to associate this source with a Fixed Hybrid.

The other fields in the Source Profile page are non-phone specific and can be configured as you choose. (See Chapter Two, *Configuring Inputs*, in the Element manual for info on these options.

Repeat this procedure to create a source profile for each hybrid in your studio.


You’ll now need to load the hybrid sources onto the fader channels. This can be done either manually or automatically using *Show Profiles*. We recommend that you make this assignment in each Show Profile which will use the phone system, since leaving manual assignment to air talent is asking for trouble!

For normal operation, you would assign Hybrid 1 to the left fader channel of the Call Controller, and Hybrid 2 to the right fader channel. Additional hybrids, if you have them, may be assigned to any channel on a 4-Fader Phone Module.

Note: Within Element, each ‘phone’ type audio source has both an incoming (from caller) and associated backfeed (to caller) for automatic mix-minus generation. There are several configuration options that affect which audio sources are fed to the hybrid under various conditions; Refer to the *Source Profile Options* and *Feed to Source Mode* sections in Chapter 2 of the Element manual.

4. When you are done entering configurations, save your Show and Source profiles, and load one of your newly-edited Show Profiles using your Element console’s Show Profiles command. You can use the Element Control Center Phone Channels page to confirm your VX connection, as shown below.

Push some buttons on the Element, marvel at how cool it is, and impress your staff. Use it to phone-up your Significant Other to congratulate her/him on her/his perspicacity and fine taste in mate selection.

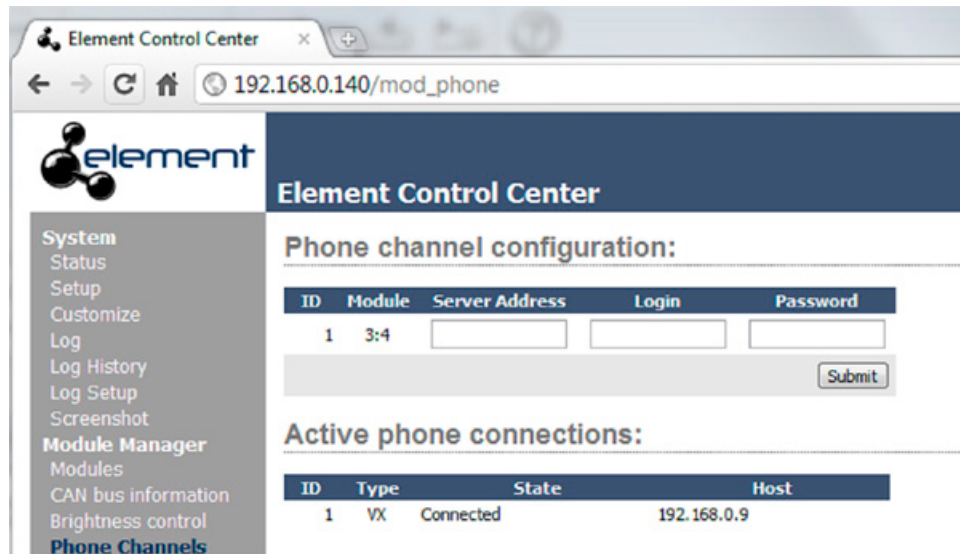

## What's next?

The first stage of the application of any new technology is to replicate the function of what came before, but once the new platform is in place, creative people invent new and unexpected ways to use it. IP is a potent enabler that has already showed us plenty of surprising things; it's inevitable that more is on the way.

The Telos VX represents an exciting change in direction for studio telephone operations. The open IP nature of the system, along with its rich user interfaces and a powerful platform, offers ongoing opportunities for enhancement of its capabilities.

When the connection from a station's listeners to its studios eventually evolves to become via IP as it is near certain to do, things could change appreciably. We've already touched on the possibility for higher fidelity. But that's only the immediate and obvious next step. With an unconstrained pathway for data along with voice, a talk show's producer or host could text chat with a caller prior to his being on the air, for example. There could be an automatic updating of the time a caller is planned to be on-air. There could be instant voting. A window could be kept open on listeners' PCs that would deliver supplementary text or visual information. Peering yet further into the future, should video streaming catch-on; we might want both see and hear callers.

Here are some other things we have in mind.

- ◆ A gateway to Skype, allowing callers to connect via computer with higher quality than usual phones. It could be possible to exchange chat messages to update callers on how long they need to wait, etc.
- ◆ Build in a texting (SMS) gateway to allow this form of communication with mobile phones.
- ◆ Make a simpler VX phone for applications that don't need the fancy LCD displays.

We invite your suggestions and creative ideas.

## Beyond Edison's Legacy



The PSTN uses the g.711 codec. Its audio frequency response is limited to 3.4kHz. A modern reader might ask, "Why was such a low fidelity considered to be satisfactory for digital telephony?" Microphones, loudspeakers, and earphones have all had much better fidelity for many decades. Indeed, when the g.711 codec was standardized in the 1960s, FM radio was just getting going with its much superior 15kHz bandwidth. Mostly, the coding choice resulted from the legacy of the carbon button microphones that were ubiquitous in telephones throughout most of the early history of telephony. (Edison invented the carbon microphone and licensed it to the Bell System, which had only an impractical liquid-based microphone in its own portfolio.) This microphone works on the principle that acoustic pressure squeezes the carbon granules more closely together, thus lowering electrical resistance in proportion to the pressure. As you can imagine, it has a non-flat response curve with a 5db peak at 2kHz and hefty roll-offs below 300Hz and above 3kHz. They were mostly abandoned for all but telephone use in the late 1920s, but were standard in phones up to the 1980s. Old analog long-distance lines also had a lot of high-frequency attenuation owing to capacitive effects. When microwave radios were introduced to long-distance telephony, a decision had to be made as to what frequency range to accommodate in their FDM (Frequency Division Multiplex) scheme. There was, as always, a trade-off: more frequency response meant fewer channels. Since the microphones weren't producing much in the way of high frequencies, why bother carrying them over the radio links? Thus, the radios were designed with narrow 4kHz carrier spacing. When the first digital T-Carrier systems were invented, it must have seemed perfectly natural to stay with the 3kHz or so audio bandwidth enshrined in the microwave link technology. A sampling rate of 8kHz with 8-bits (compressed) depth had a nice symmetry and delivered a satisfactory 4kHz Nyquist response limit, so on with the show.

The Electret capacitor microphones ubiquitous in today's phones have frequency response well beyond 3kHz. IP networking combined with modern codecs allow the better fidelity to be transported. Some mobile phone applications, such as Apple's 'facetime' are beginning to take advantage of this. The VX is ready for high-fidelity phone calls, and includes support for g.722, a codec rapidly gaining favor with VoIP providers and users. g.722 uses about the same amount of bandwidth as g.711, but samples audio at 16kHz - double that of g.711! It delivers very clean, clear, natural caller audio. Future VX software releases are likely to include support for more high fidelity codecs.

## Specifications

### System

Maximum number of phone lines: 48, when used with aLaw or uLaw codecs for VoIP lines. (Higher quality codecs, such as G.722, consume more system resources and result in a decreased number of total lines available.)

Maximum number of SIP numbers: 250

Maximum active on-air calls: 30

Number of hybrids: one per each active line

Maximum number of studios: 20

Maximum number of Livewire input/output channels - 20 systemwide

### Audio performance

#### Analog Line Inputs

- ◆ Input Impedance: >40 k ohms, balanced
- ◆ Nominal Level Range: Selectable, +4 dBu or -10dBv
- ◆ Input Headroom: 20 dB above nominal input

#### Analog Line Outputs

- ◆ Output Source Impedance: <50 ohms balanced
- ◆ Output Load Impedance: 600 ohms, minimum
- ◆ Nominal Output Level: +4 dBu
- ◆ Maximum Output Level: +24 dBu

#### Digital Audio Inputs and Outputs

- ◆ Reference Level: +4 dBu (-20 dB FSD)
- ◆ Impedance: 110 Ohm, balanced (XLR)
- ◆ Signal Format: AES-3 (AES/EBU)
- ◆ AES-3 Input Compliance: 24-bit with selectable sample rate conversion, 32 kHz to 96kHz input sample rate capable.
- ◆ AES-3 Output Compliance: 24-bit
- ◆ Digital Reference: Internal (network timebase) or external reference 48 kHz, +/- 2 ppm
- ◆ Internal Sampling Rate: 48 kHz
- ◆ Output Sample Rate: 44.1 kHz or 48 kHz
- ◆ A/D Conversions: 24-bit, Delta-Sigma, 256x oversampling
- ◆ D/A Conversions: 24-bit, Delta-Sigma, 256x oversampling
- ◆ Latency <3 ms, mic in to monitor out, including network and processor loop



**Frequency Response**

- ◆ Any input to any output: +0.5 / -0.5 dB, 20 Hz to 20 kHz

**Dynamic Range**

- ◆ Analog Input to Analog Output: 102 dB referenced to 0 dBFS, 105 dB "A" weighted to 0 dBFS
- ◆ Analog Input to Digital Output: 105 dB referenced to 0 dBFS
- ◆ Digital Input to Analog Output: 103 dB referenced to 0 dBFS, 106 dB "A" weighted
- ◆ Digital Input to Digital Output: 138 dB

**Total Harmonic Distortion + Noise**

- ◆ Analog Input to Analog Output: <0.008%, 1 kHz, +18 dBu input, +18 dBu output
- ◆ Digital Input to Digital Output: <0.0003%, 1 kHz, -20 dBFS
- ◆ Digital Input to Analog Output: <0.005%, 1 kHz, -6 dBFS input, +18 dBu output

**Crosstalk Isolation and Stereo Separation and CMRR**

- ◆ Analog Line channel to channel isolation: 90 dB isolation minimum, 20 Hz to 20 kHz
- ◆ Analog Line Stereo separation: 85 dB isolation minimum, 20Hz to 20 kHz
- ◆ Analog Line Input CMRR: >60 dB, 20 Hz to 20 kHz

## Controllers

VSet12 telephone

VSet6 telephone

VSet1 telephone

VX Producer Windows application

Axia Element studio console

Axia IQ studio console

Neosoft Neowinners

Broadcast Bionics PhoneBox VX

## VX Engine

### IP/Ethernet connections

One 100BaseT/gigabit Ethernet via RJ-45 LAN connection

One 100BaseT/gigabit Ethernet via RJ-45 WAN connection

### Processing Functions

All processing is performed at 32-bit floating-point resolution.

Send AGC/limiter

Send filter

Gated Receive AGC

Receive filter

Receive dynamic EQ

Ducker

Sample rate converter

Line Echo Cancellor (hybrid)

Acoustic Echo Cancellor (wideband)

**Power Supply AC Input**

- ◆ Auto-sensing supply, 90VAC to 240VAC, 50 Hz to 60 Hz, IEC receptacle, internal fuse
- ◆ Power consumption: 100 Watts

**Operating Temperatures**

- ◆ -10 degree C to +40 degree C, <90% humidity, no condensation

**Dimensions and Weight**

- ◆ 3.5 inches x 17 inches x 15 inches, 10 pounds

## Studio Audio Connections

Via Livewire IP/Ethernet. Each selectable group and fixed line has a send and receive input/output.

Each studio has a Program-on-Hold input.

Each Acoustic Echo Cancellor has two inputs (signal and reference) and one output.

LW-equipped studios may take the audio directly from the network. Interface Nodes are available for pro analog and AES3. (uses standard Livewire Nodes)

## Telco Connections

Audio: standard RTP. Codecs: g.711u-Law and A-Law, and g.722.

Control: standard SIP trunking

## Resources

### Internet Speed tests

[www.speakeasy.net](http://www.speakeasy.net)

[www.speedtest.net/](http://www.speedtest.net/)

### Internet VOIP Jitter Test

[myspeed.visualware.com/indexvoip.php](http://myspeed.visualware.com/indexvoip.php) (free)

## Packet “sniffer”

[www.wireshark.org/download.html](http://www.wireshark.org/download.html) (free)

## VoIP Soft phone” SIP PC clients

X-Lite “Soft phone” SIP PC client (free)

[www.counterpath.com/x-lite.html](http://www.counterpath.com/x-lite.html)

Ekiga, free open source SoftPhone - [ekiga.org/](http://ekiga.org/)

Linphone open source VOIP phone - [www.linphone.org/](http://www.linphone.org/)

## Open Source PBX Distributions

[www.digium.com](http://www.digium.com)

[pbxinaflash.net/](http://pbxinaflash.net/)

[www.trixbox.org](http://www.trixbox.org)

[www.freepbx.org/](http://www.freepbx.org/)

[www.asterisk.org/](http://www.asterisk.org/)

## Commercial PBX Products

[www.microsoft.com/voip](http://www.microsoft.com/voip)

[www.lg-nortel.com](http://www.lg-nortel.com)

[www.trixbox.org](http://www.trixbox.org)

[www.siemens.com/hipath](http://www.siemens.com/hipath)

[www.mitel.com](http://www.mitel.com)

[www.digium.com](http://www.digium.com)

## Gateway products and suppliers

[www.patton.com/voip/](http://www.patton.com/voip/)

We have tested and support Patton gateways, such as the model 4940 for T1/E1 and ISDN PRI. The Patton gateways for POTS (FXO) and ISDN BRI are also satisfactory.

[www.grandstream.com](http://www.grandstream.com)

[www.audiocodes.com](http://www.audiocodes.com)

[www.cisco.com](http://www.cisco.com)

[www.digium.com](http://www.digium.com)

[www.quintum.com](http://www.quintum.com)



## VoIP/SIP equipment suppliers

[www.telephonydepot.com](http://www.telephonydepot.com)

[www.rockbottomvoip.com/](http://www.rockbottomvoip.com/)

## Telephony Discussion and VoIP news sites

[www.sipforum.org](http://www.sipforum.org)

[www.telos-systems.com](http://www.telos-systems.com)

[www.voipforums.com/](http://www.voipforums.com/)

[www.voipuser.org/forum\\_index.html](http://www.voipuser.org/forum_index.html)

[www.broadbandreports.com/forum/voip](http://www.broadbandreports.com/forum/voip)

[forum.voxilla.com/](http://forum.voxilla.com/)

## SIP Information and suggested reading

A Request for Comments (RFC) is a memorandum published by the Internet Engineering Task Force (IETF) describing methods, behaviors, research, or innovations applicable to the working of the Internet and Internet-connected systems. The IETF adopts some of the proposals published as RFCs as Internet standards. These are available at: [www.ietf.org/rfc](http://www.ietf.org/rfc). Among those relevant to VoIP and SIP are:

RFC 1889: Real Time Protocol (RTP) - original version

RFC 3550 - Real Time Protocol (RTP) - latest version

RFC 1890: Real Time Protocol Audio Video Profiles (RTP/AVP) - original version

RFC 3551: Real Time Protocol Audio Video Profiles (RTP/AVP) - latest version

RFC 2327: Session Description Protocol (SDP) - original version

RFC 4566 - Session Description Protocol (SDP) - latest version

RFC 2543: Session Initiation Protocol (SIP) – original version

RFC 3261: Session Initiation Protocol (SIP) – latest version

RFC 3264: Codec negotiation

A. H. Inglis. "Transmission Features of the New Telephone Sets," *Bell System Technical Journal* 17 (1938): 358-380. (Just for fun. Waaay back, Mr. Inglis proposed "high-fidelity" phones, noting that cost was the only barrier to better audio quality in the telephone network and predicting it would become common in the future. Took awhile...)

## Books

Henry Sinnreich and Alan B. Johnston. *Internet Communications Using SIP*, John Wiley & Sons, Inc., New York, 2001.

Gonzalo Camarillo. *SIP Demystified*, McGraw-Hill, New York, 2002.

Steve Church and Skip Pizzi. *Audio over IP: Building Pro AoIP systems with Livewire*, Focal Press, Burlington, MA and Oxford UK. 2010 (Mighty fine fellas, these guys. Good book, too!)

Jonathan Davidson and James Peters. *Voice over IP Fundamentals*, Cisco Press, Indianapolis, 2000.

J. Alexander, C. Pearce, A. Smith, and D. Whetten, *Cisco Call Manager Fundamentals 2nd Edition*, Cisco Press, Indianapolis, 2006.

D. Au, B. Choi, R. Haridas, C. Hattingh, R. Koulagi, M. Tasker, L. Xia. *Cisco IP Communications Express: Call Manager Express with Cisco Unity Express*, Cisco Press, Indianapolis, 2005.

Oliver Hersent, David Gurle, and Jean-Pierre Petit, *IP Telephony: Packet-Based Multimedia Communications Systems*, Addison-Wesley, Reading, MA, 1999.

*Switching to VOIP* – O'Reilly

*VOIP Hacking* - O-Reilly

*Asterisk* - O-Reilly

## SIP Providers

Something that takes some time to get one's head around is that SIP providers usually do not provide the IP network connection. The main service they perform is giving you a gateway to the PSTN. That is, they give you telephone numbers. The gateway need not be local to you. Indeed, you may be in California and find that your provider's gateway is in New York. Providers also give you access to a "SIP server" that helps with obscure things like traversing 'NATs' and taking care of "relocation services". Because the SIP provider and network vendor are independent, it's sometimes hard to know who to blame for troubles – or praise for good service. It's a good idea to discuss network vendors with the SIP provider, since they have built up a lot of experience with clients around the country and often have insight into who best can deliver reliable Internet connectivity in your area.

Visit the Telos Website for the latest information. The short list below was created in December 2010 and the marketplace is changing rapidly. These are companies we or our clients have had direct experience with and report positively on their experiences. Most of these providers will allow you a free period to test their service in your environment (your ISP, with your switch, etc). Consider that some services work better in some areas than others. Usually it's wise to choose a provider close to you physically.

Having said that, some Telcos and other companies offer bundled IP network and SIP service. Generally, these are more expensive than the unbundled services, with the pitch that having a single vendor delivers higher reliability and one-stop troubleshooting. We have seen this approach more often outside the USA. It remains to be seen if the promise is fulfilled. We'll keep our eye on it.

BYOD (Bring Your Own device) Providers are recommended for broadcast application. Companies such as Vonage that supply an ATA (Analog Terminal Adapter) for each "line" do not provide "SIP credentials" for standards-based equipment such as the VX and are not oriented to serve customers with sophisticated requirements such as broadcast stations. They tend to be more expensive, as well. Broadcast users are better served by wholesale providers who deal with Telephony and IT professionals.

**VoicePulse** is a smaller company that excels at providing tech support. They have proven themselves excellent at solving obscure problems that many providers will just ignore.

They know Asterisk and can be counted on to give good advice. They don't have phone numbers everywhere, but they probably won't disappoint you. East and West Coast gateways are available. Local Number portability (LNP) is available.

**Bandwidth.com** is used by at least one station running a VX, with solid performance being reported.

**Vitality** offers reliable and very cost effective DID numbers any many local exchange areas, and toll free and foreign numbers as well. Local number portability and SMS messaging are also offered.

**SipStation** - with connectivity provided by Bandwidth.com they've proven to be very reliable and low cost.

**8x8** - Based in Silicon Valley, they deal mostly in hosted PBX service. Reliability is very good.

**Flowroute** - Based in Las Vegas offers very attractively priced DID numbers and special deals on blocks of 20, 50 and even hundreds of numbers.

## Local Number Portability in the USA and Canada

Telephone number porting is fairly common these days, mainly due to the large number of wireless customers changing carriers and plans frequently and wanting to keep their phone numbers.

Each carrier has its own rules and policies for number porting with the average port taking from 10 days to 3 weeks. It is important to note that high volume or "choke" numbers cannot be ported. You can try, but we haven't seen it work yet. Usually, the order will be taken, a due date given, and then on the day of the port, you'll get a call from the utility or provider informing you of the bad news.

Porting is usually done in the morning, but special arrangements can be made with the carriers to port at a specific time. Once ported, your old POTS lines are automatically canceled by the old company. We have seen situations where CLECs and Wireless companies have some problems routing calls for the first few hours after a port, though this seems to be getting better.

Don't run crazy "win a house or car" contests on these providers, though they're fine for request lines and even talk show call in numbers. If you plan to do heavy contesting with big prizes, it's not nice and potentially dangerous to bring your carriers switching office down.

## Introduction to SIP's insides for the Curious

The following is a peek inside of SIP. There is no reason you need to know any of this to use the VX. It's an excerpt from Steve and Skip's book *Audio over IP*.

SIP is fast rising to be the big-daddy buzz-acronym among telecom technology acolytes. SIP is how calls are set up over IP connections, so it is actually pretty important. Together with helpers like Proxy Servers and User Agents, SIP permits all the familiar telephone-like operations: dialing a number, causing a phone to ring, hearing ringback tones or a busy signal. It also enables next-generation capabilities such as finding people and directing calls to them wherever their location, Instant Messaging, and relaying so-called 'presence' (near the phone or not, do-not-disturb, etc.) information. SIP began, rather humbly, as a simple message protocol for setting up connections. But the term has grown to be an umbrella for the family of protocols and tools that have been developed by the IETF to enable VoIP telephony and related services.

By the mid-1990s, audio and video were becoming routine on the Internet. Going beyond email, academic researchers were imagining on-line audio/video/whiteboard conferences where ideas could be shared live. It became clear that the *Mr. Watson come here, I want to see you!* function had to be done more efficiently than by shouting across the college quad or sending invitation mails. Thus was the IETF's working group MMUSIC (Multiparty Multimedia Session Control) born. There had already been work within the telephone world that had resulted in an ITU standard, but Internet types didn't much like it. "Too complicated," they averred. "Too limited," they sniffed. "Too *Phone Company*," they huffed. So off they went to do it the *Internet* way. The document describing SIP was eventually published as proposed standard RFC 2543 in 1999. Work has been ongoing, with the latest version of the specification, as this is written, being RFC 3261.

The SIP message protocol is similar to the Web's HTTP (Hypertext Transfer Protocol), and shares some of its design principles: It is human readable and request-response structured. SIP even shares many HTTP status codes, including the familiar "404 not found."

Here is a typical SIP message:

```
INVITE sip:skip@there.com SIP/2.0
Via: SIP/2.0/UDP 4.3.2.1:5060
To: Skip Pizzi <sip:skip@there.com>
From: Steve Church <sip:stevec@here.com>
Call-ID: 4678995554545@4.3.2.1
CSeq: 1 INVITE
Contact: <sip:stevec@4.3.2.1>
Content-Length: 126
```

This is how Steve's SIP client would signal to Skip's that he wants to connect and speak with him.

SIP works together with several other protocols and is only involved in the signaling portion of a communication session. SIP is a carrier for the SDP (Session Description Protocol), which describes the media content of the session, e.g. the codec being used, the bitrate, etc.

SIP provides the following capabilities:

- ◆ Determines the location of the endpoint: SIP supports address resolution, name mapping, and call redirection.
- ◆ Determines the media capabilities of the endpoint, i.e., which codecs are available and supported: During a negotiation, SIP determines the best codec that can be used by the parties on the call.
- ◆ Determines the availability of the called endpoint: If a call cannot be completed because the target endpoint is unavailable, SIP returns a message indicating this and why.
- ◆ Establishes a session between the originating and called endpoints (if the call can be completed).
- ◆ Handles the transfer and termination of calls: SIP supports the transfer of calls from one endpoint to another. During a call transfer, SIP establishes a session between the transferee and a new endpoint (specified by the transferring party), and terminates the session between the transferee and the transferring party.

## The Parts of a SIP System

Like most things based on IP, SIP was designed to be modular. Implementers can pick-and-choose among the following elements to build the system they need.

**SIP Clients:** Sometimes called User Agents or endpoints. These can be hardware phones or "softphones" (phone applications running on PCs).

**Gateways:** When needed, gateways translate between the IP network side and the switched-circuit Telco side, providing physical, electrical, signaling and audio interface.

**Proxy server:** Receives SIP requests from a client and forwards them on the client's behalf. Basically, proxy servers receive SIP messages and forward them to the next SIP

server in the network. Proxy servers can provide functions such as authentication, authorization, network access control, routing, reliable request retransmission and security.

**Redirect server:** Provides the client with information about the next hop or hops that a message should take, and then the client contacts the next-hop server or client directly.

**Registrar server:** Processes requests from clients for registration of their current location. Registrar servers are often co-located with a redirect or proxy server.

While SIP-enabled endpoints are able to connect directly to each other, SIP servers provide a number of valuable services, including the following:

- ◆ Register SIP client devices
- ◆ Register individual human users for access to their services
- ◆ Perform authentication, authorization, and accounting (when needed)
- ◆ Look up the address of the far-endpoint
- ◆ Support user mobility across networks and devices
- ◆ Support for multipoint conferencing
- ◆ Support presence information
- ◆ Inform users as to call progress
- ◆ Communicate requests for QoS to various network elements, such as IP routers

While the various servers above could run on individual machines and could even be physically separated by thousands of kilometers, in usual practice they are often just software elements of an application running on a single machine. As we'll see, many small IP PBXs include the Gateway as well, making a one-box solution that includes everything needed for a small office installation.

An example a SIP Server being used in the broadcast world comes from the Telos Z/IP codec family, which uses a Telos-developed, enhanced SIP Server, called (naturally) Z/IP Server. The server is provided as a service on the Internet, but may also be installed by users who prefer to maintain their own. In addition to basic SIP functions (registration, address look-up), the Z/IP server offers additional services:

- ◆ Allows display and dialing by simple text name. Keeps a database of names and performs DNS/IP look-up upon a dialing request from an endpoint codec.
- ◆ Maintains group lists created by users. Upon entering a group name and password, the list is displayed on endpoint codecs so that users aren't burdened with having to enter or upload lists manually.
- ◆ Provides geolocation services by associating IP numbers with physical location. Allows display of a routing map on the codec LCD display.
- ◆ Upon request, keeps a record of network performance in order to assist in troubleshooting problems caused by QoS impairments.

Many products that support SIP for its standards-based interconnection capability do not have an internal architecture corresponding to the SIP specifications, so you would not see these SIP



server components listed therein – or they might be included, but not labeled according to the standard names bulleted above. Instead these functions would just be provided as part of the system “black box.” Cisco and Microsoft VoIP products fall into this category, for example.

## Addressing

SIP addresses, also called SIP URIs (Uniform Resource Identifiers), are in the form `sip:user@host`. The user portion of the address can be a text name or a telephone number, and the host portion can be a domain name or an IP address. The address resolution process normally begins with a URI and ends with a username at an IP address. Just as with email, the sender needs no information about the physical location or IP address of the receiver. This is one of the powerful features of SIP – it automatically implements portability and mobility.

Examples of valid SIP addresses:

The usual form is an email address prefixed by ‘sip:’:

`sip:joesmith@company.com`

You can call a PBX telephone at a business this way:

`sip:123@telos-systems.com` (extension phone 123 at Telos Systems)

If you don’t have a name or extension, you might want to contact the receptionist:

`sip:receptionist@telos-systems.com`

Here’s an internal machine-to-machine message, such as from an on-air phone system to a PBX or gateway to initiate a PSTN call:

`sip:12162417225@168.123.23.1`

Note that in this case, an IP number is provided to identify the concrete machine that is to receive the message. You usually don’t want to use DNS for this because it takes time for the look-up step, and because there may well not be a DNS name associated with a machine being used as a telephone server.

To assist readability, SIP lets you use ‘+’, ‘-’, and ‘.’ separators. It removes them prior to processing:

`sip:+1-216-241-7225@telos-systems.com`

As you can see, SIP bridges the telephone and Internet worlds. Both Web-type and PSTN telephone number addresses are possible, and users on either network can reach those on the other.

Often, address resolution involves multiple steps and SIP-message hops. A DNS (Domain Name Service) server, a SIP proxy server and a SIP redirect server might all be involved in a single name resolution, for example.

A few other points of interest regarding SIP: Some servers associated with SIP systems can accept unformatted text names, but this is not part of the standard.


URIs are not URLs. URIs are independent of the location of the named object. Email addresses are an example of URIs. In SIP, a Request-URI is defined to indicate the name of the destination for the SIP Request (INVITE, REGISTER, etc.). URLs (Universal Resource Locator) describes the location of a resource available on the Internet. For example, `http://www.telos-systems.com` is the URL for a Web home page. It is resolved by DNS to a concrete IP address.

PSTN telephone numbers are sometimes called ‘E.164’ numbers, a designation applied in an ITU-T standard that describes the format of telephone numbers to be used worldwide. ENUM

(E.164 **NU**mer **M**apping) is the Internet service used to look up the URI associated with a particular E.164 telephone number. It's part of the DNS system. SIP can use ENUM to locate the VoIP system associated with a telephone number that accepts incoming calls.

## How SIP Works

As we've seen, SIP is a simple, text-based protocol. It uses requests and responses to arrange for communication among the various components in the network, and ultimately to establish a connection between two or more endpoints.

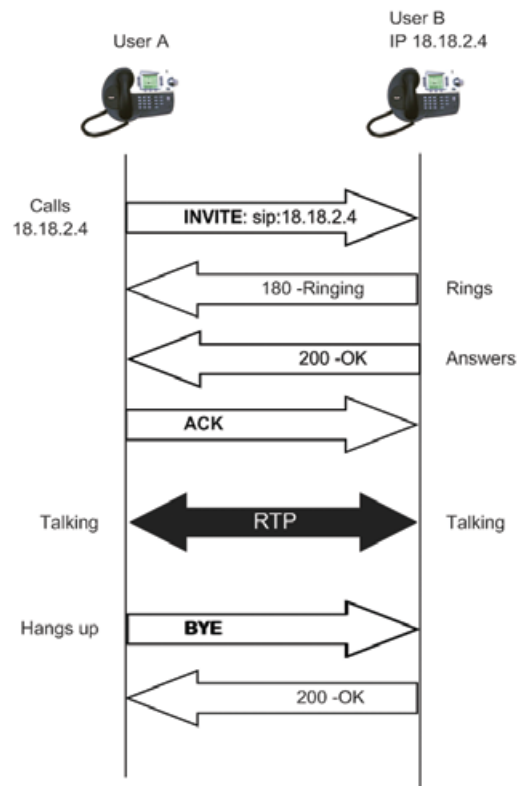


SIP at its simplest. An IP phone calls another directly.

But this is not the real world. Almost always, there are SIP servers of various kinds in the picture. When a user initiates a call, a SIP request is sent to a SIP server (either a proxy or a redirect server). The request includes the address of the caller and the address of the intended called party. In more sophisticated scenarios, users register with a registrar server using their assigned SIP addresses. The registrar server provides this information to the location server upon request.

From time to time, a SIP user might move between end systems. The location of the user can be dynamically registered with the SIP server. Because the end user can be logged in at more than one station, and because the location server can sometimes have inaccurate information, it might return more than one address for the end user. If the request is coming through a SIP proxy server, the proxy server tries each of the returned addresses until it locates the end user. If the request is coming through a SIP redirect server, the redirect server forwards all the addresses to the caller in the Contact header field of the invitation response.

When communicating through a proxy server, the caller sends an INVITE request to the proxy server and then the proxy server determines the path and forwards the request to the called party.

Since we usually need to reach phones that are connected to the PSTN, gateways will be involved in real world systems. These translate SIP signaling to the PSTN's requirements: loop current, DTMF, and ring detect for POTS lines, set-up messages for ISDN, etc.

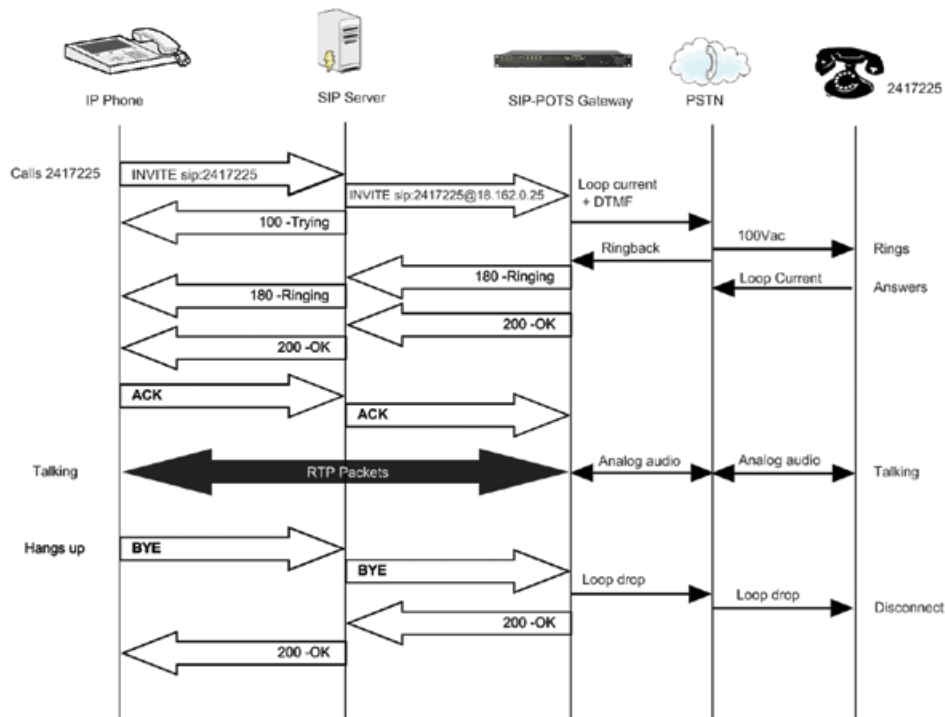

A SIP call set-up to the PSTN via a SIP server and a gateway to POTS lines.

SIP messages may be carried by UDP or TCP. SIP has its own built-in reliability mechanisms, so it doesn't need TCP's reliability services. Most SIP devices such as phones and PC clients use UDP for transmission of SIP messages. PBXs on LANs almost always use UDP because LANs don't drop packets and there is no need to incur the overhead of TCP. Transport Layer Security (TLS) protocol is sometimes used to encrypt SIP messages. TLS runs on top of TCP. (This is the protocol used with HTTP to make the secure HTTPS used for secure Web transactions.)

Not shown in our transaction examples is the media negotiation that is part of the INVITE/200 OK/ACK sequence. Through this process, endpoints decide which codec to use. The *Session Description Protocol* (SDP) defined by RFC 2327 is the way codecs are offered and (hopefully) accepted by the other end. Usually, the caller sends an SDP message along with its INVITE, listing the codecs it is prepared to use. The far end chooses one of them and tells the caller which it prefers in the 200 OK response. The caller can let the far end propose a codec by not sending an SDP message in its INVITE. It is possible that the two endpoints have no codec in common and the connection is unable to proceed, but systems are designed so that this does not happen. For example, almost all phones, gateways and SIP Telco services have G.711 as a supported codec, so this is an insurance policy that two endpoints will find common ground. Within a PBX system, designers usually choose one codec as a standard for the system and stick with it for all connections. For example, the Telos VX studio system uses 8kHz sampling-rate, 16-bit uncompressed PCM internally for all calls that connect to the PSTN.

## The State of SIP, and its Future

SIP is not often used as it was intended by its developers. Most PBXs that have SIP interfaces don't use SIP servers at their core. All use their own rough equivalents, designed independently. So what went awry? The SIP schemers were certainly far-ahead thinkers, who wanted their protocol to support rich media, mobility, portability, sophisticated endpoints, etc. The problem seems to have been a lack of a certain "practicality." For example, consumer PC-to-PC VoIP products needed to solve the problem of firewall and NAT traversal, which has been addressed quite slowly within the SIP working groups. Meanwhile, Skype's developers solved it quickly and effectively. Then there is the problem of supporting all the features a vendor wants to employ to differentiate its product. It's unsurprisingly faster to just implement it your own way rather than waiting for the idea to make its way through a committee, who might well not see things your way.

At Telos, we faced this problem in the design of the VX system. We needed a lot of things specific to the studio environment that are not supported in SIP's structures. So we designed our own protocols for use within the boundaries of our system. But we use SIP at the border of the system to connect with other vendors' products – and eventually to the Telco network. This is just the strategy Cisco, Microsoft, and almost all PBXs vendors have followed.

And now *this* process is emerging as SIP's great value. It's the glue that ties systems together. Studio systems can talk with PBXs for the first time. PBXs can talk with each other. And eventually they will all be able to talk to Telco networks, smoothly and fluently. SIP's inventors got something right.

## IAX as a SIP Alternative

SIP is not the only game in town. The **Inter-Asterisk eXchange** (IAX) protocol is an alternative to SIP for interconnections between both VoIP servers and for client-server communication.

IAX2 (as the current version is named) uses a single UDP data stream (usually on port 4569) to communicate between endpoints, both for signaling and data. The voice traffic is transmitted in-band, in contrast to SIP, which uses an out-of-band RTP stream for audio. IAX2 supports multiplexing channels over a single link. When trunking, data from multiple calls are merged into a single set of packets, meaning that one IP datagram can deliver control and audio for more than one call, reducing the effective IP overhead without creating additional latency.

As IAX's name indicates, it was invented by the Asterisk people as a way to trunk calls between one Asterisk server and another. It has escaped from Asterisk and is now supported in a variety of softswitches and by a few VoIP carriers. Its main advantage is its bandwidth efficiency and simpler firewall configuration, since all traffic flows through a single port.

## Using VX with the Asterisk PBX

Asterisk is a great way to provide extra flexibility and power to your VX installation. The software is inexpensive or free and runs on a standard PC. It's an open source project, having been created by teams and individuals from around the world, often volunteers. Despite this, we've found it to be reliable. At Telos we count on it daily to network our sites throughout the world. A few VX installations are already using it. You'll find that it's a useful tool if you want to do Interactive Voice Response systems, support on or-off-site VoIP telephones, call detail recording, failover systems, ISDN PRI channel splitters, and such. With appropriate hardware, Asterisk can also be used as a gateway. For example, you may need to peel a few channels off of a PRI to send them over to the VX, while the others feed a PBX. An ISDN PRI card in an Asterisk box and some configuration would get this done.

Because it connects to the VX using Ethernet, audio remains clean. Many channels of audio and SIP signaling are interfaced over a single Ethernet link.

Telos has people on-staff and access to consultants who are experienced with Asterisk and who can help you with regard to integrated Asterisk/VX installations. Feel free to call us with your questions and suggestions.

Here are some ways our clients are using Asterisk:

- ◆ To automatically play a disclaimer or informational message to callers before your producer or talent answer.
- ◆ As a programmable ISDN PRI gateway. Use with the PRI/T1 that feeds your office PBX, and redirect some of the DID numbers to your VX or to a voice mail/Interactive Voice Response system running on Asterisk.
- ◆ To block unwanted callers by implementing a 'blacklist' based on caller ID.
- ◆ To create your own off-site 'extensions' over the Internet. It's great for news bureaus, sales offices, or even reporter's homes.
- ◆ To create a private 'tie trunk network' between co-owned stations to reduce costs
- ◆ To have a backup Telco service by ordering a few inexpensive SIP lines or trunks to use in case of loss of a T1.
- ◆ To get rid of expensive toll free numbers or foreign exchange lines. Order SIP lines from a distant city that your station covers. SIP lines can cost as little as \$1.50 a month. Also, SIP lines don't have all the extra charges for city taxes and other "junk fees".
- ◆ Use the Asterisk call detail reports as a research tool. The reports tell you who called, when they called, where they called from, and how long the call was. The data can be exported to a csv formatted file that is imported into a spreadsheet or database application for further processing.

## Asterisk software: Distributions

Asterisk runs on Linux. You can download Linux from many websites and then add Asterisk to the operating system. Or you can load The OS and Asterisk from an all-in-one distribution disk. You can also buy an Asterisk "appliance" pre-loaded from companies like Fonality (Trixbox) and others. If you have one of these, Skip on to the next section titled "Log in to the web GUI for the first time".

A 'distribution' is an organized and maintained collection of open-source programs, these are available on an ISO image file that is burned to a CD and booted, automatically formatting the hard drive and creating the entire system from "bare metal."

Distributions can include the Linux OS, the Asterisk components, GUI tools, and specialty modules that the creators of the distribution deem useful. Choose one that has what you value. If this is your first experience with Asterisk, we suggest keeping it simple. If you know a "Linux guru," his assistance may be helpful, but not essential. Linux has come a long way over the past few years, and is now perhaps even easier and faster to install than Windows. You'll also find that you can go years without a reboot due to its excellent stability.

We've had success using the "PBX in a Flash" distribution. It is feature-rich, well maintained and documented, and tends to be kept more current than other distributions. It's more maintainable than some other distributions and tough to "break". Basic configuration is done through a built-in web server and a powerful "happy face" web front end called FreePBX.

Another choice that looks good is the Digium product called Phonevox. This is a ready-to-go software and hardware VoIP PBX from the main developers of Asterisk. Because it is a commercial product, it has support from the vendor.

## Hardware



Unless you are experienced and confident, we advise you to buy a pre-built, configured, s/w-loaded, and supported Asterisk machine such as the one Digium sells. Nevertheless, we offer the following gratuitous advice for those of you who decide to go it alone.

You are building a machine that will need to be more reliable than most of your regular file servers. You don't want to be rebooting your phone system! We like to use a 4u Rack Mount Chassis with generous cooling and a higher end power supply. 4U cases are inexpensive, roomy, usually have good cooling with low noise fans, have good filtering options and can accommodate just about any mother board. We like to use SATA drives in removable caddies for easy full system backups. Choose a mother board with PCI slots if you intend to use expansion cards such as for T1 line interfaces.

Choose a server-grade motherboard. We usually go with on-board video to reduce costs. The CPU need not be the biggest, baddest, fastest thing out there, but it should be in the "sweet-spot" with regard to price/performance.

We often put an extra Ethernet card in the machine or buy a motherboard with two Ethernets on the board. One is configured one for the "inside" (LAN)" and one for the "public" (WAN), similar to the VX.

2-4G of RAM is fine, but more is better. Hard disks should be server-grade and kept well-cooled for longest life. The goal is to assemble a machine that can run for 5 years or more. We are aware of Asterisk servers that have run continuously for three years or more, and hardware that is still in service after 15 years.

Server grade doesn't mean exotic RAIDs or multiple processors; a 'low-end' basic server will be fine. You'll find that the more common the hardware, the better supported it will be by Linux and the fewer problems you will have with compatibility. Stay away from 'Bleeding Edge' hardware, but spend a few extra bucks on a better CPU heatsink/fan or power supply. We've learned over the years that the most common failures are fans, power supplies and optical disks. If you treat hard disks well (mainly, keep them cool) they'll be more likely to last. Also many newer power supplies have an '80+' logo. This means that they are better than 80% efficient, which means less power consumed and less waste heat. As a general rule, buy a larger power supply than you think you'll need.

If you are the extra-careful sort, consider building two identical boxes - or at least keep a spare identical motherboard and set of peripherals, such as Telco interface or Ethernet cards, on-hand. The convenient availability of a given motherboard and some kinds of PC hardware will usually be less than a year at the current pace of development.

Keep any filters clear and inspect the machine periodically to see if ‘dust bunnies’ are collecting anywhere. Do a full backup using the Linux ‘DD’ (full disk image bit copy, or ‘clone’) command once in a while (quarterly/annually), or after you are satisfied that any major change you’ve made should be retained (after a trial period). Consider that the hard drives might hold users’ voicemail, asterisk configuration, and call records. There is a good backup utility that will automatically make regular backups of the unique data (and whatever you specify). Think of this as an ‘incremental backup’.

There will probably be spare capacity, so you could use your Asterisk server to provide other services you need, such as centralized logging using Syslog, or a Network Time Protocol (NTP) server.

## Expansion Cards



Because Asterisk has become so popular, there are a variety of expansion cards available that can be used with it.

The one we use most often is the ISDN PRI / T1/ E1 “Tormenta 2 or 3” type card, available from a number of vendors. ISDN PRI and T1 or E1 use the same card, since ISDN employs T1 or E1 as the underlying transport. A four-port PCI card is available from Phoniceq, inc ([www.phoniceq.com](http://www.phoniceq.com)) for about \$350. Quality and service from the company have been excellent. They also offer a number of other cards, including for ISDN BRI. The company offers examples of use and driver packages that simplify installation.

Asterisk creators Digium also offer a wide range of card types and support options. [www.digium.com/en/products/digital/](http://www.digium.com/en/products/digital/)

We don’t recommend installing analog interface cards within an Asterisk server. While there’s nothing wrong with the cards, we think it’s better to use external gateways to interface POTS lines and Telephones such as the small ‘appliance’ gateways from Cisco/Sipura, Grandstream, AudioCodes, Patton, and others that go straight to SIP/Ethernet. Another way to go for more than 8 lines is to repurpose a ‘Channel Bank’ with a T1 interface and connect it to a T1 card in the Asterisk. Channel banks are available at reasonable cost on ebay and from used equipment suppliers. It should be equipped with an FXO (Foreign Exchange Office) interface if you plan to terminate analog lines from a Telco. Channel banks use different interfaces, so be sure that you get the right hardware configuration.

Better is to avoid analog lines altogether and use a digital connection, either IP/SIP, ISDN PRI, or T1/E1. All are ‘four wire”, maintaining send/receive isolation.. ISDN PRI is the usual choice in both the USA and Europe.

Following is a step-by-step guide to setting up Asterisk. With the hardware in place, you are ready to move on to getting the software installed and configured.



## 1 Get your 'distro'

The most popular are at:

- ◆ [www.digium.com](http://www.digium.com)
- ◆ [pbxinaflash.net](http://pbxinaflash.net)
- ◆ [www.trixbox.org](http://www.trixbox.org)
- ◆ [www.freepbx.org](http://www.freepbx.org)

Download your distribution. We'll proceed assuming that you're using PBX in a Flash, henceforth 'PIAF'. It's a few hundred megabytes. Once you have it saved on your hard drive, you'll need to burn it to a CD. It'll have a file name that ends with .iso and you'll have to use your CD burning software to "burn an ISO image". This procedure varies depending on what burning software you have installed on your machine (Nero, etc), so if you haven't done this, we suggest 'googling' the search term "burn an iso image with" and add your burning software name at the end. Many people have had difficulty with this process in the past and you'll find clear instructions there. It's important that you burn the 'image' and not just copy files. The CD that you create will boot up by itself and will wipe out anything on the installed hard drive. Before booting, check the bios in your machine to be sure that CD-ROMs are bootable. If the machine is recent, no action should be necessary.

## 2 Get loaded: Install Asterisk

Put your freshly-burned PBX-In-A-Flash disc into the CD-ROM drive and start the machine. You may need to press the space bar when the machine asks if you would like to boot from the CD-ROM. If you have trouble, check the boot menu in your BIOS. Sometimes you have to set a BIOS menu option to allow CD-ROM booting. Most newer boards allow CD booting because Windows and Linux are distributed on CD-ROM. Have an Ethernet cable plugged into your new machine, as the system will attempt to download the latest updates at the end of the installation. You should have the machine connected to a router that has a DHCP server so that the machine can configure itself with the parameters that your router gives. If you are using two or more Ethernet cards, the new system will only attempt to use one of them for the automatic updates, usually the onboard one or the card with the lowest MAC address. It may ask you to choose one. It's no big deal if you guess wrong because you can change it later (and get the updates) or configure it all manually.

The procedure will start by copying all of the files needed for the basic operating system into a RAM disk that is used for the install. You'll be asked a few questions along the way:

From the text menu, select an install type. Take the default by pressing the ENTER key. This selects the 'Default' installation. It will remind you that the machine will be wiped completely.




```

ISOLINUX 3.11 2005-09-02 Copyright (C) 1994-2005 H. Peter Anvin
PBX in a Flash Version 1.7.5.5.3 - 32 bit 103110
You *MUST* be connected to the internet in order to install this program
WARNING: This install *WILL FORMAT/ERASE ALL DRIVES*
attached to this system *INCLUDING USB DRIVES!*
- For a default install just press enter
- For an LVM based install type kslvm
- For a network install type ksnet and remove CD at keyboard prompt.
- For an auto install, no prompts - type ksauto The password is passw0rn.
- For a raid based install type ksraid

      *ASTERISK VERSION IS CHOOSEN AFTER CENTOS INSTALLS*
[F1-Main] [F2-Options] [F3-General] [F4-Kernel] [F5-Rescue]
boot: _

```

Select the US keyboard (or the keyboard of your choice) when prompted, then press the <TAB> key to advance to the “OK” prompt. After this selection, the GUI starts up. Move your mouse to verify that it works.

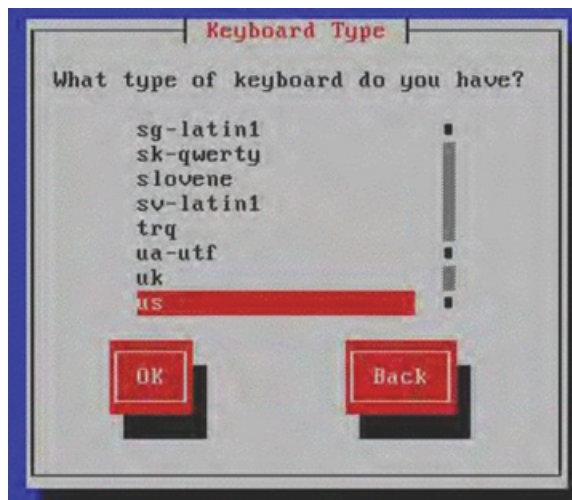

The system asks how you want to use the disk. It points out that *You have chosen to remove all partitions (ALL DATA) on the following drives <lists drives>*. If you’re sure that this is OK (and it should be), select “Yes”.

You’ll be asked your time zone. Select the correct one and click “Next”

Next, you’ll be asked to enter your root password. It is case sensitive! Enter and confirm it as asked. Then click Next

#### TIP

Be sure to remember your root Password. You’ll need it later to continue the system setup.

Centos installation commences (this is the operating system). The drive will be formatted and the installation and program files are copied. The operating system will be installed and

then Asterisk and the PBX in a Flash files. Enjoy a sip of your favorite beverage as the process continues over the next few minutes,

Eventually, you'll see a message congratulating you and that "Installation is complete". Not so fast... The operating system is installed, but there is the second part of the installation: the Asterisk and PIAF! Don't worry, the system is running from a "kickstart" script that will do all of the ugly stuff for you. Keep that beverage handy.

Remove the CD-ROM and click "reboot"

The system will shut down and restart. It will then offer you *Please choose one of the following options*: Choose 'A' (recommended option. This will begin a download of the latest version of PIAF. At this point, the system expects that you have it plugged into a network with a router that has DHCP and it will attempt to grab an IP address, netmask, gateway address, and Domain Name Server (DNS) address. If your Internet connection isn't working, the install will appear to bomb at this point. This is not a disaster! But more than likely it will just work, then you'll see it download the updates and continue to compile the program over the next 20 minutes or so (depending on your machine and connection speed).

Don't interrupt the process. It may look like not much is going on, but watch the activity of your hard drive LED. It should blink periodically. Messages on the screen will update every once in a while. The system will firmly suggest that you do not press any keys to interrupt this process.

Upon completion, the system will reboot by itself and you'll then see the colorful PIAF "splash screen" followed by a normal boot up that should leave you with a login prompt.

#### TIP

You can always choose the defaults unless you've "gone off the reservation" and are trying to do something unusual or complex (in which case you're probably smarter than your writer. In other words, "you're on your own!" Google and your "Linux geek" are your best friends. The good news is that many people have done what you're doing and have had the same problems that you have. Fortunately, they often share solutions on the web.

## Log in to the Console for the first time

No, not the mixing console! *Console* is the Linux term for the command line interface. You'll be greeted with a friendly (if spartan) login screen that looks like this:

```
CentOS release 5.5 (Final)
```

```
Kernel 2.6.18-194.8.1.el5 on an x86_64
```

```
pbx login: _
```

Enter 'root' and hit <enter>

```
Password: _
```

Enter the password that you set for root earlier in the setup and hit <enter>.

You should get a full page status screen that shows version numbers, services running and an **OK** or other summary.

Then, at the bottom of the screen you'll see:

```
root@pbx:~ $ _
```

Type 'help-pbx' and <enter>, you'll get a list of commands. First, Let's set up your ethernet IP address and get this box on your network so that you can get it going fully.

At the '\$' prompt, type 'netconfig' and <enter>. You'll get a blue screen (not like in windows, don't worry!) asking if you'd like to set up networking. Press the space bar if the "YES" button is highlighted, (the <TAB> is used to toggle between yes and no). The next screen has a place to enter an IP address, netmask, default gateway and name server, or a check box that you can select with a spacebar tap that enables DHCP so that your router or DHCP server can assign an address for you. We suggest that you assign a static address, as this machine is a server that will always be online and running. Below is our configuration; change this for your network

On our lab network, the router is on 192.168.0.1. We use a class C netmask of 255.255.255.0 and the DNS server at 8.8.8.8 works almost everywhere and is fast, so it's used often.

Use the <TAB> key to advance to the OK button and <enter> to select it.

At the prompt root@pbx:~\$ \_

Type 'ifup eth0' and hit return. There will be a short pause and then you'll get the prompt back. Your ethernet interface (eth0) should now be up and working.

If you're connected to the Internet, type 'ping yahoo.com <enter>' and if you're successful, you'll get your ping returned from yahoo.com. To stop the pinging, hold down control and hit 'c' (Ctrl-c). You should get the prompt back again. This little test proved two things: that you have internet connectivity and that your DNS name resolution worked. (it looked up the IP address for yahoo.com and gave your box the ip address for them). If you reboot the machine, the eth0 interface will come up automatically from now on.

Please be aware that this tool only configures a single Ethernet card. If you have more, you can configure them later.

### TIP

Is your system really slow at certain points or does it seem to stop? DNS is used for many things in Linux. If it isn't available, many services will be VERY slow. Minutes-long pauses waiting for name resolution timeout are not uncommon and some things will appear to stop working entirely. So if you have long pauses while working with your system, lack of DNS is a probable cause. If you plan to run your system without DNS, you'll want to fill in the 'hosts' table with any addresses that might be logged or 'talked to' by the system. It is found at '/etc/hosts'. You can edit the file using 'mc' (Midnight Commander) or other editors like pico and vi. Follow the examples in the file.

### Set the passwords for various features

At the shell (command) prompt, type passwd-master and then <enter>. You'll be prompted to enter the password twice. If they match, the password is set. Save these or choose passwords that you won't forget. Do the same for the following commands:

passwd-maint

passwd-wwwadmin (you'll use this one most often)

passwd-meetme

passwd-webmin

**Turn some services off for now**

At the shell prompt, type 'disable-iptables' and then <enter>, then type 'disable-fail2ban' and hit <enter>. These are security tools that could get in your way until you're fully set up. If you run your machine behind a router or firewall, you won't need these anyway.

## 3 Configure Asterisk

Asterisk needs to be configured for your application. There is plenty of information on this topic on the Asterisk site. In brief, the steps are:

1. Set up trunks.
2. Set up outbound routes.

We'll work through a simple example in the following pages.

We prefer to use SIP extensions rather than SIP trunks to connect Asterisk lines to the VX because they are more flexible. For example, station SIP signaling conveys caller ID, which the VX can display and use. SIP trunks, on the other hand, do not pass CID. The VX supports the required SIP registration when you enter the authentication password on the show configuration pages.

By default, Asterisk uses SIP Reinvites. This causes the VX or VoIP phone to make a direct connection to the Telco, bypassing Asterisk's processing when compatible codecs are present at both ends. This is generally a good idea, but it can be troublesome because it forces the VX to change the IP address and other parameters for the line source. While Reinvites are supported in VX since April 2011, we have discovered an issue with Asterisk which can cause audio problems in some cases. If Asterisk is used as a PSTN gateway or connected to a telco, it should be fine, but if it is accessible from the public internet (ie. anyone with a softphone can call it), it is better to disable Reinvites. If one is not sure, better to be on the safe side. Until re-invites are supported, the Asterisk 'canreinvite' parameter should be set to 'no' (in later versions of Asterisk, those are two options: 'directmedia' and 'directrtpsetup')

(In case anybody is wondering - Asterisk doesn't re-negotiate the codecs. For example: VX supports g.711 and g.722. Let's say someone is calling from a softphone supporting g.711 and Speex. Asterisk supports all four, and will advertise it this way, transcoding if necessary. However, when it makes a direct connection, it doesn't change the codecs to those actually supported by each party. Thus, VX will end up thinking that the other end supports g.722, and the softphone will think that VX supports Speex - resulting in silence in both ways.)

When Asterisk and VX are on the same subnet, Asterisk's NAT (Network Address Translation) support should be set to 'no'.


It remains to be seen if, and how well, Asterisk will support wideband codecs. Until this is clarified, and when the VX supports wideband codecs, it might be required to keep Asterisk out of a wideband call path.

Let's get started...

**Log in to the web GUI**

Point your browser to your Asterisk server address, being sure that your computer is on the same subnet. For example, if your Asterisk box is on 192.168.0.248 with a netmask of 255.255.255.0 and your browser computer is on 192.168.0.11 or any IP with the same first three bytes 192.168.0 and the last byte between 2 and 254, accompanied by the same netmask as the Asterisk box's, you are good. Supply the login credentials and you should see the screen below:

Click on the

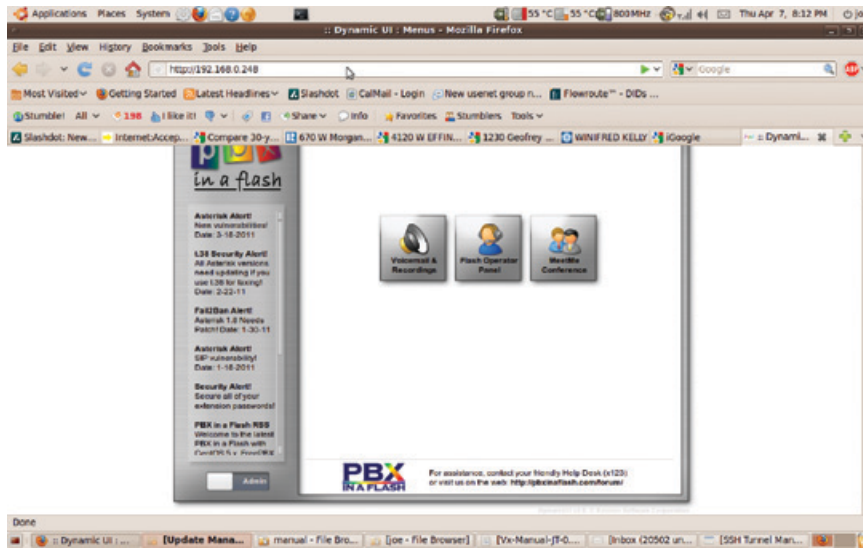

admin virtual slide switch at the bottom left of the page and the menu will change to the one below. You may be asked for your username and password to access this. Use 'wwwadmin' and the password that you set earlier, then click OK. You should see the screen below.



**Use 'FreePBX' to do some administration chores**

Click on FreePBX Administration and you'll see a new menu that supports almost all of the features you'll regularly use in Asterisk. You'll do most of your setup from this menu.

Here's what we're going to do next:

- ◆ Create an extension that we'll later use with the VX.
- ◆ Set up a trunk to accept incoming calls and to be used to make outgoing calls.
- ◆ Set up an 'inbound route' to tell incoming calls how to get to our extension on the VX.

- ◆ Set up an outbound route so that you can make calls out


Then we'll use the VX web interface to use the line that we created and then make a test call.

Finally, we'll create a trunk from the PSTN and route calls from that trunk to our extension, all by using the web GUI. We'll go a step at a time from this point.

### Create an extension or two


To get comfortable with Asterisk, create an extension or two to use for testing. You can use the extension to test your connection with the VX and just to check for signs of life. You deserve to experience some action after all that work loading and configuring.

Click on **Extensions** and then click on **Add Extension**. The "Device field will default to **Generic SIP Device**. Accept this by clicking on the **Submit** button. Then, Fill in the extension number you'd like to use, then the display name and outbound caller ID. This is what callers will see when you call them from this extension. Interestingly, it can be just about anything. Some phone companies screen to be sure that you're sending a properly formatted area code and phone number, while others will take anything - a 4 digit extension, a single digit, your lucky lotto numbers, whatever.

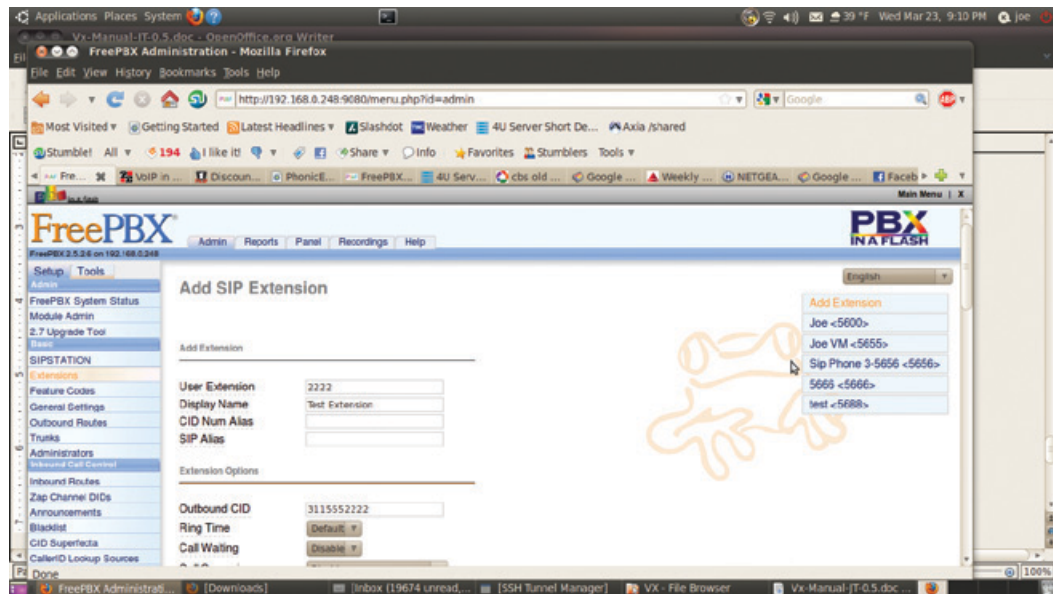


Scrolling down the page some more we see some more options. Most of these are optional, except for "secret". By default the 'nat' field is set to "Yes", be sure to change it for use with the VX or any extension to be used "inside" your firewall. This is another name for password. Scrolling further...



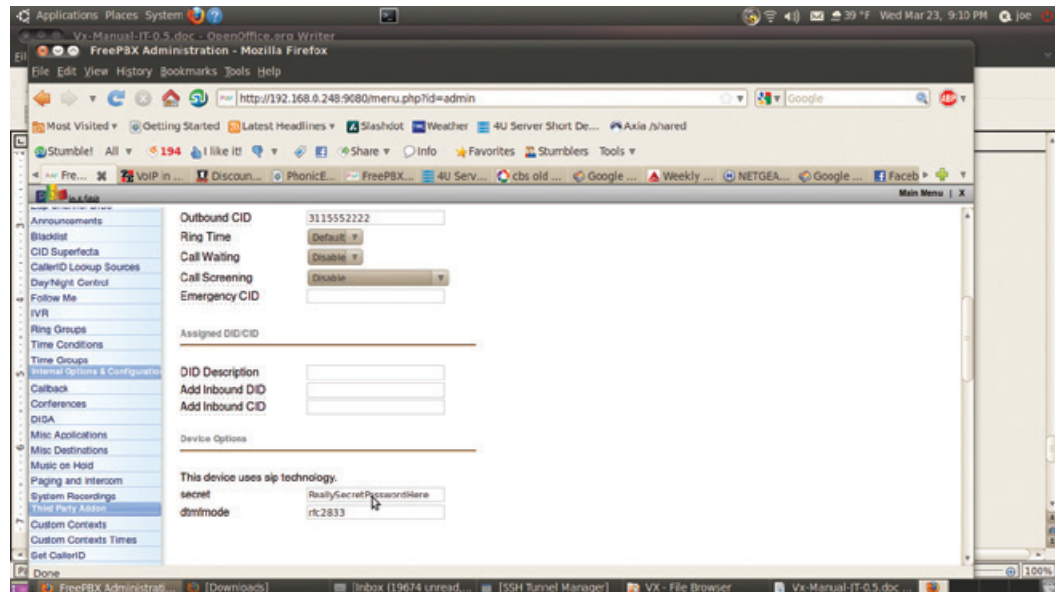


We see **Recording Options** and **Voice Mail settings** (You can record all calls or the extension user can dial a code while on the line to initiate recording of that call. Recording is optional, of course. Below the field marked **Secret** is another called **DTMFmode**, which should default to RFC2833. Leave this as is. The default is the preferred method of handling DTMF tone transmission. RFC2833 uses SIP messages to pass detected DTMF tones along to the other end of a call, rather than generating audio tones locally.

The Voicemail system in Asterisk offers all the usual capability. You could enable it on our about-to-be-created extension 2222 here so that you could see some of what it can do. Set the password. We set up this mailbox to automatically send us a wave file of any messages left to the email address in the field below. The audio quality of the recordings is impressive and usable for on-air playback. This is also optional. scrolling further down...

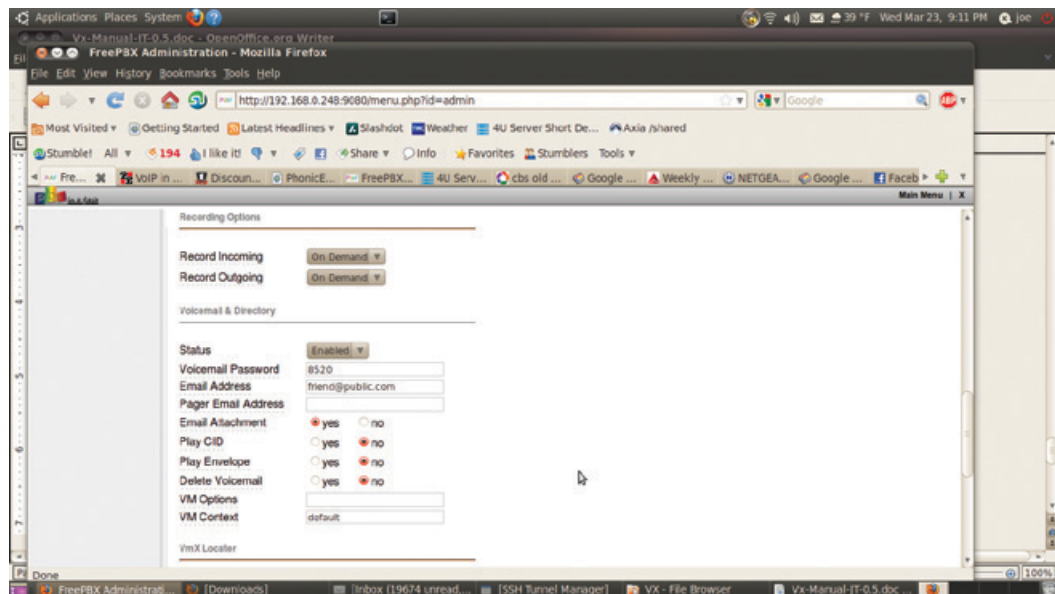

We are finally at the bottom of the page for extension 2222.

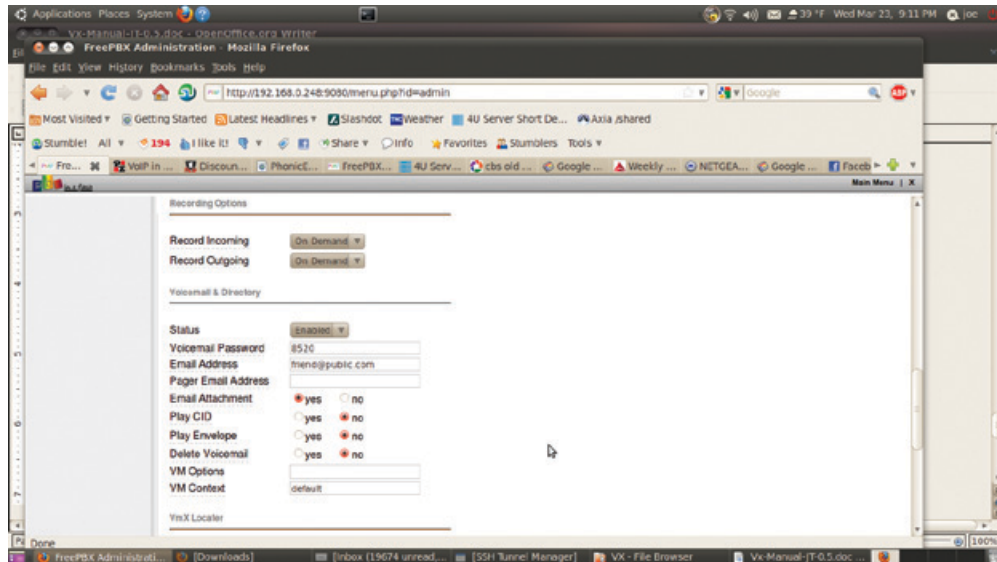


We enable the Vmx Locator. This is useful as it allows callers to be transferred to number inside or even outside of the system if 0, 1 or 2 is pressed. Here '0' is programmed to send callers to the station operator, '1' send the caller to our imaginary cell phone and '2' transfers the caller to our imaginary "personal assistant" at extension 5667. If you do use these options, be sure to mention pressing '0' for the operator in your outgoing voicemail message. You probably don't want to use these optional features for request lines or public call in numbers, but... they're there and work well if you have the need.

If you're happy with all of the above, click on the Submit button. The entry will be created and stored but not activated until you click on the orange bar at the top of the screen that appears when ever you have 'unapplied' changes. Don't worry, applying changes won't drop any calls or interrupt any conversations in progress.


## Trunks

Since we now have an extension, let's make it so you can call somebody or get called. To do this, we'll need to way to and from the Public Switched Telephone Network or PSTN. The provider of SIP here was Vitelity, who provides "cut and paste" trunk set up data on their website for subscribers. Most providers do this. The next screenshot shows how Vitelity suggests that their trunk be set up.




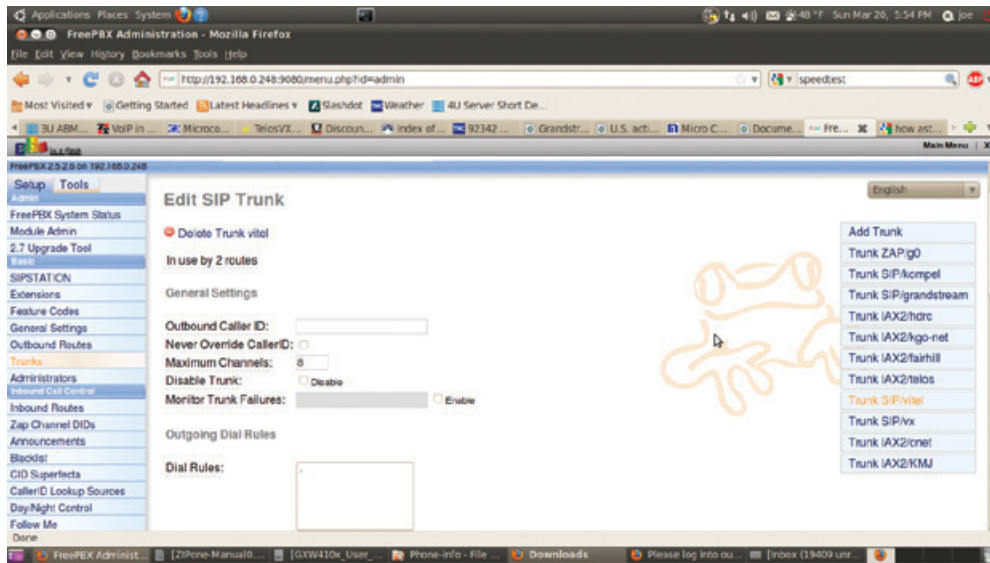


In our example here, we only use Vitelity for incoming calls, so the 'Outgoing Dial Rules' are irrelevant. We could insert a period in the Dial Rules box that would simply pass whatever digits were dialed down the trunk to Vitelity. Keep in mind that this is just the trunk setup, and that there still has to be inbound and outbound routes to get calls into and out of the switch.

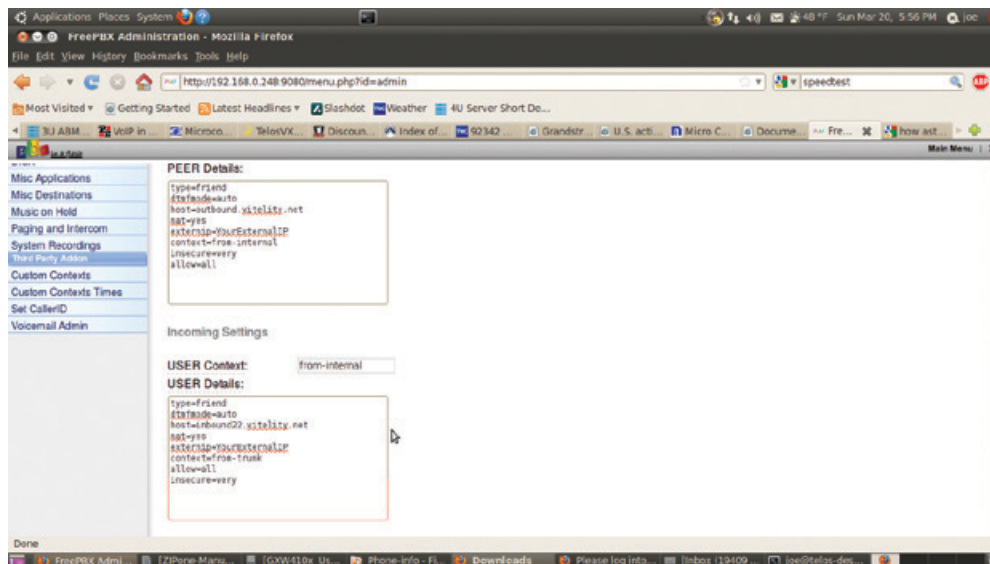

For incoming calls, this is done with an inbound route that matches digits sent by the provider, the Direct Inward Dial number itself and telling it "where to go", in our case, to an extension.

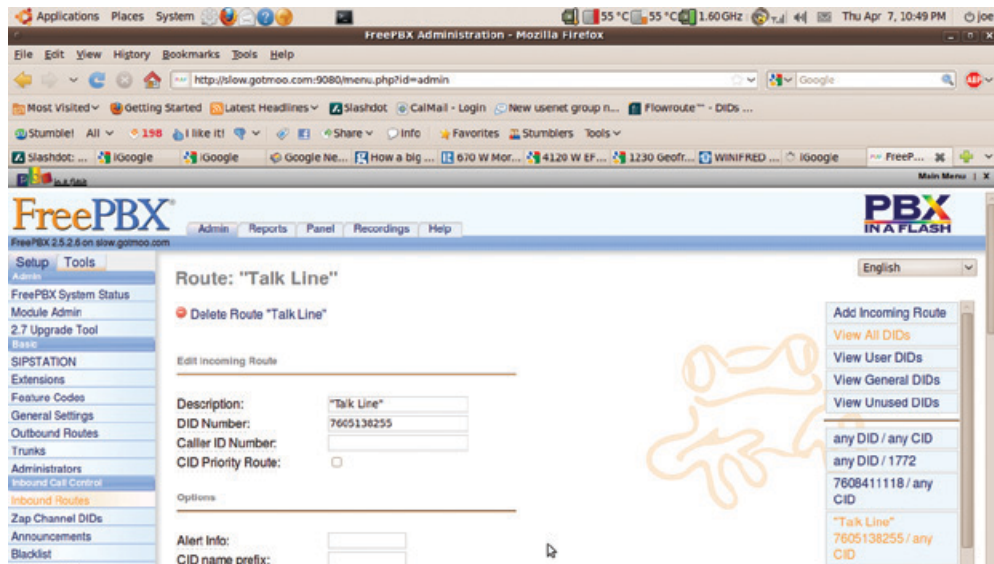

The DID number for our example “Talk Line” is 7605138255. We leave the Caller ID Number blank because we want it to work from ANY number, and entering a number would cause it to ONLY work from the number in that field. Rumor has it that a FreePBX programmer added this feature so that his “X Girlfriend” could get “special treatment”, like being sent to a special ‘ring forever’ extension. We don’t need this right now, but it could come in handy later (possibly depending on your personal situation). Leave the rest alone and scroll down further...

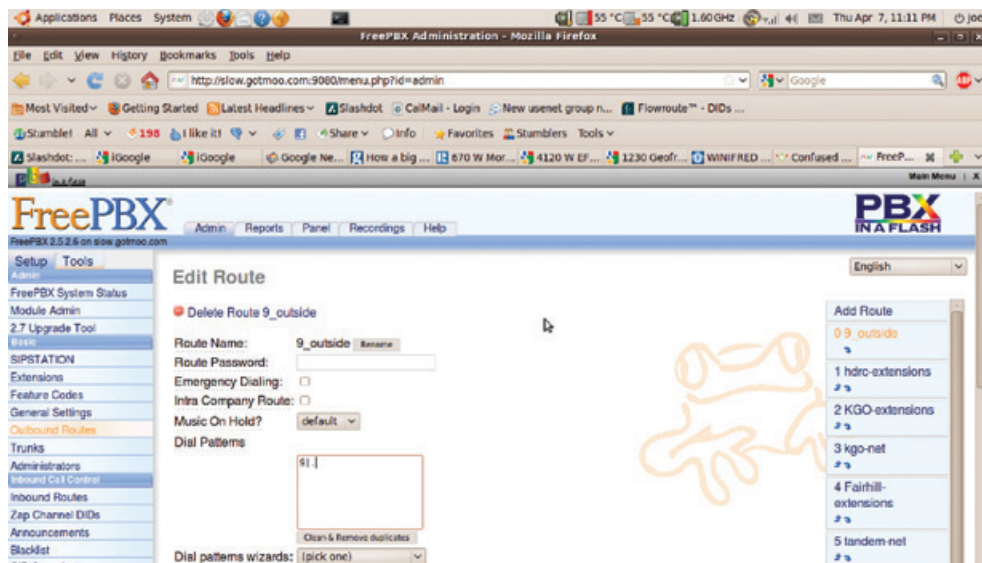

We are routing callers who dialed 7605130999 directly to Extension 2222 on the VX. Click **submit** and then apply the changes. We could also send those calls to any of the other options, such as “Misc Destinations: Mental Health Hotline” or “Joe’s Voicemail” These destinations can be created and added by you in the FreePBX GUI.

Remember that if the show that uses extension 2222 is not selected on the VX (through the VSet or VX Producer software) calls to 2222 or the DID number routed to it will receive an “All

Circuits Busy” recording from Asterisk, because all circuits are busy as there is nowhere for the call to go.

## Outbound Calls


Below, we decide to use ‘9’ to dial outside the PBX, so we cleverly name the route ‘9\_outside’ to make it clear later what the thing does. In the “Dial Patterns’ box we enter ‘9|.’ What this does is match the leading 9 from the number dialed, let’s call it 913115552368, deletes the 9 (everything ahead of the pipe symbol ‘|’ is deleted) then the ‘.’ represents the rest of the number dialed (13115552368) and passes that number to the trunk selected at the bottom of the outbound route page, in this case, our Vitelity trunk.

## Connect your VX to Asterisk

We’re going to assume that you’ve done the basic setup of your VX. That means you’ve got audio going and a VSet phone connected and talking to your VX engine, and it’s on the same network as your Asterisk box.

Log into your VX engine with the web browser, and select SIP. Enter the IP address of the Asterisk in the *Server* field at the bottom of the page, and click *Add*. The configuration page for the server will open, where we can change the server settings and add new lines.

Earlier, we created extension 2222 using FreePBX. Now we need to add a corresponding line configuration for VX to register it with the server. *Expires* allows you to change how often VX will refresh it’s registration. Leave it empty and the VX will register as often as Asterisk says it must. *Auth User* is typically your extension number and thus can be left empty as well, *Auth Password* should be the same as your ‘secret’ from the PBX in a Flash Extensions setup page.

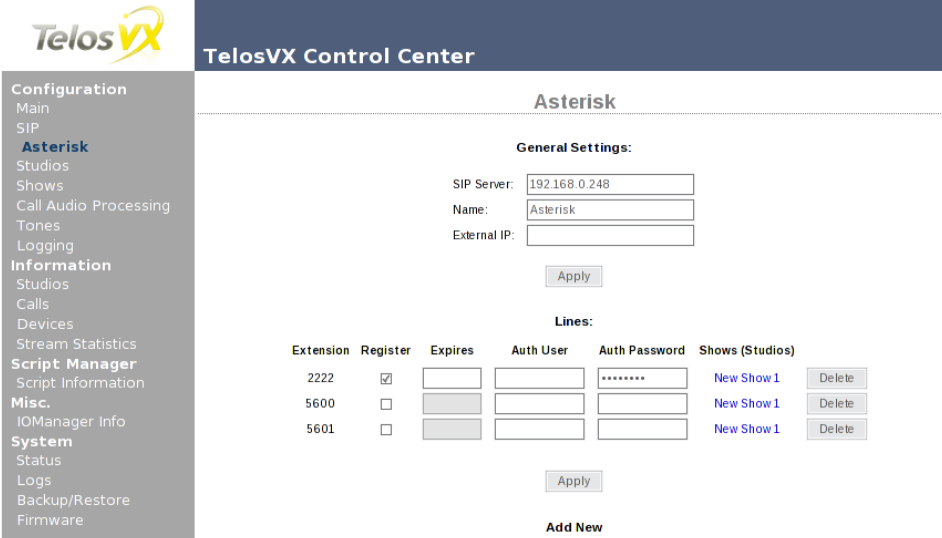

**TelosVX Control Center**

**Asterisk**

**General Settings:**

SIP Server:

Name:

External IP:

**Lines:**

Extension	Register	Expires	Auth User	Auth Password	Shows (Studios)	
2222	<input checked="" type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text" value="*****"/>	<a href="#">New Show 1</a>	<input type="button" value="Delete"/>
5600	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<a href="#">New Show 1</a>	<input type="button" value="Delete"/>
5601	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<a href="#">New Show 1</a>	<input type="button" value="Delete"/>

**Add New**

Though the VX supports SIP trunks as well as SIP extensions (lines), extensions are probably better for you to use than trunks. First, SIP lines each have their own outgoing caller ID, programmable per line in Asterisk. Trunks will only send the extension number for caller ID, or the same the caller ID for all of the numbers on the trunk, which can be confusing. People have become used to getting accurate caller ID on their mobile phones, etc. You may wish to hide or substitute caller ID on ‘Private lines’ or hotlines. Another feature of SIP lines is the registration feature. With it, the system knows that an extension is ready and available for calls.

After adding the line, you can assign the extension to line buttons in show configuration. Once the show is loaded, the information page on VX will show the current status of your lines and trunks. Notice below, that extension 2222 (and all of its multiple appearances) is OK and registered. The others say 'OK' and trunk. This is because the trunk is 'assumed' to be present. Extension 2222 has been verified as present.

Now we'll go to the VX Shows page and look at the show that we built earlier. It has a 6 line 'hunt group' for extension 2222 and a couple of "back lines" or hot lines. It's a 'hunt group' because there are 6 line keys set to extension 2222. Optionally, we could have the 'busy all' box checked only for extension 2222, our 'public caller' lines. Only these lines will be busied out when we press the "block all" key on the VSet or activate that feature from VX producer. In this example, that's what we did.

- Logging
- Information
- Studios
- New Studio 1**
- Test
- Calls
- Devices
- Stream Statistics
- Script Manager
- Script Information
- Misc.
- IOManager Info
- System
- Status
- Logs
- Backup/Restore
- Firmware

**Active Fixed LW Channels:**

Id	LW Channel	Name	Calls
1	in: -3198, out: 3198 S1:Fix 1	-	-
2	in: -3199, out: 3199 S1:Fix 2	-	-

**Active Selectable LW Channels:**

Id	LW Channel	Name	Calls
3	in: -3111, out: 3111 S1:Set 1	-	-
4	in: -3112, out: 3112 S1:Set 2	-	-

**Program on Hold LW Channels:**

LW Channel	Direction	Calls
0	From Source	-

**Acoustic Echo Canceller: Disabled**

**Devices:**

No devices attached

**Lines:**

Position	Name	Local Number	Remote Number	LW Channel	Device SID	Status	State	Comment
1	2222	2222	-	-	-	OK (Registered)	IDLE	
2	2222	2222	-	-	-	OK (Registered)	IDLE	
3	2222	2222	-	-	-	OK (Registered)	IDLE	
4	2222	2222	-	-	-	OK (Registered)	IDLE	
5	2222	2222	-	-	-	OK (Registered)	IDLE	
6	2222	2222	-	-	-	OK (Registered)	IDLE	
7	Hot #1	5600	-	- (3198-3198)	-	OK (Trunk)	IDLE	
8	Hot #2	5601	-	- (3199-3199)	-	OK (Trunk)	IDLE	

© 2009-2011 Telos Systems

## Make a test call on your VSet

Pick up a line using your VSet, and dial '1234' and press the GO button. If you are using PBX in a Flash, you should hear a congratulatory recorded message from the Asterisk. Then try dialing '2222' One of your 2222 lines should ring and you'll hear a ringback tone in the handset or on the studio output. Congratulations!

## VX Tech Cheat sheet – Default IP numbers, passwords, etc.

### Default Passwords:

VX Engine **username** = user , **password** = <blank>

VSet Telephone **username** = user , **password** = <blank>

## Default IP Addresses:

VX Engine 'Network' interface = 192.168.2.200 (front panel settable)

VX Engine 'WAN' interface IP address: OFF by default, no IP set.

## SIP Parameters

Codecs supported as of early 2011: g.711 alaw and ulaw. g.722.

SIP Trunks

SIP Stations

## TCP/IP Ports and protocols used by the VX System

- ◆ 80 HTTP (TCP/Network Port only)
- ◆ 22 SSH (TCP)
- ◆ 5004 used internally by DSP engine (UDP)
- ◆ 5060 SIP (UDP)
- ◆ 8080 HTTP (TCP/WAN Port only)
- ◆ 20518 Livewire ports
- ◆ 62000 through 62513 RTP (UDP)
- ◆ Port numbers may be changed on the WAN interface for security and flexibility.

## VSet telephone

VSet Telephone default IP address: 192.168.0.201 (front panel settable)

### Default username and password:

**username = user**

**password = <blank>**

telnet requires no password

### TCP/IP Ports and protocols used by the VSet Telephone:

80 HTTP (TCP/Network Port only)

23 Telnet (TCP)

20518 Livewire port

## Power Over Ethernet (PoE)

The VSet uses standard 802. Power Over Ethernet (POE) and consumes 15.4 watts Please consider this relatively high power consumption rate when choosing your POE source.

## VX FAQ

*The Telos VX uses VoIP. What does that mean to me?*

Let's define what "uses VoIP" means. The VX uses it in two distinct ways: One: it can connect to Telco services using standard SIP VoIP. You benefit from having options –connecting to PBXs digitally, to ISDN and analog lines via gateways, etc., etc. With VX you can finally integrate your on-air phones with office phone systems from a variety of vendors. Getting Telco service from VoIP dial tone providers means that your audio quality and hybrid null will be much better as VoIP dial tone is delivered "4 wire" without hum, noise, and loop loss. Building on ubiquitous VoIP standards means a variety of third party hardware can offer flexibility. And you might save a lot of money getting service this way. Two: VX system components connect to each other over standard IP/Ethernet networks with all the advantages that brings. For example, in Livewire-equipped facilities, one RJ-45 jack connects dozens of audio channels and rich control to phones-like controllers, PC applications, integrated console controllers, etc.

*So I can use the VX with my regular 1MB POTS lines? How? Can I use ground start lines for incoming calls only?*

You can do that, and it's not difficult. You only need a POTS gateway device. However, we encourage using digital delivery for the best sound quality.

*What about ISDN BRI and PRI lines?*

If you have ISDN now and want to keep it, again there are gateways available. However, it is often cheaper to port these numbers to a VoIP dial tone provider. All of these options are worth considering.

*So I can experiment with SIP VoIP trunks? Why would I want to do that?*

Actually, we recommend it! We think that you'll find that they work better than you may have expected, as many of the VoIP problems we have seen are caused by limitations of analog terminal adaptors (IP to POTs gateway devices)! Since these are not needed with a VoIP-based system such as the VX, that class of problem is eliminated. There are a number of inexpensive ways to try VoIP without risk. You can also get VoIP-delivered numbers from distant area codes and exchanges. If you're paying mileage for foreign exchange lines or have national toll free numbers, you'll definitely want to consider this option.

*I can't put a flasher across a VoIP line, so how can I flash a light when the hotline rings?*

This same issue arises with ISDN, so beginning with our TWOx12 we included a GPIO output for this function. The Not to worry – The VX has this capability. In fact, it has multiple outputs which can be assigned to any of your VoIP lines.

*I have been watching VoIP with interest. But reports I have heard about services such as Vonage are that sometimes they work well, but other times not. Frankly, I surprised to see Telos advocating it.*

We get this concern often and understand why you ask. The term Voice over Internet Protocol



(VoIP) does not distinguish between “VoIP over the Internet” versus “Voice over other (managed) IP networks”. If you have been keeping up with the transition to IP Codecs, you probably have noticed the same terminology issue there. IP-based STLs over an IP T1 are just as reliable as traditional STLs over traditional TDM T1 circuits. You are completely right to be concerned about a VoIP trunk (or an STL) over the Internet, as that is not at all the same thing, and performance in that case could be variable. Inside the facility, on a LAN, all problems disappear, since you have plenty of bandwidth and full control over the network.

*So shared bandwidth is the only problem with VoIP?*

Well, there’s audio quality. In the early days VoIP used a lot of compression, with bit rates being as low as 6kbps. Needless to say, the resulting audio was not impressive. These low-rate codecs have mostly fallen by the wayside. The lowest-grade codec the VX supports is g.711, the standard for digital audio in the telephone network pre-IP. And you will eventually benefit from higher-fidelity codecs as these proliferate in the VoIP world.

*How does AoIP relate to VoIP?*

Despite the similar names and underlying technologies, they are very different with regard to performance and application. An analog phone line and a balanced 600Ω studio audio circuit are pretty much the same tech, but the applications and performance are very different. ‘AoIP’ has come to mean professional studio-grade audio networking - full-fidelity and usually with no compression. Low-delay and synchronized channels are other distinguishing characteristics. Another way the two differ is that AoIP uses an advertising/discovery protocol for receivers to find sources instead of the Session Initiation Protocol (SIP) that VoIP employs. AoIP uses a system-wide clock mechanism to support low-delay and tightly synchronized channels. Finally, AoIP often takes advantage of IP’s multicast capability to permit multiple receivers to listen to an audio source efficiently. AoIP is intended for managed, guaranteed-bandwidth networks, such as with an Ethernet switch as the core of a local area network.

*And what about ‘IP codecs’?*

Now you are very close to VoIP! These use SIP for call setup and various codecs for compression, so are similar to VoIP telephones. In fact, they actually are VoIP telephones and can sometimes interoperate with them. They have better codecs than VoIP phones, though. AAC-ELD, in particular. Advanced IP codecs, such as our Z/IP, employ sophisticated technologies to overcome the Internet’s deficiencies. Dynamic buffering, error concealment and more clever stuff.

*I have read that some VoIP PBXs use IAX trunking. Can I use the VX with these?*

IAX is a protocol invented by the Asterisk people. It provides functions similar to SIP, but with more bandwidth efficiency. The VX doesn’t support IAX trunking at this time. But you can connect the VX to an Asterisk with SIP trunking or as multiple SIP extensions. There’s plenty of bandwidth on a LAN, so this works fine, while staying with a standards-based approach. We like Asterisk as a VX adjunct. It can add voice mail, automated attendant, blocking callers from caller ID, off-premise SIP extensions, and more, to a VX installation. Asterisk is free Linux-based PBX software that runs on a PC. The VX and Asterisk PBX are an attractive combo we expect will become popular within the broadcast industry.

*How can I get reliable VoIP trunk lines? What is involved? Can you recommend a vendor?*

Yes, we can assist. We have been working closely with the VX beta sites and other early adopters of VoIP, so we have plenty of experience to share. There are several types of VoIP dialtone providers. You'll want to consider how the service will be delivered to you; via the Internet (like Vonage), or via a dedicated IP circuit from the provider that includes a Service Level Agreement and guaranteed Quality of Service (as offered by a number of vendors including most of the traditional Telcos). For discussion of this and other matters, check the Telos web site on a regular basis as we continue post material on this and related topics.

*I know that SIP is supported by the new IP codecs. Will the VX be able to connect to my Zephyr/IP in the field? Other codecs?*

As we hinted above, Yes! The VX supports g.722 (7khz, 'wideband audio' and g.711 (3.4khz, "phone quality").

*What about SIP, SDP, RTP, ENUM and UDP?*

We know that engineers are lifetime learners and encourage that. However, just as you probably don't know much about "SS7" or "IUP" in the telephone network, understanding these details is optional. We do have White Papers on our web site to educate you on these, and other, terms. Start with the one here: You could read Steve and Skip's AoIP book, too, for a fun and comprehensive coverage of this stuff.

**Here's a paper on the adaptive IP codec: [http://telos-systems.com/techtalk/Advanced%20Tech%20for%20IP%20Remotes\\_Church\\_Final.pdf](http://telos-systems.com/techtalk/Advanced%20Tech%20for%20IP%20Remotes_Church_Final.pdf)**

*Does Livewire technology come in to the VX picture?*

Yup. The VX takes VoIP on the Telco side and Livewire AoIP on the studio side. This makes integration with Axia consoles and networks easy and efficient. If you don't already have a Livewire network, you would use Axia analog or AES audio 'nodes' to provide I/O in either format. Each node provides eight stereo inputs and eight stereo outputs to and from the system. Each Axia GPIO node provides 8 "groups" of 5 inputs and 5 outputs, covering the needs of 8 studios. Telos Support is always available to help you specify exactly what you need. **If you are new to Livewire Technology you may wish to skim through our Primer, here: <http://www.axiaaudio.com/manuals/files/IntroToLivewire2.1.pdf>**

*So the two can live together side-by-side on the same LAN?*

Yes they can.

*So let's talk caller audio quality. What does VX offer compared to the NX series and your legacy products?*

Advanced audio processing and the fact that you never have to overcome Telco loop losses or extra two to four wire conversions means that the voice quality is as good as it can be. Calls from mobile phone calls will be less than perfect at times, but VX extracts the best possible from them.



*How are callers on the VoIP trunks going to sound? What about echo? Won't cell phones sound even worse than usual?*

The VX has enough processing horsepower to deal with even extreme echo situations, and four-wire Telco delivery means that the only external echo path is from the caller's line, when it's analog, and the caller's handset. The VX uses Telos' latest hybrid technology (5th generation), enhanced with the latest state of the art acoustic echo cancellation. Even when using open speakers, and changing levels during a call, the new algorithm makes feedback nearly impossible.

*Steve Church once told me that IP cell phones can sound \*better\* than usual 3 kHz circuit switched phone technology - something about G.722 dot something. Is this true?*

Right. Current Cisco VoIP phones, for example, support the g.722 codec. The VX supports this, as well. However, Steve was probably referring to "AMR Wide Band" also known as G.722.2., sometimes called "HD Audio". It's 7kHz and doesn't sound at all like "phone audio" - in fact, it sounds better than regular G.722! AMR-WB is part of the new ITU standard for mobiles, so should grow over time. Meanwhile, some IP-based apps for mobiles are starting to use wide-band codecs, such as MPEG-ELD in Apple's 'facetime app.

**Note that VX's call audio processing is bypassed when using g.722.**

*OK, I am starting to see the light. Cool stuff, but where's the catch? Is VX hard to install and configure?*

Setup is via web. It may be little different than what you're used to (or not) but it's not difficult, and some customers never crack open the book to set it up. Power and flexibility do come with a little complexity, but we'll always be at your side should you need us.

*There is no such thing as a free lunch - it must be hard to use then, I know there's a catch... I really don't have time to explain a new system to the air staff.*

We know! Rest assured it's easier for your talent, not harder! We recognize that any time you change anything in a studio, there can be some transition time. While there are a lot of new features in the VX, your staff can use the basic stuff immediately because it works just like familiar and comfortable Telos gear. The color, hi-rez LCDs and seamless console integration (to Axia Element and iQ) enhance the user experience. As you read this, systems around the world are screening calls and putting them on the air without drama. Jocks and Talk hosts alike praise the VX!

*If I use an Axia console, it gets even better?*

Yes - that's the ultimate! You start with the most flexible console/audio-platform and then add smoothly integrated phones with the IP network powering it all. Sweet! The network delivers any of your Telco lines to any of your studios, in any combination. Any line is available in any studio at any time.

*I notice the VX engine has both a LAN and WAN connector; why is that?*

It's a built-in firewall, isolating the VoIP connection from your studio network. We use this same approach in the iPort Livewire-WAN MPEG gateway.

*What about call screener and database functions?*

A basic Call Screening app, VX Producer, comes with the system. Other networked, PC-based apps, such as Broadcast Bionics' PhoneBOX VX or NeoGroupe's applications put information about your callers in front of your producers without the need for caller ID boxes, serial cables or other hassles.

*What about SMS messages and chat - Can they be integrated into my phone system?*

Using Broadcast Bionics Phone Box VX, yes! Telos has always built open systems to allow others to create their own visions around our gear.

*OK, so the catch has to be the price?*

The VX lets you leverage cheap networking to serve your entire facility. Since you don't need hardware boxes for each studio, cost is surprisingly reasonable. You'll use the VX in your on-air studios to replace older multi-line systems, and you'll use it to replace hybrids in news-rooms and production studios. You might also decide to eliminate walls full of 'couplers' for pre-delay IFB dial-up lines and Transitioning your Telco service might save you a lot of scratch. We seen stations saving thousands of dollars a month (no kidding) by eliminating POTS lines, with their taxes and fees.

*Anything else cool about the VX?*

Did we mention the color LCD user interface on the new VSet phone/control surface? Producers and talent love it!

*Fancy gear like this has to be trouble, no?*

VX is simpler than a multiple-box approach. With fewer components, it's more reliable. At the time of this writing, no VX engine at a radio station has crashed, ever. We'll probably have a contest to see who has the longest 'uptime'. Right now, it's 6 months - but that system was installed 6 months ago...

## Application Example - WKSU

WKSU is a non-commercial FM radio station affiliated with Kent State University. It features NPR, APM and PRI programming, classical music, regional news and, on weekends, folk music. The station serves the Akron and Cleveland radio markets with its main FM service and six repeaters. The main FM and four full power repeaters each host four full-time HD Radio channels: a simulcast of the main service, a folk music channel, a classical service, and The WKSU News Channel. All of the programs are also streamed for Internet listeners.

The office and studio facility is housed in a stand-alone building at the edge of the Kent State University campus.

The two largest studios are equipped with Axia Element consoles. One of these is the main on-air control room, while the other is used for producing a variety of long-form programs, including an evening interview and call-in program.

The VX currently serves these two studios.

The main station call-in numbers are delivered via a SIP service offered by the VoIP provider bandwidth.com. IP network service is from the local Telco and is delivered over a T1 circuit, with the University's Internet connection being a backup. A router located on the WKSU premises is configured for automatic backup. 20 telephone numbers are delivered over the SIP service, which may be used for both incoming and outgoing calls. Despite the leading-edge nature of SIP Telco service, CE Chuck Poulton and network administrator Dan Kuzinsky ?? report that it has proven reliable and has delivered excellent audio quality, perhaps because call audio is maintained 4-wire (independent send and receive audio paths) and digital from the PSTN to the studio. The PSTN g.711 coding is maintained until it is converted to the high-fidelity Livewire format in the VX system.

Two analog lines from the local Telco connect to the studio IP system via a Grandstream 4-line-FXO gateway. Another two lines are brought into the gateway from the University's NEC PBX. An FXO interface card could have been installed into the Asterisk, but a dedicated external device was chosen as a measure to optimize audio quality. Fortunately, the NEC PBX provides "disconnect supervision" via a momentary break in loop current. The gateway was configured to respond to this. (if that hadn't been possible, the gateway would have to be configured to respond to the return of dialtone.)

In the other direction, two dialtones are provided from the VoIP side to the Nortel PBX via a Linksys two-line ATA (Analog terminal Adapter) – an FXS gateway that converts VoIP to analog, including talk battery, generating ringing, etc. WKSU has a number of phones on the PBX and this puts a couple of the VoIP numbers on phone buttons.

An Asterisk PC-based PBX is installed functionally "in front" of the VX to provide a basic automatic answer and IVR (Interactive Voice Response) function. Callers are greeted with a welcome message and a choice of leaving a message, going on the air, or speaking to the receptionist. When a caller chooses the option "go on the air," the call is passed to the VX, where it may either be directly answered on-air or be fielded by a producer. This IVR function is created through a web GUI for Asterisk called 'FreePBX'

Calls are routed from Asterisk to the VX via SIP/VoIP over the LAN. The Asterisk is configured to provide a SIP extension for each line that connects to the VX. (SIP trunks could have been used, but extensions are more capable - for example, they can pass Caller ID.


The Asterisk PC is equipped with three Ethernet ports. One is connected to the LAN and normally used for all input and output. Another is directly connected to the networks that deliver VoIP calls as a backup. pfsense, a software router, is installed on the machine to perform the routing to select the active VoIP path and provide the automatic backup.

The VX Producer application is used for call screening and communication between the producer and air talent.


Two Cisco 2960G Ethernet switches provide the networking. One is on the Livewire (LAN) side of the VX and the other is on the VoIP (WAN) side.



Incoming Call flow to VX via Asterisk Open Source PBX

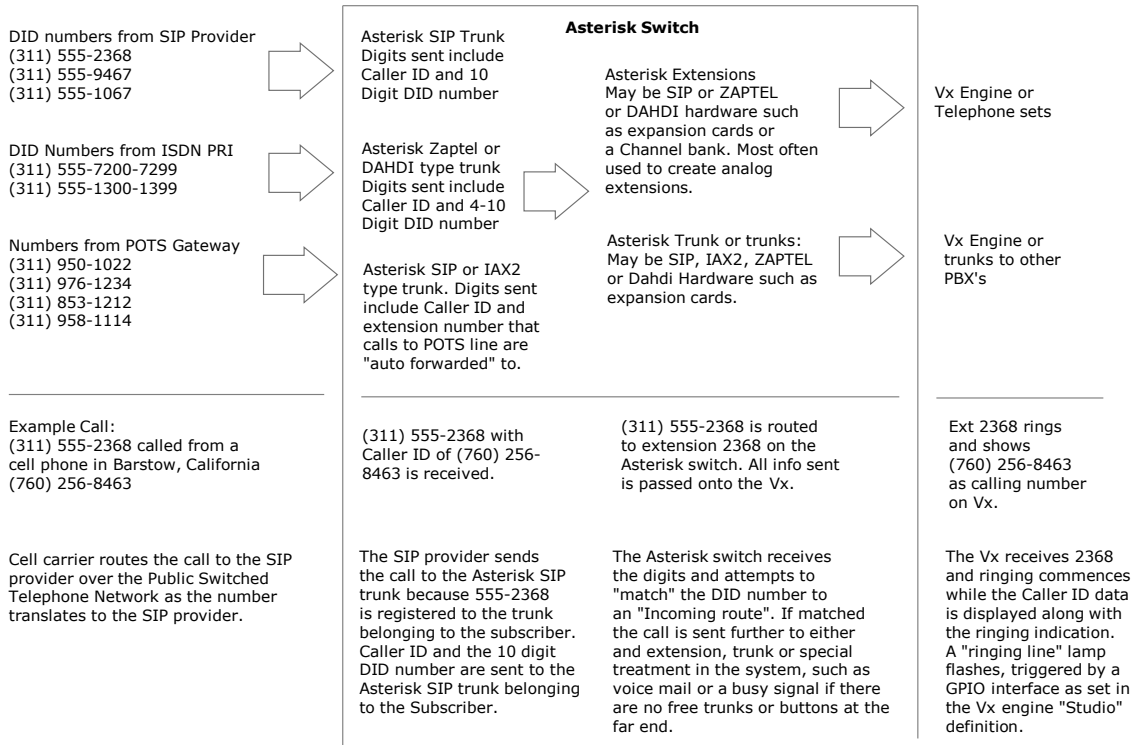

Incoming Call flow to VX via Asterisk Open Source PBX

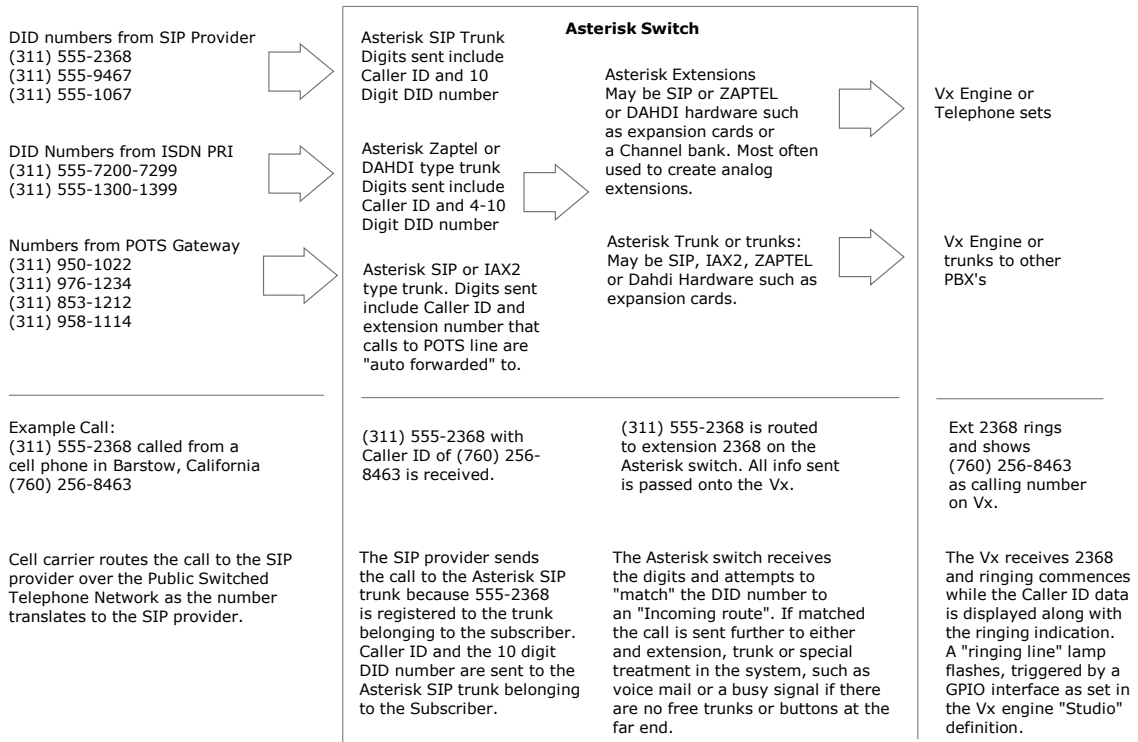



# A1 Warranty

## Telos VX LIMITED WARRANTY

This Warranty covers "the Products," which are defined as the various audio equipment, parts, software and accessories manufactured, sold and/or distributed by TLS Corp.,d/b/a Telos Systems (hereinafter "Telos Systems").

With the exception of software-only items, the Products are warranted to be free from defects in material and workmanship for a period of two years from the date of receipt by the end-user. Software-only items are warranted to be free from defects in material and workmanship for a period of 90 days from the date of receipt by the end-user.

This warranty is void if the Product is subject to Acts of God, including (without limitation) lightning; improper installation or misuse, including (without limitation) the failure to use telephone and power line surge protection devices; accident; neglect or damage.

EXCEPT FOR THE ABOVE-STATED WARRANTY, TELOS SYSTEMS MAKES NO WARRANTIES, EXPRESS OR IMPLIED (INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE).

In no event will Telos Systems, its employees, agents or authorized dealers be liable for incidental or consequential damages, or for loss, damage, or expense directly or indirectly arising from the use of any Product or the inability to use any Product either separately or in combination with other equipment or materials, or from any other cause.

In order to invoke this Warranty, notice of a warranty claim must be received by Telos Systems within the above-stated warranty period and warranty coverage must be authorized by Telos Systems. If Telos Systems authorizes the performance of warranty service, the defective Product must be delivered, shipping prepaid, to: Telos Systems, 1241 Superior Ave., Cleveland, Ohio 44114.

Telos Systems at its option will either repair or replace the Product and such action shall be the full extent of Telos Systems' obligation under this Warranty. After the Product is repaired or replaced, Telos Systems will return it to the party that sent the Product and Telos Systems will pay for the cost of shipping.

Telos Systems' authorized dealers are not authorized to assume for Telos Systems any additional obligations or liabilities in connection with the dealers' sale of the Products.